Important safety instructions

▲ CRITICAL CLEANING **INSTRUCTIONS**

Do not clean the appliance by spraying water directly onto it. Do not use benzene, thinner, or alcohol to clean the appliance.

- This may result in discoloration, deformation, damage, electric shock, or fire. Before cleaning or performing maintenance, unplug the appliance from the wall socket and remove food waste from the door and cooking compartment.
- Falling to do so may result in electric shock or fire.

 
Take care not to hurt yourself when cleaning the appliance inside and outside.

- You may hurt yourself on the sharp edges of the appliance.
- Do not clean the appliance with a steam cleaner.
- This may result in corrosion.

Keep the inside of the oven clean. Food particles or spattered oils stuck to the oven walls or floor can cause paint damage and reduce the efficiency of the oven.

INSTALLING YOUR MICROWAVE **OVEN**

Place the oven on a flat level surface 33.5 inches (85 cm) above the floor. The surface should be strong enough to safety bear the weight of the oven.



- 1. When you install your oven, make sun there is adequate ventilation for your oven by leaving at least 4 inches (10 cm) of space behind and on the sides (the oven and 8 Inches (20 cm) of spara
- 2. Remove all packing materials inside the
- Install the roller and turntable. Check that the turntable rotates freely. (Turntable type model only. See page 12.)
- 4. This microwave oven must be position: so that the plug is accessible.

(A) NOTE

 
A trim kit is available for select models (MS19M8020TG and MS19M8000AS). The trim kit allows you install this microwave in a cabinet or any other built-in application. For complete installation instructions, see the trim kit installation manual.

SAVE THESE INSTRUCTIONS

SAVE THESE INSTRUCTIONS

Installation

STEP 1



CUTOUT DIMENSIONS

Height	16 3/4" ± 1/16"
Width	25 1/2" ± 1/16"
Depth	21 1/2" ± 1/16"

TRIM DIMENSIONS

Height	20 1/16" ± 1/64"
Width	29 3/4" ± 1/64"
Depth	1 1/4" ± 1/64"

TRIM WEIGHT

Net Weight	1	13.23 lb

M WARNING

To avoid risk of electrical shock, personal injury, or death:


- Before drilling into the wall, note where electrical outlets are and where electrical wire might be concealed behind the wall. YOU COULD GET AN ELECTRICAL SHOCK if you contact electrical wire with the drill bit.
- Locate and disconnect the power to any electrical circults that could be affected by installing this oven.

IF YOU DO NOT DISCONNECT THE POWER, YOU COULD GET AN ELECTRICAL SHOCK.


MARNING

To avoid personal injury, wear gloves when handling the metal parts. Parts are sharp and can cause cuts and abrasions.

STEP 2

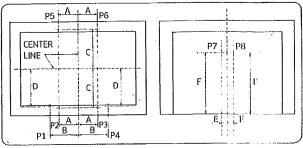

- A:5 1/8" (130 mm)
- B: 67/8" (175 mm)
- C: 9 3/8" (238.5 mm)
- D; 8 23/32" (221.3 mm)
- E: 7/8" (23 mm)
- F: 16 1/8" (409.5 mm)

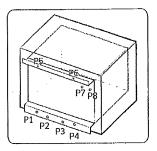

- Folding the underline of Template and match with the cabinet edge line, mark 6holes at bottom. (P1,2,3,4,7,8)
- Folding the topline of Template and match with the cabinet edge line, mark 2holes at top. (P5,6)
- 3. Then drill a pilot hole at the 8positions using 7/64" or #35 drill bit.