

PWT BLK 14 LOT 128

PWDR ROOM + EDSUITE



86513

see what Delta can do*

Model/Modelo/Modèle
553LF ▲ & 753LF ▲
Series/Series/Seria
Vero®

SINGLE HANDLE BATHROOM
CENTERSET FAUCETS

LLAVES MONOCONTROL DE
MONTURA DE CENTRO PARA
LAVAMANOS

ROBINETS À ENTRAXE COURT À
UNE POIGNÉE POUR LA CUISINE

Write purchased model number here.

Escriba aquí el número del modelo comprado.
Inscrivez le numéro de modèle ici.

▲ Specify Finish/Especifique el Acabado/Précisez le Fini

Register Online
Registrese en línea
S'enregistrer en ligne
www.deltafaucet.com/registre

To reference replacement parts and access additional technical documents and product info, visit www.deltafaucet.com

Para referencia sobre las piezas de repuesto y acceder a documentos técnicos adicionales e información del producto, visite www.deltafaucet.com

Pour obtenir la référence des pièces de rechange ainsi que pour avoir accès à d'autres documents techniques et renseignements sur le produit, allez à www.deltafaucet.com



1-800-345-DELTA (3358)
customerservice@deltafaucet.com

Read all instructions prior to installation.

CAUTION

Failure to read these instructions prior to installation may result in personal injury, property damage, or product failure. Manufacturer assumes no responsibility for product failure due to improper installation.

Lea todas las instrucciones antes de hacer la instalación.

ADVERTENCIA

El no leer estas instrucciones de instalación puede resultar en lesiones personales, daños a la propiedad, o falla en el funcionamiento del producto. El fabricante no asume ninguna responsabilidad por la falla del producto debido a una instalación incorrecta.

Veillez lire toutes les instructions avant l'installation.

 
AVERTISSEMENT

L'omission de lire les présentes instructions avant l'installation peut entraîner des blessures, des dommages matériels ou le bts du produit. Le fabricant se dégage de toute responsabilité à l'égard d'un bts du produit causé par une mauvaise installation.

You may need:

Usted puede necesitar:


Articles dont vous pouvez avoir besoin :



07/06/2020

1

86513 Rev. E

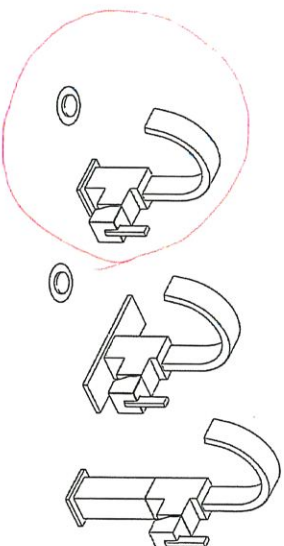

Att

EP

Cleaning and Care


Care should be given to the cleaning of this product. Although its finish is extremely durable, it can be damaged by harsh abrasives or polish. To clean, simply wipe gently with a damp cloth and blot dry with a soft towel.

Limpieza y Cuidado de su Llave

Tenga cuidado al limpiar este producto. Aunque su acabado es sumamente durable, puede ser afectado por agentes de limpieza o para pulir abrasivos. Para limpiar su llave, simplemente frotela con un trapo húmedo y luego séquela con una toalla suave.

Instructions de nettoyage

Il faut le nettoyer avec soin. Même si son fini est extrêmement durable, il peut être abîmé par des produits fortement abrasifs ou des produits de polissage. Il faut simplement le frotter doucement avec un chiffon humide et le sécher à l'aide d'un chiffon doux.

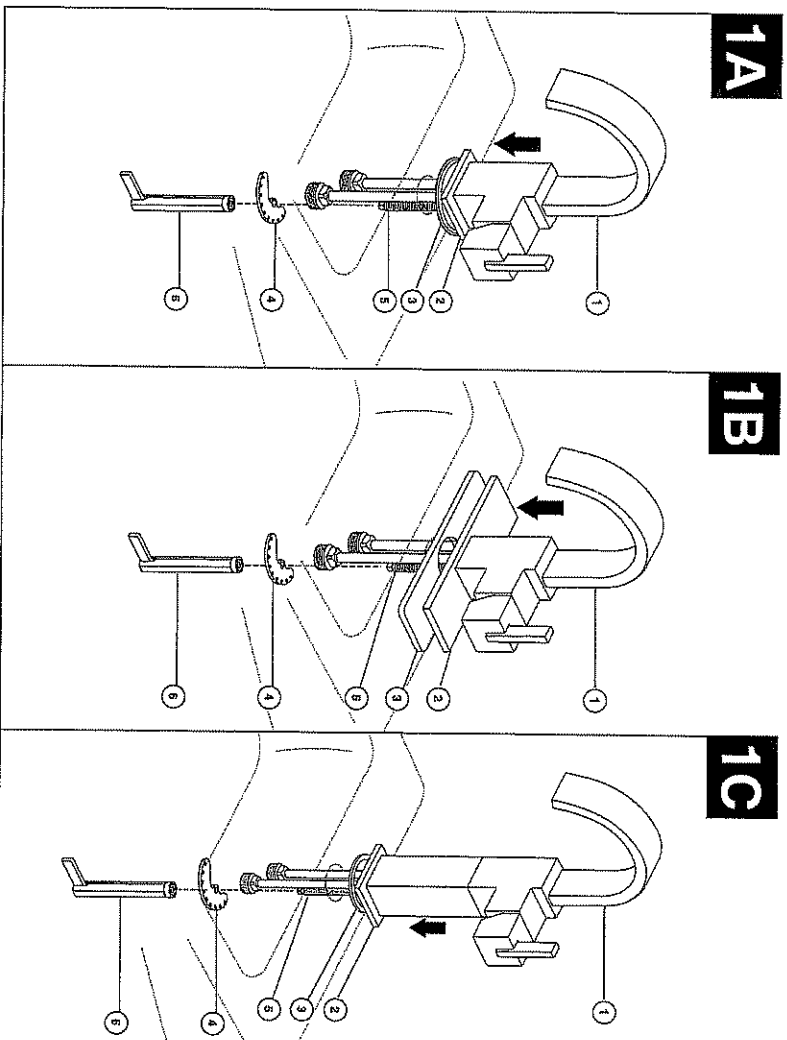

Faucet Installation

Position faucet (1) with single or three hole escutcheon (2) (not supplied) and baseplate or gasket (3) on sink. Option: If surface of sink is uneven, use plate metal bracket (4) over mounting stud (5) under sink. Secure with mounting nut / wrench (6).


Instalación de la Llave de Agua / Grifo

Cobija la llave de agua (1) con la chapa de un agujero o de tres agujeros (2) (no incluidas) y el soporte de metal (3) en el lavamanos. Opción: Si la superficie está desnivelada, use silicona por debajo de la chapa base. Coloque el soporte de metal (4) sobre la tuerca de instalación (5) por debajo del lavamanos. Fije con la tuerca de instalación/llave de tuercas (6).

Installation du robinet

Placez le robinet (1) avec une plaque de filillon pour un trou ou trois trous (2) (non fournis) et la plaque de base (3) sur l'évier. Facultatif : si la surface de l'évier est inégale, appliquez du composé d'étanchéité à la silicone sous la plaque de base. Placez le support en métal (4) sur le goujon de montage (5) sous l'appareil sanitaire. Fixez le robinet à l'aide de l'érou de montage et la clé (6).

2

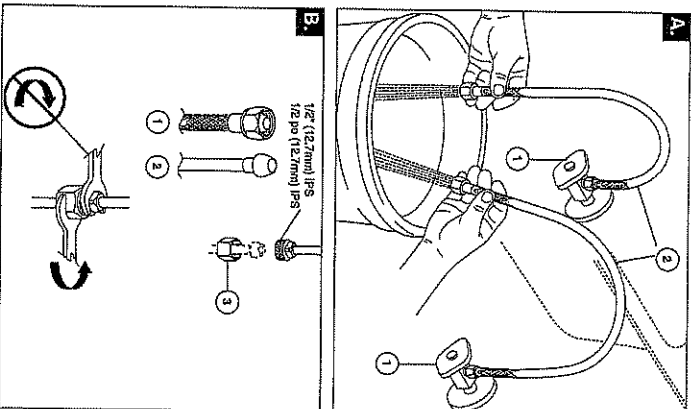

Supply Line Connections

- A.** Make connections to water supplies (1). Use the recommended connectors (2) (not supplied). see step 2B. Turn on hot and cold water supplies and flush water lines into a container for one minute. Important: This flushes away any debris that could cause damage to internal parts.
- B.** Make connections to water lines. Use 1/2" IPS faucet connections (1), or use coupling nuts (3) (not supplied) with 3/8" O.D. half-rose fitters (2). Use two wrenches when tightening. Do not over-tighten. Note: Be careful when bending the copper tubing- kinked tubes will void the warranty.


Conexiones por alas Lines de Suministro

- A.** Haga las conexiones a las líneas de agua (1). Use conexiones (2) de llaves de agua (no incluidas), paso 2B. Abra los suministros de agua caliente y fría y deje correr el agua por las tuberías hasta un recipiente por un minuto. Importante: Esto limpia cualquier residuo que pudiera causar daño a las partes internas.
- B.** Haga las conexiones a las líneas de agua. Use conexiones de llaves de agua / gireta de 1/2" IPS (1), o use tuercas de acoplamiento (3) (no incluidas) con espigas de nariz esférica de D.E. de 3/8" (2). Use dos llaves de tuercas cuando apriete. No apriete demasiado. Nota: Tenga cuidado cuando doble los tubos de cobre- tubos torcidos anularán la garantía.

Branchement des conduites d'arrivée d'eau

- A.** Raccordez le robinet aux conduites d'eau (1). Utilisez des connecteurs (2) (non fournis), l'étape 2B. Ouvrez les robinets d'arrivée d'eau chaude et d'eau froide à fond et laissez l'eau s'écouler une minute pour évacuer les corps étrangers qui pourraient abîmer les composants internes.
- B.** Raccordez le robinet aux conduites d'eau. Utilisez des raccords 1/2 po IPS (1), ou des écrous de raccordement (3) (non fournis) avec des tubes-raccords 3/8 po D.E. à joint hémisphérique (2). Utilisez deux clés pour serrer les raccords. Prenez garde de trop serrer. Note - Prenez garde de pincer les tubes de cuivre en les pliant. La garantie devient nulle et sans effet si les tubes ont été pincés.

3

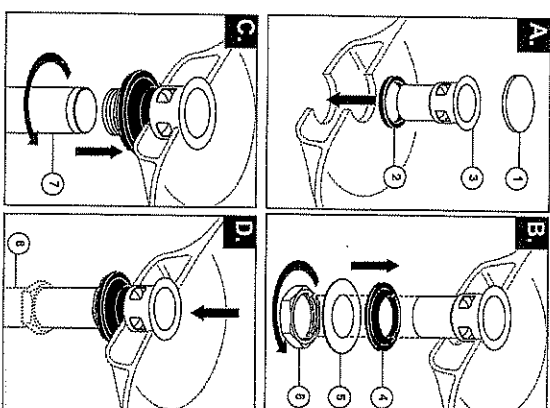

Pop-Up Installation

- A.** Remove cap (1). Install gasket (2) over stopper/flushing assembly (3). Slide assembly through drain hole.
- B.** Install gasket (4), washer (5) and nut (6). Make sure gasket is properly seated, then securely tighten nut (6). Do not over-tighten.
- C.** Screw on tail (7) and hand-tighten.
- D.** Connect assembly to drain (8). To operate pop-up: Push down on stopper to lock down; push down again to release.

Instalación del tapón

- A.** Quite la tapa (1). Instale el empaque (2) sobre el ensamble del tapón / brida (3). Deslice el ensamble por el orificio de drenaje.
- B.** Instale el empaque (4), la arandela (5) y la tuerca (6). Asegúrese que el empaque esté colocado correctamente, entonces apriete la tuerca firmemente (6). No apriete demasiado.
- C.** Atornille la pieza de cola (7) y ajústela con la mano.
- D.** Conecte el ensamble al desagüe (8). Para operar un desagüe automático: Presione el tapón hacia abajo para bloquear, presione otra vez para soltar.

Installation du dispositif d'évacuation

- A.** Retirez la capuchon (1), placez le joint (2) la colerette du renvoi (3). Introduisez le renvoi dans l'orifice donnant sur le tuyau de vidange.
- B.** Installez le joint (4), la rondelle (5) et l'écrou (6). Assurez-vous que le joint est bien appuyé, puis serrez l'écrou solidement (6). Prenez garde de trop serrer.
- C.** Vissez la queue (7) et serrez à la vidange.
- D.** Raccordez le renvoi au tuyau de vidange (8). Mode d'emploi du renvoi mécanique: Appuyez sur la bonte pour fermer le renvoi; appuyez de nouveau sur la bonte pour ouvrir le renvoi.

4	
Check for Leaks Check all connections at arrows for leaks. Retighten if necessary, but do not overtighten.	Maintenance If faucet leaks from under handle: Remove handle and ensure bonnet nut (1) is tight. If leak persists: SHUT OFF WATER SUPPLIES. Replace valve cartridge (2) RP50265 or flow restrictor (3) RP51737. If faucet leaks from spout outlet: SHUT OFF WATER SUPPLIES. Replace valve cartridge (2) RP50265. If splash from spout outlet: SHUT OFF WATER SUPPLIES. Pull out the stream straightener (4) with a long nose piler. Clean the stream straightener then press it back into spout. Note: pull out the stream straightener slowly to avoid damage.
Examine si hay Filtraciones / Fugas Examine todas las conexiones donde señalan las flechas por si hay filtraciones de agua. Apriete de nuevo si es necesario, pero no apriete demasiado.	Mantenimiento Si la llave de agua tiene una filtración desde la parte de abajo de la manija: Quite la manija y asegúrese que la tuerca de bonete / capuchón (1) está apretada. Si la filtración persiste: CIERRE LOS SUMINISTROS DE AGUA. Cambie el cartucho de la válvula (2) RP50265 o el restrictor de flujo (3) RP51737. Si la llave de agua tiene filtración desde la salida del surtidor: CIERRE LOS SUMINISTROS DE AGUA. Cambie el cartucho de la válvula (2) RP50265. En caso de salpicaduras desde la salida del surtidor: CIERRE EL SUMINISTRO DE AGUA. Retire el enderezador de chorro (4) con un alicata de punta larga. Limpie el enderezador de chorro, luego presione el mismo en su lugar en el surtidor de nuevo. Nota: Retire el enderezador de chorro despacio para evitar daños.
Vérifier l'étanchéité Vérifiez l'étanchéité de tous les raccords identifiés par une flèche. Resserrez les raccords au besoin, mais prenez garde de trop les serrer.	Entretien Si le robinet fuit sous la manette: Enlevez la manette et assurez-vous que l'écrou du chapeau (1) est bien serré. Si la fuite persiste : INTERROMPEZ L'ALIMENTATION EN EAU. Remplacez la cartouche (2) RP50265 ou restricteur d'écoulement (3) RP51737. Si le robinet fuit par le bec : INTERROMPEZ L'ALIMENTATION EN EAU. Remplacez la cartouche (2) RP50265. Si de l'eau jaillit par le bec : COUPEZ L'ALIMENTATION D'EAU. Retirez le jet (4) avec une pince à bec long. Nettoyer le jet, puis enfoncez-le à sa place dans le bec. Remarque : Retirez le jet lentement pour éviter tout dommage.

are restricted to the original manufacturer in the form of labels in marked and unmarked areas and points (other than electrical parts and ballistics) and fixtures of Dollar Furniture purchased from authorized Dollar stores and divisions. As points of sale for the original manufacturer, the stores and divisions are required to maintain the original manufacturer's identification and to ensure that the original manufacturer's identification is not removed or altered. The stores and divisions are required to maintain the original manufacturer's identification and to ensure that the original manufacturer's identification is not removed or altered.

[illegible][illegible]

El primer y más importante es el desarrollo de los gráficos Delta Faucet® con

Alfa Romeo Company
Via S. Pietro 10
40138 Bologna, Italy
Tel: +39 51 566111
Fax: +39 51 566110
E-mail: info@alfa.com
Web: www.alfa.com

Alfa Romeo Financial Services
Via S. Pietro 10
40138 Bologna, Italy
Tel: +39 51 566111
Fax: +39 51 566110
E-mail: info@alfafin.com
Web: www.alfafin.com

Alfa Romeo Insurance
Via S. Pietro 10
40138 Bologna, Italy
Tel: +39 51 566111
Fax: +39 51 566110
E-mail: info@alfains.com
Web: www.alfains.com

Alfa Romeo Leasing
Via S. Pietro 10
40138 Bologna, Italy
Tel: +39 51 566111
Fax: +39 51 566110
E-mail: info@alfaleasing.com
Web: www.alfaleasing.com

Alfa Romeo Motor Insurance
Via S. Pietro 10
40138 Bologna, Italy
Tel: +39 51 566111
Fax: +39 51 566110
E-mail: info@alfamotorins.com
Web: www.alfamotorins.com

Alfa Romeo Personal Finance
Via S. Pietro 10
40138 Bologna, Italy
Tel: +39 51 566111
Fax: +39 51 566110
E-mail: info@alfapersonalfin.com
Web: www.alfapersonalfin.com

Alfa Romeo Rental
Via S. Pietro 10
40138 Bologna, Italy
Tel: +39 51 566111
Fax: +39 51 566110
E-mail: info@alfarental.com
Web: www.alfarental.com

Alfa Romeo Sales
Via S. Pietro 10
40138 Bologna, Italy
Tel: +39 51 566111
Fax: +39 51 566110
E-mail: info@alfasales.com
Web: www.alfasales.com

Alfa Romeo Service
Via S. Pietro 10
40138 Bologna, Italy
Tel: +39 51 566111
Fax: +39 51 566110
E-mail: info@alfaservice.com
Web: www.alfaservice.com

Alfa Romeo Training
Via S. Pietro 10
40138 Bologna, Italy
Tel: +39 51 566111
Fax: +39 51 566110
E-mail: info@alfatraining.com
Web: www.alfatraining.com

Alfa Romeo Transport
Via S. Pietro 10
40138 Bologna, Italy
Tel: +39 51 566111
Fax: +39 51 566110
E-mail: info@alfatransport.com
Web: www.alfatransport.com

Alfa Romeo Vehicle Finance
Via S. Pietro 10
40138 Bologna, Italy
Tel: +39 51 566111
Fax: +39 51 566110
E-mail: info@alfavehiclefin.com
Web: www.alfavehiclefin.com

Alfa Romeo Vehicle Insurance
Via S. Pietro 10
40138 Bologna, Italy
Tel: +39 51 566111
Fax: +39 51 566110
E-mail: info@alfavehicleins.com
Web: www.alfavehicleins.com

Alfa Romeo Vehicle Leasing
Via S. Pietro 10
40138 Bologna, Italy
Tel: +39 51 566111
Fax: +39 51 566110
E-mail: info@alfavehicleleasing.com
Web: www.alfavehicleleasing.com

Alfa Romeo Vehicle Rental
Via S. Pietro 10
40138 Bologna, Italy
Tel: +39 51 566111
Fax: +39 51 566110
E-mail: info@alfavehiclerental.com
Web: www.alfavehiclerental.com

Alfa Romeo Vehicle Sales
Via S. Pietro 10
40138 Bologna, Italy
Tel: +39 51 566111
Fax: +39 51 566110
E-mail: info@alfavehiclesales.com
Web: www.alfavehiclesales.com

Alfa Romeo Vehicle Service
Via S. Pietro 10
40138 Bologna, Italy
Tel: +39 51 566111
Fax: +39 51 566110
E-mail: info@alfavehicleservice.com
Web: www.alfavehicleservice.com

Alfa Romeo Vehicle Training
Via S. Pietro 10
40138 Bologna, Italy
Tel: +39 51 566111
Fax: +39 51 566110
E-mail: info@alfavehicletraining.com
Web: www.alfavehicletraining.com

Alfa Romeo Vehicle Transport
Via S. Pietro 10
40138 Bologna, Italy
Tel: +39 51 566111
Fax: +39 51 566110
E-mail: info@alfavehicletransport.com
Web: www.alfavehicletransport.com

Alfa Romeo Vehicle Finance Insurance
Via S. Pietro 10
40138 Bologna, Italy
Tel: +39 51 566111
Fax: +39 51 566110
E-mail: info@alfavehiclefinanceins.com
Web: www.alfavehiclefinanceins.com

Alfa Romeo Vehicle Leasing Insurance
Via S. Pietro 10
40138 Bologna, Italy
Tel: +39 51 566111
Fax: +39 51 566110
E-mail: info@alfavehicleleasingins.com
Web: www.alfavehicleleasingins.com

Alfa Romeo Vehicle Rental Insurance
Via S. Pietro 10
40138 Bologna, Italy
Tel: +39 51 566111
Fax: +39 51 566110
E-mail: info@alfavehiclerentalins.com
Web: www.alfavehiclerentalins.com

Alfa Romeo Vehicle Sales Insurance
Via S. Pietro 10
40138 Bologna, Italy
Tel: +39 51 566111
Fax: +39 51 566110
E-mail: info@alfavehiclesalesins.com
Web: www.alfavehiclesalesins.com

Alfa Romeo Vehicle Service Insurance
Via S. Pietro 10
40138 Bologna, Italy
Tel: +39 51 566111
Fax: +39 51 566110
E-mail: info@alfavehicleserviceins.com
Web: www.alfavehicleserviceins.com

Alfa Romeo Vehicle Training Insurance
Via S. Pietro 10
40138 Bologna, Italy
Tel: +39 51 566111
Fax: +39 51 566110
E-mail: info@alfavehicletrainingins.com
Web: www.alfavehicletrainingins.com

Alfa Romeo Vehicle Transport Insurance
Via S. Pietro 10
40138 Bologna, Italy
Tel: +39 51 566111
Fax: +39 51 566110
E-mail: info@alfavehicletransportins.com
Web: www.alfavehicletransportins.com

Alfa Romeo Vehicle Finance Insurance Services
Via S. Pietro 10
40138 Bologna, Italy
Tel: +39 51 566111
Fax: +39 51 566110
E-mail: info@alfavehiclefinanceinservices.com
Web: www.alfavehiclefinanceinservices.com

Alfa Romeo Vehicle Leasing Insurance Services
Via S. Pietro 10
40138 Bologna, Italy
Tel: +39 51 566111
Fax: +39 51 566110
E-mail: info@alfavehicleleasinginservices.com
Web: www.alfavehicleleasinginservices.com

Alfa Romeo Vehicle Rental Insurance Services
Via S. Pietro 10
40138 Bologna, Italy
Tel: +39 51 566111
Fax: +39 51 566110
E-mail: info@alfavehiclerentalinservices.com
Web: www.alfavehiclerentalinservices.com

Alfa Romeo Vehicle Sales Insurance Services
Via S. Pietro 10
40138 Bologna, Italy
Tel: +39 51 566111
Fax: +39 51 566110
E-mail: info@alfavehiclesalesinservices.com
Web: www.alfavehiclesalesinservices.com

Alfa Romeo Vehicle Service Insurance Services
Via S. Pietro 10
40138 Bologna, Italy
Tel: +39 51 566111
Fax: +39 51 566110
E-mail: info@alfavehicleserviceinservices.com
Web: www.alfavehicleserviceinservices.com

Alfa Romeo Vehicle Training Insurance Services
Via S. Pietro 10
40138 Bologna, Italy
Tel: +39 51 566111
Fax: +39 51 566110
E-mail: info@alfavehicletraininginservices.com
Web:

[illegible][illegible]

Los vendedores de estas sustancias están privilegiados como los defraudadores de impuestos y los vicios de fabricación por una granada que así continúa a

[illegible][illegible]

elles ont été réalisées. La présente grande œuvre propose des outils pratiques nouveaux pour la loi. Vous pouvez ainsi évaluer dans quel état se trouve votre entreprise, quels sont les points de vigilance à surveiller, quels sont les risques encourus, et comment les éviter.

PWT B&K 14 LOT 128

LEVANTE 2

UNDER CABINET RANGE HOOD

 **FABER**
AIR MATTERS

A NEW CHOICE IN VALUE UNDER CABINET HOODS. A new traditional under cabinet range hood that offers superior performance and styling but will not exceed your budget. With the ability to duct outside or recirculate through grids located on top of the hood, the Levante 2 delivers the features you need. Also available in the push button version, the Levante 1.



AVAILABLE MODELS

Model #	Size / Color	Motor Class (CFM)	Sound Levels (sones)
LEV730SS400-B	30 Stainless	400 CFM	3.9 - 7.3 sones
LEV736SS400-B	36 Stainless	400 CFM	3.9 - 7.3 sones

KEY FEATURES



Back-ill electronic controls
Back-ill electronic controls with a white LED light to indicate the current speed and two level lighting



Ductless vent grate
Attractive grids sit on top of the hood for recirculation back into the kitchen if not venting outside



Remote Control (optional)
Control all features of the hood from the convenience of a wireless remote control (sold separately)



Stainless Mesh grease filters
Dishwasher safe stainless covered mesh grease filters capture grease and allow for easy clean up in the dishwasher

AT EP

LEVANTE 2 UNDER CABINET RANGE HOOD

SPECIFICATIONS

depth / height	20" d / 5 1/2" h
convertible to ductless / recirculating	yes - kit sold separately
controls	4 speed electronic w/ white led
lighting	2 x 35 (w) halogen - two level
ducting top / rear (back)	7" round (top) / 3 1/4" x 10" (top or back)
grease filters	dishwasher safe stainless mesh
10 minute intensive speed	yes
15 minute auto shut off	yes
make up air compliant *	yes - for 400 CFM code areas
ADA compliant	yes (with remote control purchase)
AC power	350 watts / 2.9 amps

PERFORMANCE

SPEED	1	2	3	BOOST
CFM	150	250	350	390
Sones	3.9	5.0	6.0	7.3

ACCESSORIES

FILTERS - Charcoal Filter Kit


High quality charcoal filter for use when recirculating the air back into the kitchen. Filters out odor and should be replaced every 6 months

REMCTRL - Remote Control

Control all features of the hood from the convenience of a wireless remote control



DIMENSIONS

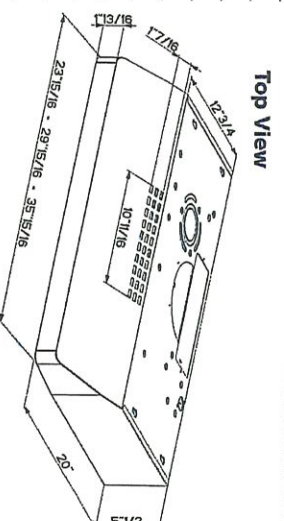


Top View



Front View

Side View

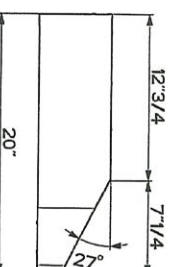


WARNING! Product specifications are subject to change without notification. Consult the installation instructions before you begin installing this range hood. * Check local make up air codes for guidelines.




PWT BLK 14 LOT 128

BSNOT BATH

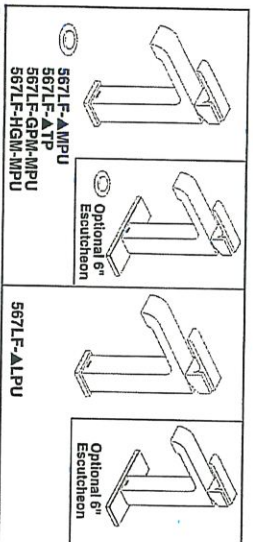

Submitted Model No.:

Specific Features:

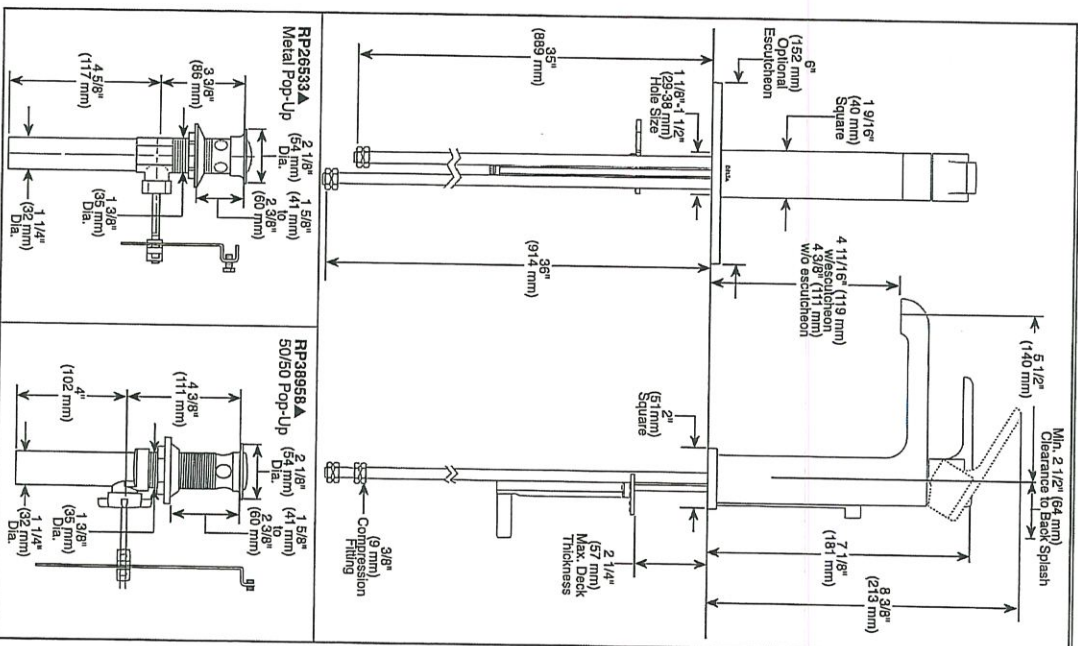

Delta reserves the right (1) to make changes in specifications and materials, and (2) to change or discontinue models, both without notice or obligation.

www.deltafaucet.com for finish options and product availability.

DSP-L-567LF-MPU Rev. H



see what Delta can do™

BATHROOM FAUCET

- Ara® Bath Collection
- Single Handle Deck Mount

STANDARD SPECIFICATIONS:

- Max. flow rate 1.2 gpm @ 60 psi, 4.5 L/min @ 414 kPa
- GPM indicates max. flow rate 1.0 gpm @ 60 psi, 3.8 L/min @ 414 kPa
- HGM indicates max. flow rate 0.5 gpm @ 60 psi, 1.9 L/min @ 414 kPa
- One or three hole mount (escutcheon optional, included)
- Ceramic cartridge
- 3/8" O.D. straight, staggered PEX supply lines
- Red/blue indicator markings
- Models with suffix "MPU" have metal drain with pop-up type fitting with plated hange and stopper
- Models with suffix "LPU" are less pop-up
- Models with suffix "TP" have 50/50 pop-up type fitting with plated hange and stopper
- Solid brass fabricated spout

WARRANTY

- Parts and Finish - Lifetime limited warranty, or for commercial purchases, 10 years for multi-family residential (apartments and condominiums) and 5 years for all other commercial uses, in each case from the date of purchase.
- Electronic Parts and Batteries (if applicable) - 5 years from the date of purchase, or for commercial purchases, 1 year from the date of purchase. No warranty is provided on batteries.



COMPLIES WITH:

- ASME A112.18.1 / CSA B125.1
- ASME A112.18.2 / CSA B125.2
- Indicates compliance to ICC/ANSI A117.1 - Valve control only
- EPA WaterSense® - applies to 567LF-MPU, 567LF-TP
- Verified compliant with .25% weighted average Pb content regulations.

Delta Faucet Company

35 E. 11th Street, Indianapolis, IN 46280
350 South Hodgewick Road, St. Thomas, ON N5P 4L1
© 2020 Delta Faucet Company



2171



 With Optional Escutcheon RP64070 ▲





see what Delta can do—

■ **Trinsic® Collection**

- Single Handle Deck Mount
- 2-Function Pull-Down Sprayer

Submitted Model No.:
Specific Features:

Specific Features:

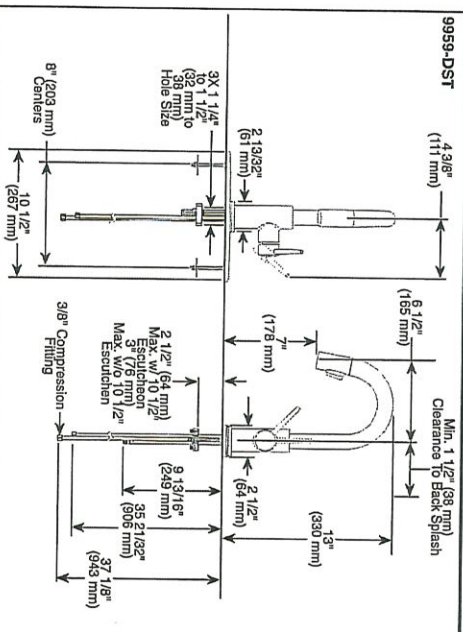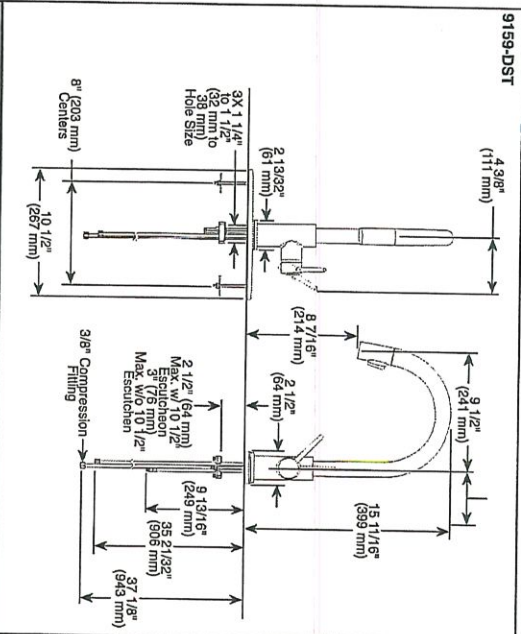

▲ Designate proper finish suffix

Delta reserves the right: (1) to make changes in specifications and materials, and (2) to change or discontinue models, both without notice or obligation. Dimensions are for reference only. See current full-line price book or www.deltatrace.com for finish options and product availability.

COMPLIES WITH:

- ASME A112.18.1 / CSA B125.1
- ASME A112.18.2

- ASME A112.18.6

 Indicates compliance to ICC/ANSI A117.1

- Verified compliant with .25% weighted average Pb content regulations.

WARRANTY

STANDARD SPECIFICATIONS:

- Maximum 1.8 gpm @ 60 psi, 6.8 L/min @ 414 kPa
- One or three hole mount (escutcheon optional, not included)

- Spout rotates 360°
- Control mechanism shall be full-motion valve cartridge
- Two-function wand; Aerated stream or spray
- Red/blue indicator markings
- Dual integral check valves in sprayer
- Quick connect hoses

from the date of purchase.

- Electronic Parts and Batteries (if applicable) - 5 years from the date of purchase; or for commercial purchasers, 1 year from the date of purchase. No warranty is provided on batteries.

Delta Faucet Company

55 E. 111th Street, Indianapolis, IN 46280
350 South Edgeware Road, St. Thomas, ON N5P 4L1
© 2019 Delta Faucet Company

A11

EP