


# PRODUCT OVERVIEW

## Product Features

### Exterior & Interior

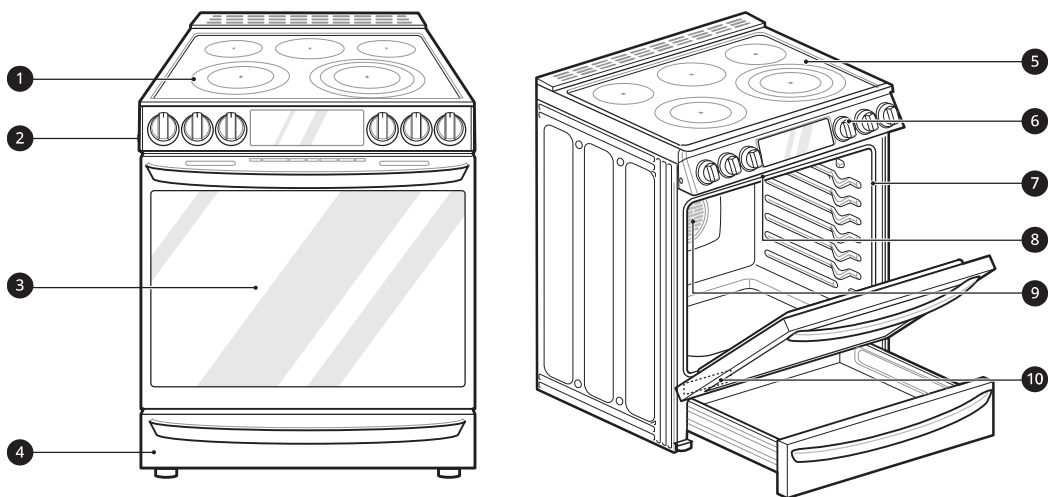

- 1 Cooktop
- 2 Cooktop controller
- 3 Oven door
- 4 Storage drawer (LSEL6337\* : handle, LSEL6335\* : no handle)
- 5 Glass-ceramic cooktop
- 6 Oven mode knob
- 7 Gasket
- 8 Broil heater
- 9 Convection heater
- 10 Model & serial number plate

## Product Specifications

The appearance and specifications listed in this manual may vary due to constant product improvements.


Oven Range Models	LSEL6337*, LSEL6335*
Description	Electric Slide In Oven Range
Electrical requirements	LSEL6337* : 13.6 kW 120/240 VAC or 10.2 kW 120/208 VAC LSEL6335* : 13.0 kW 120/240 VAC or 9.8 kW 120/208 VAC
Exterior Dimensions	30" (W) x 36 1/2" (H) x 26 7/8" (D) (D with door closed) 76.2 cm (W) x 92.7 cm (H) x 68.3 cm (D) (D with door closed)
Height to cooking surface	36" (91.3 cm)
Net weight	162 lb (73.5 kg)

Oven Range Models	LSEL6337*, LSEL6335*
Total capacity	6.3 cu. ft.

Accessories

without prior notice for product improvement purposes.

Included Accessories

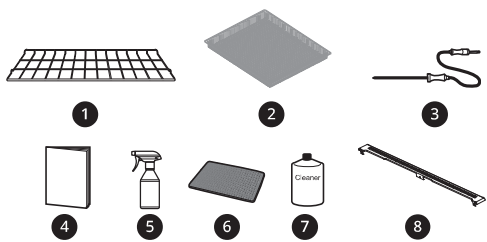

- 1 Heavy duty rack (2ea)
- 2 Air Fry Tray (1ea)
- 3 Meat probe (1ea)
  - LSEL6337\* model only
- 4 Owner’s manual (1ea)
- 5 Spray bottle (1ea)
- 6 Non-scratch scouring pad (1ea)
- 7 Cooktop cleaner (1ea)
- 8 Rear filler (1ea)

Optional Accessories



- 1 Grid
- 2 Broiler pan

NOTE

- Contact LG Customer Service at 1-800-243-0000 (1-888-542-2623 in Canada) if any accessories are missing.
- For your safety and for extended product life, only use authorized components.
- The manufacturer is not responsible for product malfunction or accidents caused by the use of separately purchased, unauthorized components or parts.
- The images in this guide may be different from the actual components and accessories, which are subject to change by the manufacturer