

Range Conventional – 30" Width

Refrigerator – 36" W x 72" H (Approximate - height may change due to bulkheads)

Dishwasher – 24" Width

6" Exhaust Vent above stove

OTHER _____

***Check all that apply - NON-STANDARD APPLIANCE OPTIONS**

****MANUFACTURERS SPECIFICATIONS MUST BE ATTACHED****

Built-In Microwave with Trim Kit

Warming Drawer

סעיף 10. – **התאגדות** –

***(Gas/Electric – Cut-out Charge & Plug Required)**

Built-in Refrigerator/Sub Zero – If purchasing a side by side or French Door, the wall beside the door may be an issue if it is deeper than 24"

*Applicable charges may apply if required to drive

***Note: Refrigerator Door Swing**

Wine / Bar Fridge (electrical required)

Steam Oven / Built-In Coffee makers

Cargo Waste Bin systems

Front Load Washer & Dryer *(Specs required if installing counter above)

Stackable Washer & Dryer

If specs not received, the standard openings as determined by Zancor Homes will be provided. If rework/repair is required due to late specs received, additional costs will be applied.

Appliance Specifications are to be sent to the Zancor Décor Centre no later than

Appliance Specifications received

Date July 8/16

 
Date July 8/16

LOT 41 S



French Door Refrigerator

FPBS27777RF

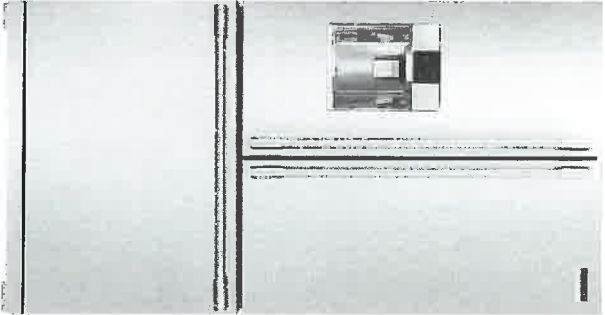

NOV 28 2016

27 Cu. Ft. Standard-Depth

Product Dimensions

Height (Including Hinges & Rollers)	69-7/8"
Width (Doors)	36"
Depth (Including Door)	33-3/8"

More Easy-To-Use Features

PureSource Ultra® II Water Filtration

Drink and cook with Pure Water. PureSource Ultra® II Water Filters remove 99.3% of lead and 99.99% of cysts from your household water.²

SpacePro™ Adjustable Crisper Bins

Optimize your space and keep food fresh with our crisper bins that adjust a variety of ways and keep produce at the ideal humidity level.

SpacePro™ Flip-Up Shelves

Adjusts to fit a variety of foods and beverages, big or small, for quick access.

SpacePro™ Freezer System

Optimize your freezer space with the PowerGlide™ Freezer Drawer and the SpacePro™ Freezer Basket with Adjustable Divider, keeping frozen foods organized and accessible.

Automatic Alerts

Alerts you if the door is left open, if the temperature rises or if the power goes out so your food stays at its optimal temperature.

SpacePro™ Full-Width Drawer

Keep a variety of foods fresh and easily accessible with our SpacePro™ Drawer

SpacePro™ Door Bins

Access fresh food from our gallon-size door bins quickly.

PowerGlide™ Freezer Drawer

Quick access to frozen foods with our PowerGlide™ Freezer Drawer that glides out smoothly and fully extends.

Sabbath Mode (Star-K® Certified)

Available in:



Stainless (FF)

Signature Features



PureAir Ultra® Filtration System
Fresh air offers great taste. PureAir Ultra® Filtration removes up to 7 times more odour than baking soda to keep ingredients tasting fresh.



SpacePro™ Slide-Under Shelf
Slides under to fit a variety of tall foods and beverages to optimize your space.



SpacePro™ Shelving System
Offers quick access to fresh ingredients with organizational solutions designed for space optimization like SpacePro™ Slide-Under & Flip-Up Shelves and SpacePro™ Adjustable Crisper Bins.



Smudge-Proof™
Resists fingerprints and cleans easily.


¹Based on a 24-hour closed door test of certain common odours in the fresh food compartment of a 27 Cu. Ft. refrigerator.
²Tested and certified by NSF International. See performance data sheet for individual contaminants and reduction performance.

FRIGIDAIRE
P R O F E S S I O N A L .

French Door Refrigerator
FPBS2777RF 27 Cu. Ft. Standard-Depth

Features	
Door Design	Square Doors
Door Handle Design	Stainless Steel
Cabinet Finish	Grey
Door Stops / Door Closers	Yes / Yes
Door Hinge Covers	Hidden
Rollers - Front / Rear	Adjustable / Yes
Energy Saver Plus Technology	Yes
Water Filter Location	Top-Right Fresh Food Section
Sound Package	Quiet Design
Dispenser	
Controls	PrecisionPro™
Dispenser Design	Flush Single-Paddle
Number of Dispenser Buttons	16
Crushed Ice / Cube Ice / Chilled Water	Yes / Yes / Yes
Ice Option / Freeze Option	No / PowerPlus™ Freeze
Display On / Off Option	
Lock / Light	No / Yes
Temp / Door Aler / Power Failure Alerts	Yes / Yes / Yes
Water Filter Change Indicator Light	Yes
Air Filter Change Indicator Light	Yes
Refrigerator Features	
Lighting	PowerBright™ LED
Water Filter Type	PureSource Ultra® II
Air Filter Type	PureAir Ultra®
Quarter-Width Fixed Shelves	1
Half-Width Fixed Shelves	1
Quarter-Width Sliding Shelves	2 SpacePro™
Half-Width Sliding Shelves	Yes
Canister Shelves	
SpacePro™ Full-Width Drawer	1
Hanging Wire Rack / Can Dispenser	1 Clear / 1 White SpacePro™
SpacePro™ Adjustable Crisper Drawer / Humidity Controls	2 Clear / 2
Dairy Compartment	
SpacePro™ Fixed Door Bins	1 Clear (Right Door)
2-Litre Fixed Door Bins	2 White (1 per door)
Gallon Adjustable Door Bins	1 Clear
2-Litre Adjustable Door Bins	2 Clear
Dispenser Bin	
Non-Slip Bin Liner / Bottle Retainers	3 Grey / No
Freezer Features	
PowerGlide™ Pull-Out Drawer	Yes
Sliding Full-Width Freezer Baskets	2 SpacePro™
Basket Dividers	1 (Bottom Basket)
Lighting	PowerBright™ LED
Automatic Ice Maker (2nd Ice Maker)	Yes
Certifications	
Sabbath Mode (Star-K® Certified)	Yes
Specifications	
Total Capacity (Cu Ft.)	27.8
Refrigerator Capacity (Cu Ft.)	19
Freezer Capacity (Cu Ft.)	8.7
Power Supply Connection Location	Right Bottom Rear
Water Inlet Connection Location	Left Bottom Rear
Voltage Rating	120V / 60Hz / 15A
Connected Load (kW rating) @ 120 Volts	1.02
Amps @ 120 Volts	8.5
Minimum Circuit Required (Amps)	15
Shipping Weight (Approx.)	365 Lbs

 For use on adequately wired 120V dedicated circuit having 2-wire service with a separate ground wire. Appliance must be grounded for safe operation.

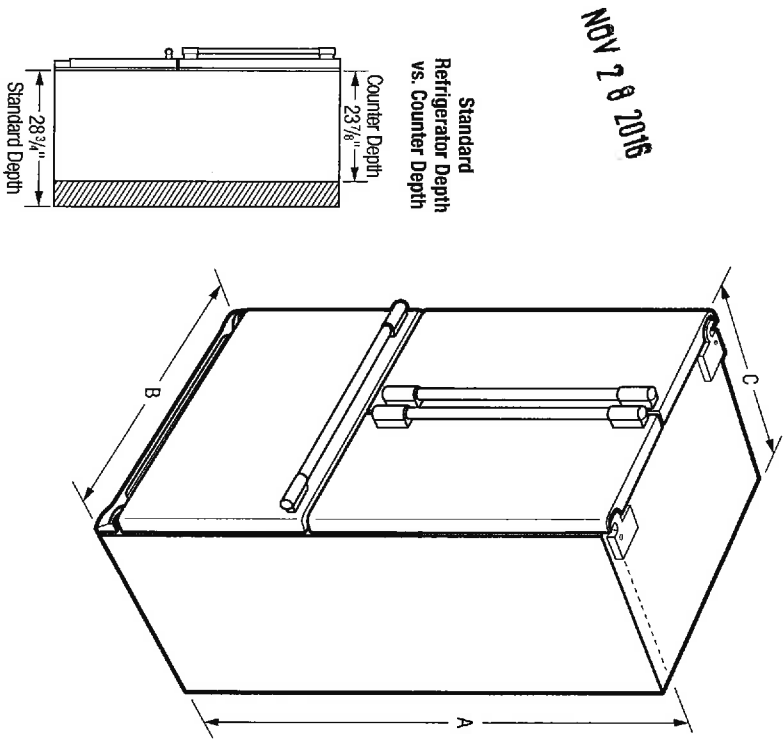

NOTE: For planning purposes only. Always consult local and national electric and plumbing codes. Refer to Product Installation Guide for detailed installation instructions on the web at frigidaire.ca



Accessories information available on the web at frigidaire.ca

11/28/2016



Microwave Ovens Countertop

Countertop NN-SE995S

MODEL & SIZE		Model Number	NN-SE995S
PANASONIC TECHNOLOGY	Type		Full-size
	Installation		Countertop or built-in
	Oven Capacity		2.2 cu. ft.
	Cooking Power		1200 W
	Turntable Diameter		420 mm
	Panasonic Inverter		Cyclonic Inverter
DESIGN	Prestige Genius Sensor		Yes
	Genius Sensor		Genius®
	Color		Stainless Steel
	Control Panel		Electrostatic Glass-touch + Slider with Backlight (white)
STYLE	Display Panel		New 6 Digit LED / Blue
	Door Window		Smoked Glass
	Door Release		Push Open
	Oven Interior		Paint White
PERFORMANCE	Multi-stage Cooking		3 stage
	Sensor Cook		Yes
PROGRAMMABLE FEATURES	Sensor Reheat		Yes
	Auto Cook/Reheat		Yes
	More / Less Control		Yes
	Inverter Turbo Defrost		Yes
	Keep Warm Button		Yes

NOV 28 2016

11/28/2016


		Popeorn Button	Yes
SPECIFICATIONS	Quick Minute	Yes	
	Cavity Dimensions (W x D x H)	Approx. 469 x 470 x 278 mm 17.6 x 18.5 x 10.7 inch	
	Unit Dimensions (W x D x H)	606 x 493 x 356 mm 23.9 x 19.4 x 14 inch	
	Carton Dimensions (W x D x H)	675 x 540 x 420 mm	
ACCESSORIES	TRIM KITS		
	27" Model Number	NN-TK922S	
	30" Model Number	NN-TK932S	
	Accessory	Glass Tray	

Copyright ©Panasonic Canada Inc.

NOV 28 2016



 Panasonic®

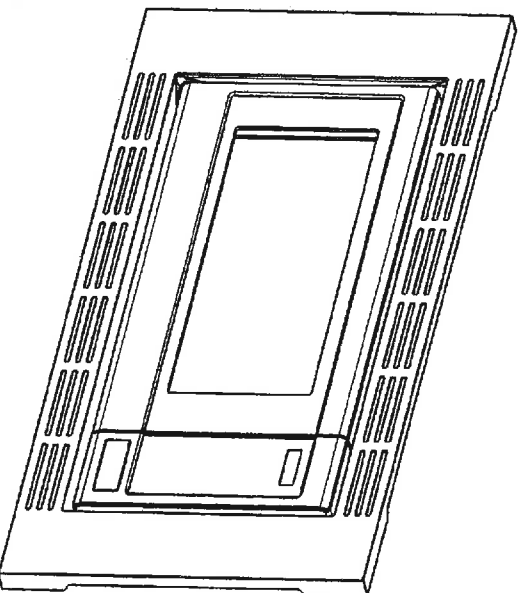

Installation Instructions

Notice d'installation

Instrucciones para la instalación



Cabinet Armoire Gabinete	Trim kit Nécessaire d'encastrement Juego de acabados
30" (762 mm) 30 po (762 mm) 30" (762 mm)	NN-TK932S NN-TK722S
27" (686 mm) 27 po (686 mm) 27" (686 mm)	NN-TK922S NN-TK722S

NOV 28 2016

Read carefully and keep these installation instructions.
Lisez attentivement et conservez cette notice d'installation.
Lea cuidadosamente y guarde este instructivo de
instalación para su referencia.

© Panasonic Appliances Microwave Oven (Shanghai) Co., Ltd. 2012



Contents

Important Safety Instructions 1-3

1. Parts List 4

2. Installation Diagram 5

3. Cabinet Diagram and Dimensions 6-9

4. Left Duct Preparation 10

5. Microwave Oven Preparation 11

6. Lower Duct Installation 12-13

7. Cabinet Preparation 14

8. Trim Kit Preparation 15

9. Microwave Oven Installation 16

10. Trim Kit/Finishing Installation 17



- Read and follow all instructions completely.

- 1. This Trim Kit is designed for use only with the Panasonic Microwave Oven listed in the table below, for installation into a cabinet.
- 2. The dimensions and ground clearance of the cabinet opening must be as indicated in Figure 1 on page 6 to 9.
- 3. For safe use of your microwave oven, do not alter or modify any part of this kit or the microwave oven.
- 4. The microwave oven must be used with a properly grounded 3-prong receptacle in compliance with the National Electrical code, as well as any applicable local regulations. Refer also to the microwave operating instructions for other safety and electrical requirements.
- 5. The microwave oven must be unplugged from the wall receptacle before attempting the installation of this kit.
- 6. Save these instructions for local inspection and relocation of the microwave oven.
- 7. Use caution so that the power cord is not pinched during installation.
- 8. The diagrams in these instructions may vary from the actual unit and is only for reference.

Trim kit	Panasonic Microwave Oven Models
NN-TK932S NN-TK922S	NN-SE9**S NN-SD9**S NN-SN9**S NN-ST9**S
NN-TK732S NN-TK722S	NN-SE7**S NN-SD7**S NN-SN7**S NN-ST7**S

NOV 2 8 2016

1. Parts List



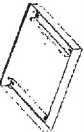





Tools Needed: Measuring tape, pencil, Phillips screwdriver, Ø 2 (5/64) mm drill

1. Liste des pièces

Outils requis: Ruban (de mesurage), crayon, tournevis Phillips, perceuse avec mèche de Ø 2 mm (5/64 po)

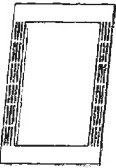
1. Lista de partes

Herramientas que se necesitan: cinta métrica, lápiz, destornillador Phillips, taladro Ø 2 (5/64) mm.

Parts Supplied	Pièces fournies	Piezas suministradas
PART/PIÈCE/PIEZA		QUANTITY/QUANTITÉ/ CANTIDAD
	Trim Frame Cadre d'encastrement Marco del acabado	1
	Left Duct Conduit du côté gauche Conducto izquierdo	1
	Base Bracket Assembly Base des supports de montage Abrazadera de montaje de la base	1
	Bracket Support Ménsula	4
	Catch Loquet Pestillo	4
	Screw Vis Tornillo	10
	Strike Gâche Tarugo	4
	Tape Bande adhésive Cinta adhesiva	2

NOV 28 2016

 2. Installation Diagram
2. Schéma d'installation
2. Diagrama de instalación

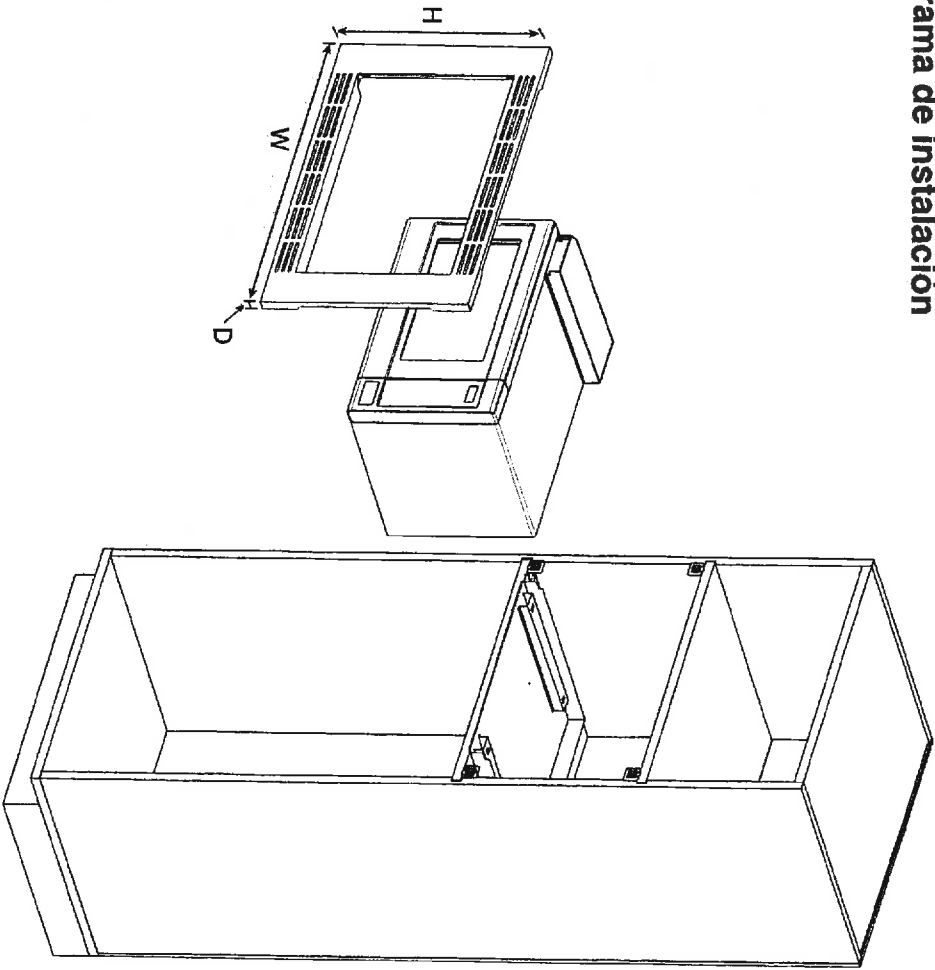

Trim Kit Dimensions				
	TK932S	TK922S	TK732S	TK722S
Width	30" (760 mm)	27" (684 mm)	30" (760 mm)	27" (684 mm)
Height	18 3/8" (472 mm)	18 9/16" (472 mm)	16 1/2" (419 mm)	16 1/2" (419 mm)
Depth (Thickness)	3/4" (20 mm)	3/4" (20 mm)	3/4" (20 mm)	3/4" (20 mm)

NOV 28 2016

Dimensions du nécessaire d'encastrement				
	TK932S	TK922S	TK732S	TK722S
Largeur	760 mm (30 po)	684 mm (27 po)	760 mm (30 po)	684 mm (27 po)
Hauteur	472 mm (18 3/8 po)	472 mm (18 9/16 po)	419 mm (16 1/2 po)	419 mm (16 1/2 po)
Profondeur (épaisseur)	20 mm (3/4 po)	20 mm (3/4 po)	20 mm (3/4 po)	20 mm (3/4 po)


Dimensiones del juego de acabados				
	TK932S	TK922S	TK732S	TK722S
Ancho	30" (760 mm)	27" (684 mm)	30" (760 mm)	27" (684 mm)
Altura	18 3/8" (472 mm)	18 9/16" (472 mm)	16 1/2" (419 mm)	16 1/2" (419 mm)
Profundidad (grosor)	3/4" (20 mm)	3/4" (20 mm)	3/4" (20 mm)	3/4" (20 mm)

3-1. Cabinet Diagram and Dimensions (For TK932S)

3-1. Schéma de l'armoire et dimensions (Pour TK932S)

3-1. Dimensiones y diagrama del gabinete (Para TK932S)

 fig 1.

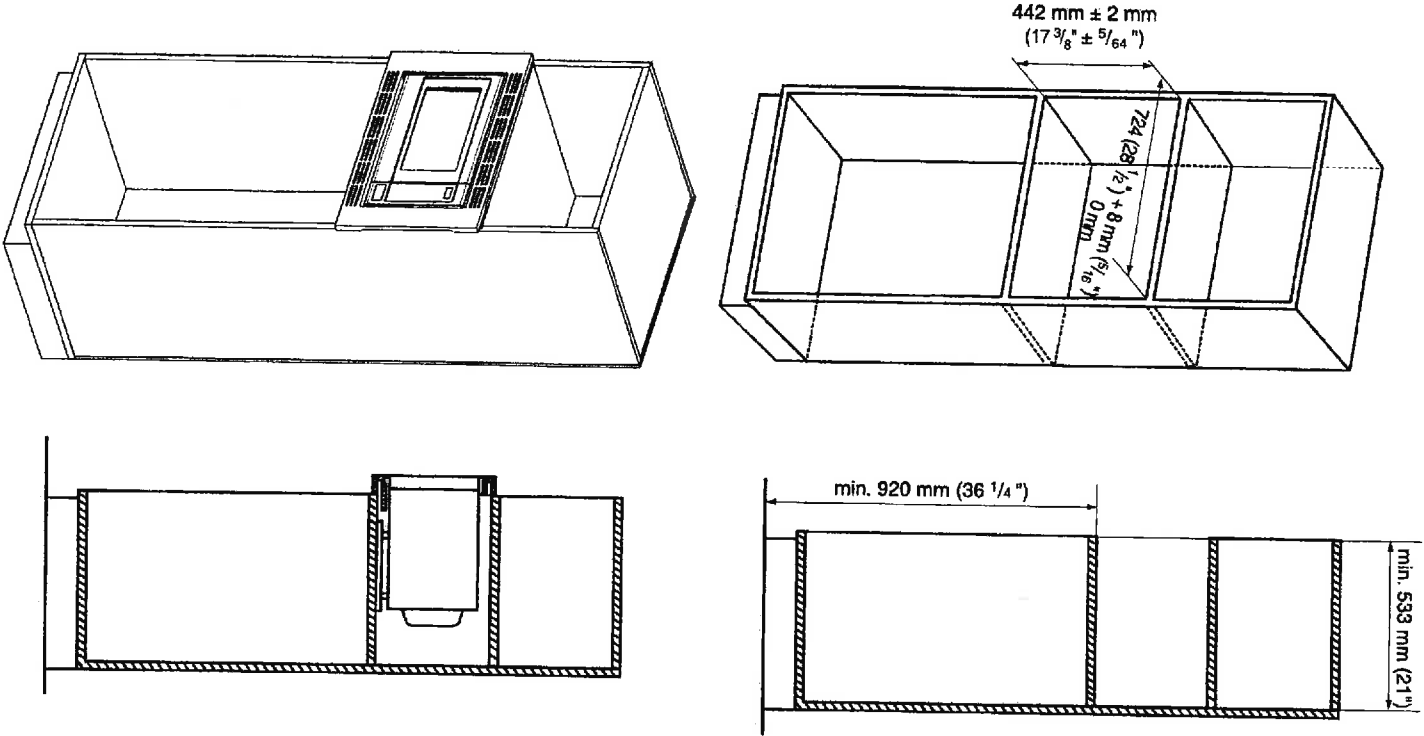

15.5" PEDESTAL INSTALLATION INSTRUCTIONS
For use only with front load washers and dryers
INSTRUCTIONS D'INSTALLATION DU PIÉDESTAL DE 15,5"
Pour utilisation avec les produits suivants seulement
laveuses et sécheuses à chargement par l'avant

Para una versión de estas instrucciones en español, visite www.whirlpool.com

Table of Contents

PEDESTAL SAFETY	1
INSTALLATION REQUIREMENTS	2
Location Requirements	2
Tools and Parts	2
UNPACKING THE PEDESTAL	3
BEFORE INSTALLING THE PEDESTAL	3
INSTALLING THE PEDESTAL	4
COMPLETE THE INSTALLATION	7

Table des matières

SÉCURITÉ DU PIÉDESTAL	9
EXIGENCES D'INSTALLATION	9
Exigences d'emplacement	9
Outillage et pièces	9
INSTRUCTIONS D'INSTALLATION	10
AVANT L'INSTALLATION DU PIÉDESTAL	11
INSTALLATION DU PIÉDESTAL	12
ACHEVER L'INSTALLATION	15

INSTALLATION NOTES

Date of purchase: _____
Date of installation: _____
Installer: _____
Model number: _____
Serial number: _____

NOTES CONCERNANT L'INSTALLATION

Date d'achat : _____
Date d'installation : _____
Installateur : _____
Numéro de modèle : _____
Numéro de série : _____

PEDESTAL SAFETY

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.
This symbol alerts you to potential hazards that can kill or hurt you and others.
All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING."
These words mean:

DANGER

You can be killed or seriously injured if you don't immediately follow instructions.

WARNING

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

INSTALLATION REQUIREMENTS

LOCATION REQUIREMENTS

⚠ WARNING



Explosion Hazard

Keep flammable materials and vapors, such as gasoline, away from dryer.

Place dryer at least 18 inches (460 mm) above the floor for a garage installation.

 
Failure to do so can result in death, explosion, or fire.

NOTE: If the washer/dryer and pedestal assembly are located in a garage, 3" (76 mm) must be added under the pedestal so that the washer/dryer is 18" (458 mm) above the garage floor.


TOOLS AND PARTS

Gather the required tools and parts before starting installation.


Tools Needed:

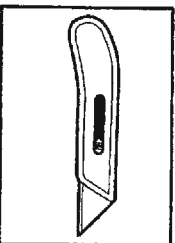


Utility knife

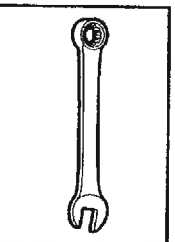 

 
1/4" hex-head ratchet
or open-end wrench

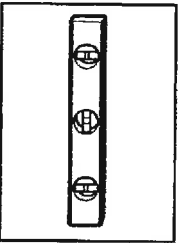


Level

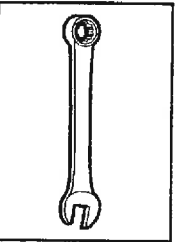 


9/16" open-end wrench

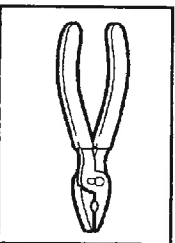 


Pliers or slip-joint pliers

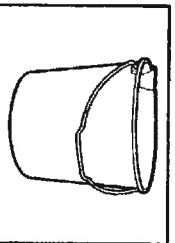 

Bucket

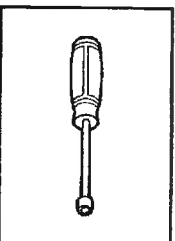 


1/4" nut driver

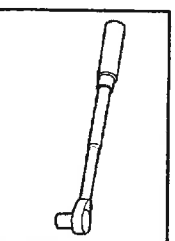 


5/16" hex-head ratchet
or nut driver

 Additional Items Needed:

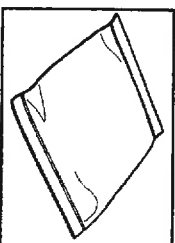


Towel

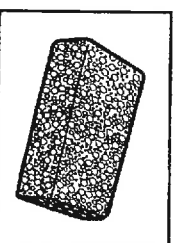 


Sponge

 Parts Supplied:

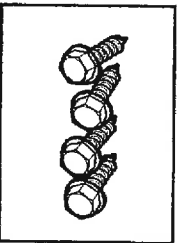

 Four #12 x 3/4" hex-head
sheet metal screws

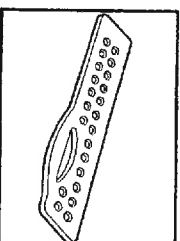

Drawer divider

UNPACKING THE PEDESTAL

Preparing the pedestal for installation

 
▲ WARNING

Excessive Weight Hazard

Use two or more people to move and install pedestal.
Failure to do so can result in back or other injury.


IMPORTANT: Set the pedestal box aside for use during installation.

1. Empty pedestal drawer

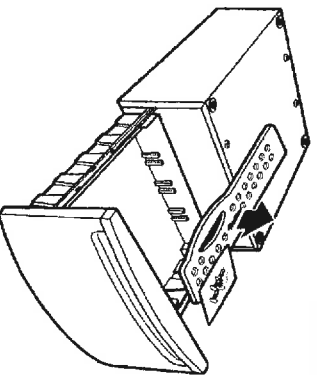

Open the pedestal drawer as far as possible and remove the contents. The package contains four #12 x 3/4" hex-head sheet metal screws and a drawer divider.

 
2. Locate spacer pads

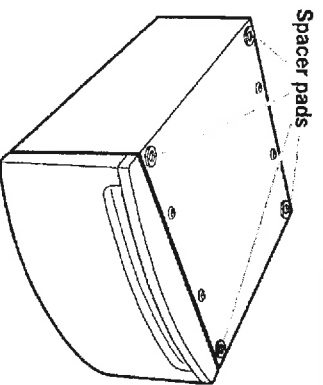

The four spacer pads are installed on the top of the pedestal. These pads reduce vibration between the pedestal and the washer/dryer.

NOTE: If your washer/dryer has feet installed, remove them.

 3. Remove pedestal drawer

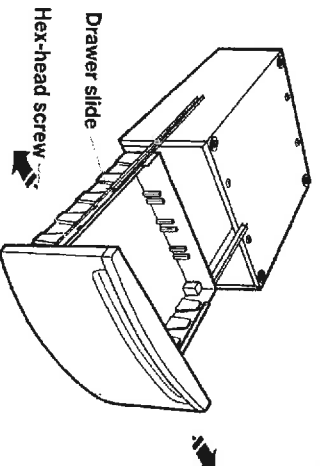

Using a 1/4" nut driver, remove the hex-head screws from both drawer slides and save screws. Remove the drawer from the slides and set aside. Push the slides back into the pedestal.

BEFORE INSTALLING PEDESTAL

IMPORTANT: If your washer and dryer are already installed, they must be uninstalled.

Uninstalling your washer

To avoid possible damage to the washer, the transport bolts on the back of the washer must be in place before installing the pedestal. For more information on transport bolts see, "Remove Transport System" in washer Use and Care Guide.

▲ WARNING

Excessive Weight Hazard

Use two or more people to move and uninstal washer.
Failure to do so can result in back or other injury.

NOTE: If the washer is to be transported, call your local service center. To avoid suspension and structural damage, your washer must be properly set up for relocation by a certified technician.

1. Turn off the hot and cold water faucets.
2. Unplug the power supply cord.
3. Slowly loosen the fill hoses at the faucets to relieve the water pressure. Use a sponge or towel to absorb the released water.
4. Remove the "HOT" and "COLD" fill hoses from the back of the washer. Drain the water from the hoses into a bucket.
5. Remove the drain hose from the standpipe or laundry tub and drain any water remaining in the hose into a bucket.
6. Pull the washer away from the wall so that you will have enough space for the installation.

NOV 2 8 2016

Uninstalling your electric dryer

⚠ WARNING



Electrical Shock Hazard
Disconnect power before servicing.
Replace all parts and panels before operating.
Failure to do so can result in death or electrical shock.

⚠ WARNING

Excessive Weight Hazard
Use two or more people to move and uninstall dryer.
Failure to do so can result in back or other injury.

1. Unplug the power supply cord or disconnect wiring if dryer is direct wired.
2. Pull the dryer away from the wall enough to loosen the vent clamp. Loosen the clamp and gently remove the exhaust vent from the dryer exhaust outlet.
3. Pull the dryer away from the wall so that you will have enough space for the installation.

Uninstalling your gas dryer

⚠ WARNING

Excessive Weight Hazard
Use two or more people to move and uninstall dryer.
Failure to do so can result in back or other injury.

1. Unplug the power supply cord.
2. Turn off the gas supply.
3. Pull the dryer away from the wall enough to loosen the vent clamp. Loosen the clamp and gently remove the exhaust vent from the dryer exhaust outlet.
4. Disconnect the flexible gas supply line from the dryer. Put a piece of tape over the open ends of the gas line connection fittings.
5. Pull the dryer away from the wall so that you will have enough space for the installation.

Installation of new washer/dryer

⚠ WARNING

 
Excessive Weight Hazard
Use two or more people to move and install washer/dryer.
Failure to do so can result in back or other injury.

1. Unpack the washer/dryer and move close to the intended installation location.

INSTALLING THE PEDESTAL

Installing the pedestal on the washer

Confirm transport bolts are in place

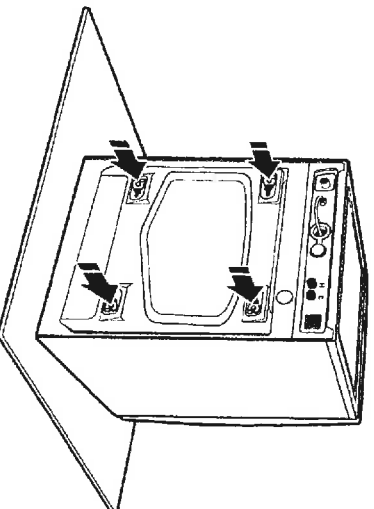

Locate the transport bolts on rear of washer. Transport bolts must remain in washer before pedestal can be installed. For more information on transport bolts see, "Remove Transport System" in Washer Use and Care Guide.

NOV 28 2016

 
⚠ WARNING

Excessive Weight Hazard

Use two or more people to move and install washer/dryer.


Failure to do so can result in back or other injury.

1. Place washer on its side

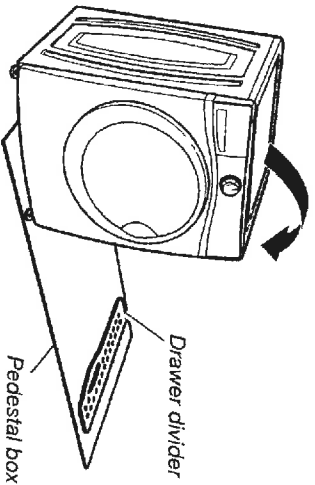

To avoid floor damage and ease installation and handling, unfold the empty pedestal box flat and place it next to the washer. Position the drawer divider so that it will be near the top of the washer, as shown. Gently tip the washer on its side so the washer is resting on the drawer divider.

 
2. Prepare the washer

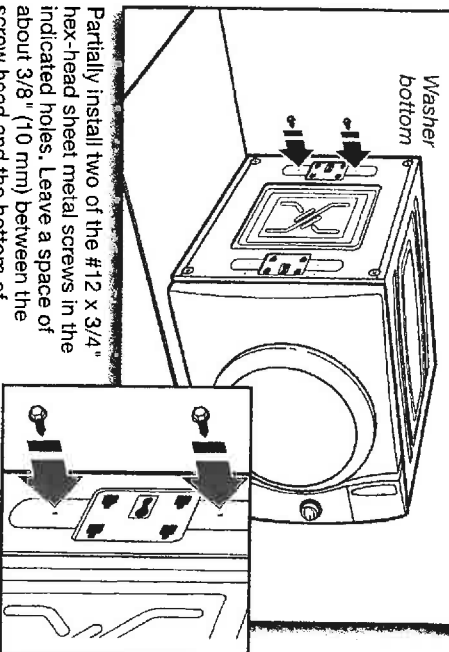


Partially install two of the #12 x 3/4" hex-head sheet metal screws in the indicated holes. Leave a space of about 3/8" (10 mm) between the screw head and the bottom of the washer.

NOTE: If your washer has leveling feet installed, remove them.

 3. Attach pedestal to washer

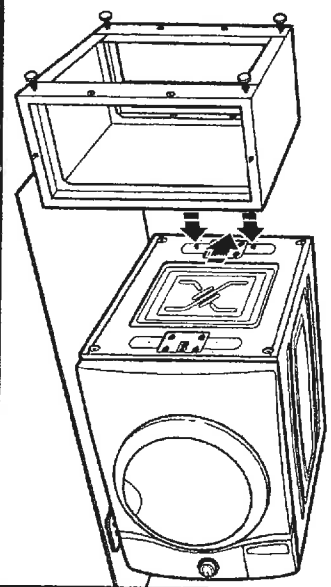


 Move the pedestal against the washer bottom. The front of the pedestal cabinet should align with the washer cabinet as shown below. Slide the pedestal's keyhole slots over the lower two partially installed screws.

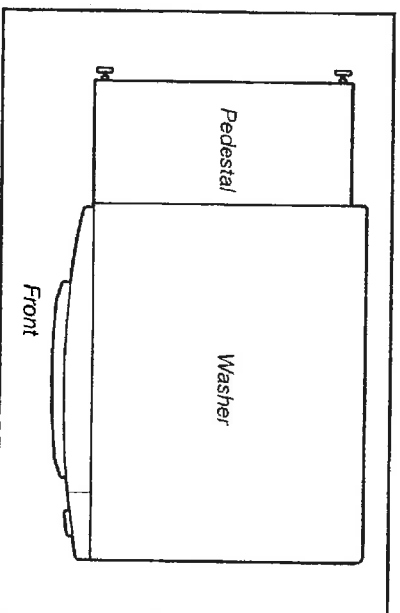

NOV 28 2016

 
4. Secure pedestal to washer

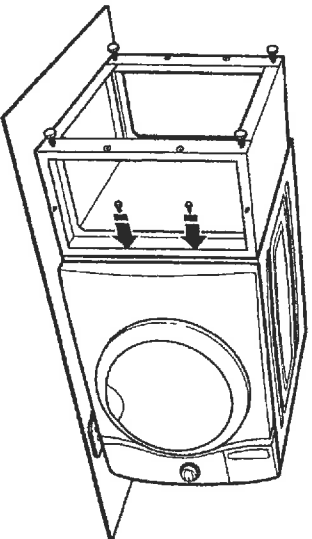

Position the pedestal toward the front of the washer and install the two remaining hex-head sheet metal screws. Do not tighten completely. Now proceed to "Complete the pedestal installation".


Installing the pedestal on the dryer

 1. Place dryer on its side

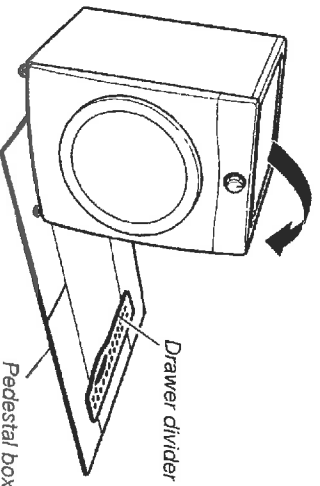

To avoid floor damage and ease installation and handling, unfold the empty pedestal box flat and place it next to the dryer. Position the drawer divider so that it will be near the top of the dryer, as shown. Gently tip the dryer on its side so the dryer is resting on the drawer divider.

 
2. Prepare the dryer

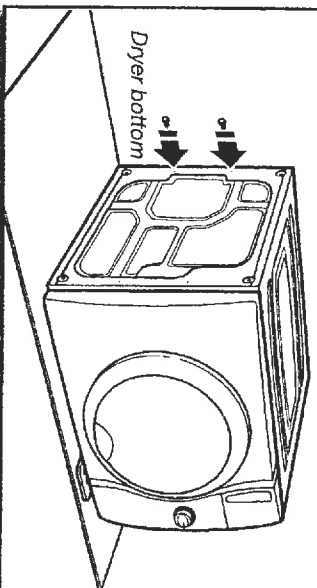


Partially install two of the #12 x 3/4" hex-head sheet metal screws in the indicated holes. Leave a space of about 3/8" (10 mm) between the screw head and the bottom of the dryer. **NOTE:** If your dryer has leveling feet installed, remove them. Do not install the feet that came with the new dryer.

6

 3. Attach pedestal to dryer

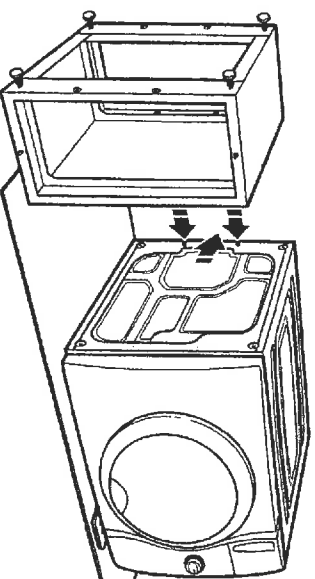


 Move the pedestal against the dryer bottom. The front of the pedestal cabinet should align with the dryer cabinet as shown below. Slide the pedestal's keyhole slots over the lower two partially installed screws.

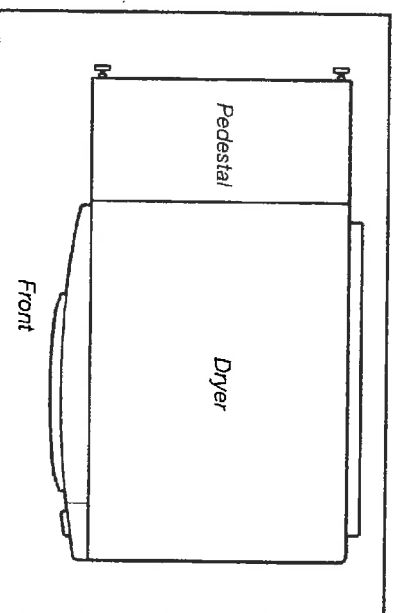

View from above

 4. Secure pedestal to dryer

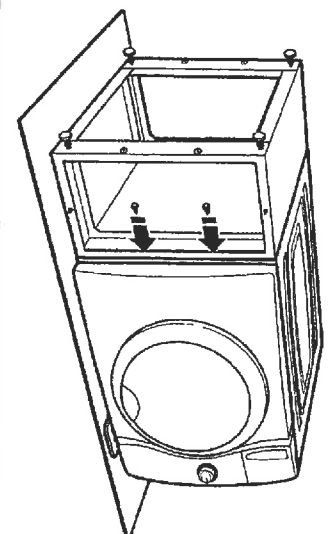


Position the pedestal toward the front of the dryer and install the two remaining hex-head sheet metal screws. Do not tighten completely. Now proceed to "Complete the pedestal installation".

NOV 28 2016


COMPLETE THE INSTALLATION

 1. Align sides of pedestal

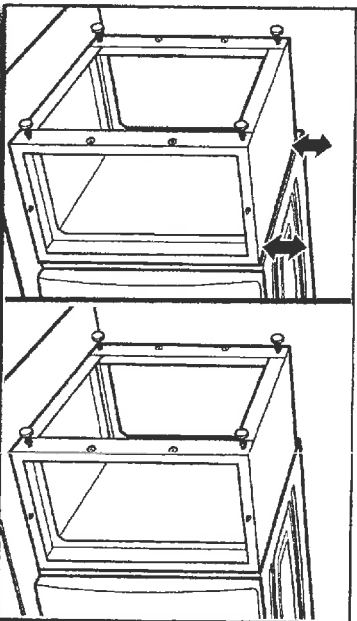


Align the sides of the pedestal so that they are even with the sides of the washer/dryer. Reach inside the pedestal opening and securely tighten all four pedestal screws.

 2. Prepare pedestal feet

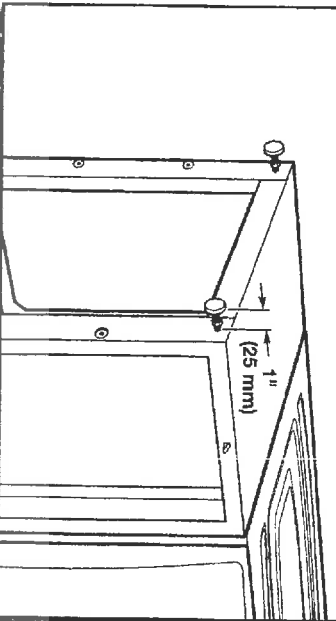

Using a 1/4" hex head ratchet or open-end wrench, lower the feet approximately 1" (25 mm) away from the bottom of the pedestal.

 
3. Stand the washer/dryer upright

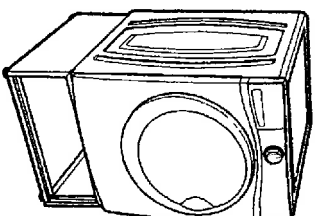

Tip the washer/dryer back to its upright position. Remove any remaining packaging material. Set the pedestal box aside for use if installing another pedestal. Once both the washer and dryer have been installed, dispose of/recycle all packaging material.

Level the washer/dryer

 
1. Move close to final location

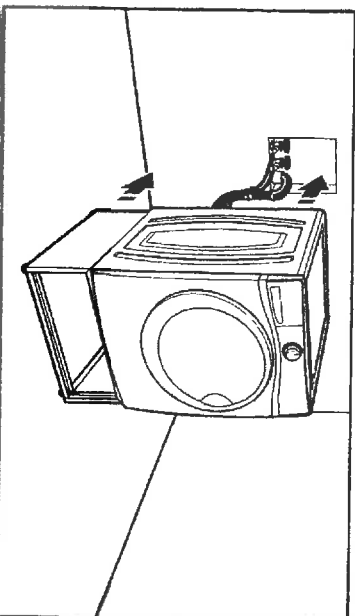


Follow the installation instructions that came with your model to finish installing or reinstalling your washer/dryer (i.e., hoses, vents, etc.).

NOTE: Be sure to remove the transport bolts from the back of the washer.

 
NOV 28 2016

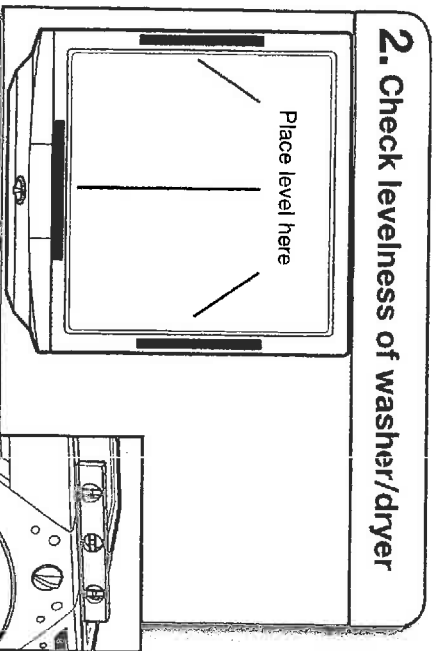

 Place a level on top edges of washer/dryer, checking each side and front. Rock washer/dryer back and forth to make sure all four feet make solid contact with floor.

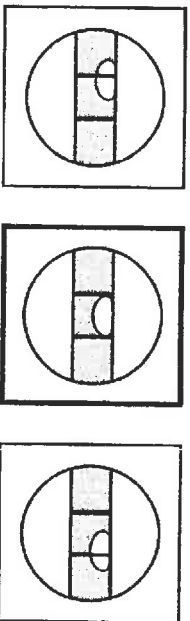


 If not level, adjust pedestal feet up or down, repeating as necessary.

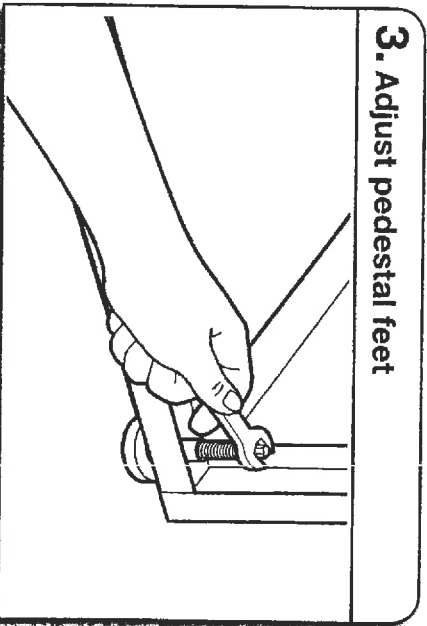


Locate the 1/4" hex-head screws on the top of each pedestal foot. Reach inside the pedestal and use a 1/4" hex-head ratchet or open-end wrench to adjust the feet up or down as needed, to level the washer/dryer.

 NOTE: Make sure all four pedestal feet are in solid contact with the floor.

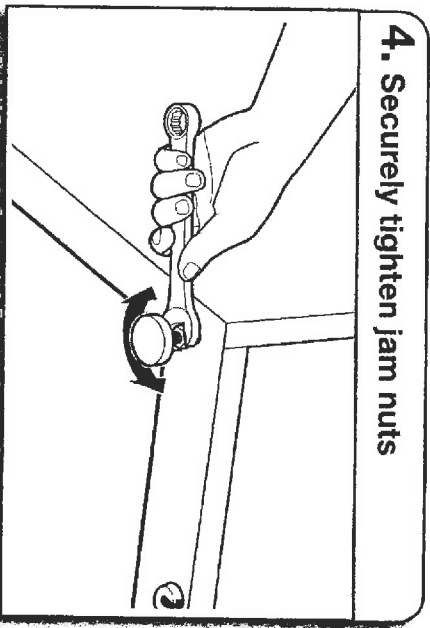


When the washer/dryer is level, use a 9/16" open-end wrench to securely tighten all four jam nuts against the pedestal.

 IMPORTANT: The jam nuts must be tightened to avoid vibration.

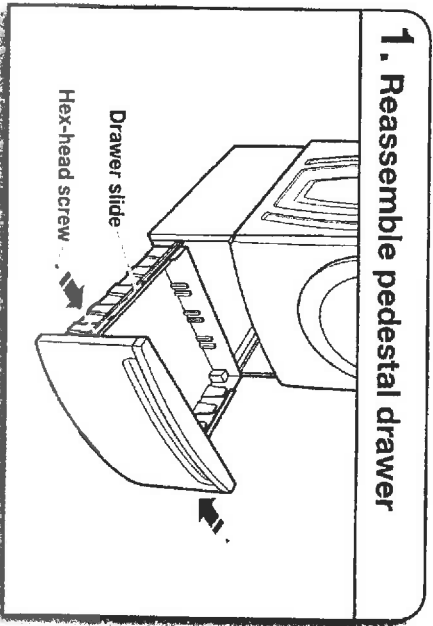

 Pull both drawer slides out and reassemble the drawer to the drawer slides with the two hex-head screws.

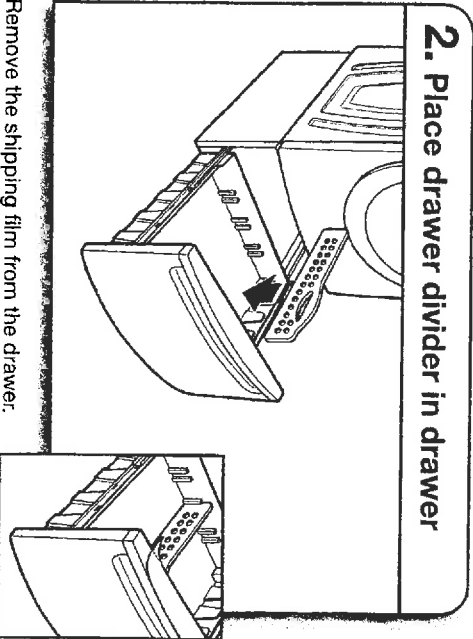

Remove the shipping film from the drawer. Place the divider in the drawer at the desired location. Close the drawer.

NOTE: Use of the divider is optional.

24" UNDERCOUNTER BEVERAGE CENTER - STAINLESS DOOR

SUB•ZERO

UC-24BG/S



FEATURES

- Compact unit fits in anywhere
- Roller-glide wine shelf holds eight 750 ml bottles
- Spill-proof glass shelves for easy clean-ups
- Bright interior lighting
- Clear-view, triple-pane and UV-resistant glass door
- Easy-access touch control panel
- Clear utility bin for smaller items
- Rigorously tested in our U.S. manufacturing facilities to ensure at least 20 years of heavy use
- Exceptional 24/7 support from our Customer Care team based in Madison, Wisconsin and just footsteps from our factory

ACCESSORIES

- Dual installation kits
- Adjustable glass shelf
- Silver or black dual wide kickplate
- Door lock
- Solid overlay door
- Adjustable wine storage shelf

Accessories are available through an authorized Sub-Zero dealer. For local dealer information, visit subzero-wolf.com/locator.



PRO

TUBULAR

PRODUCT DETAILS

REFRIGERATOR

- 1 Adjustable wine storage rack
- 2 Adjustable glass shelves
- 1 Stationary glass shelf
- Utility bin

(for the basement)

415

Am


24" UNDERCOUNTER BEVERAGE CENTER - STAINLESS DOOR

SUB-ZERO


PRODUCT SPECIFICATIONS

Model	UC-24BG/S
Dimensions	23 7/8"W x 34"H x 24"D
Door Clearance	25 3/8"
Weight	130 lb
Refrigerator Capacity	6 cu ft
Electrical Supply	115 VAC, 60 Hz
Electrical Service	15 amp dedicated circuit
Wine Storage Capacity	8 bottles

 ELECTRICAL


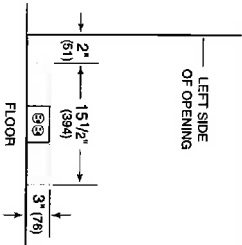


INTERIOR VIEW

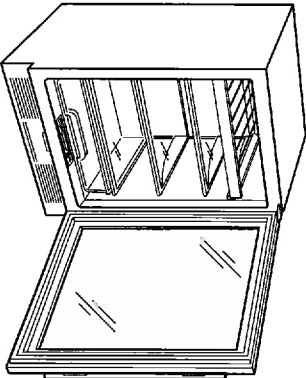 


This illustration is intended for interior reference only and may not represent the exterior of the model being specified.

  DIMENSIONS

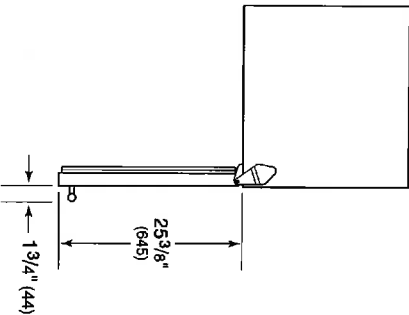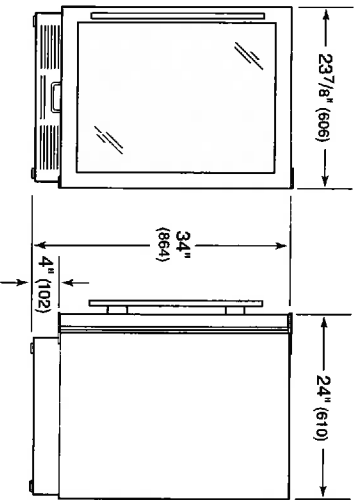

STANDARD INSTALLATION

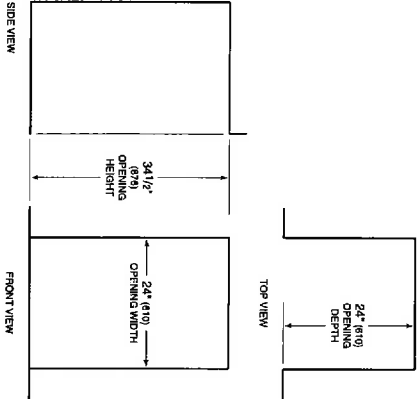 

41S

am

 


Front-Loading Washer

PRODUCT MODEL NUMBERS

WFW88HEA, WFW94HEA, WFW96HEA,
WFW95HED, WFW97HED


Washer Dimensions:

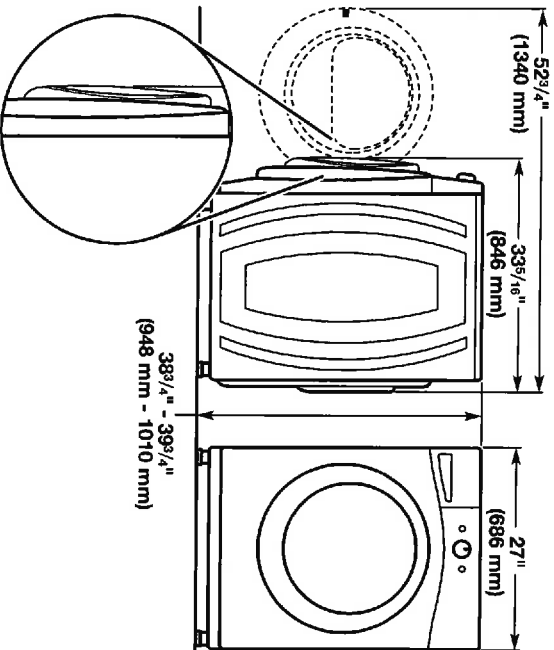


PRODUCT MODEL NUMBERS

WFW61HEB, WFW70HEB, WFW80HEB,
WFW8640B, WFW86HEB, WFW72HED,
WFW81HED, WFW82HED, WFW8740D,
WFW87HED

 Washer Dimensions:

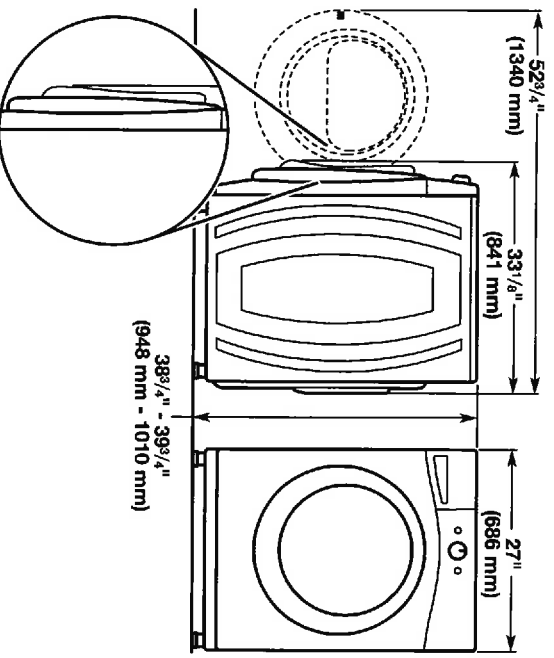


 Recessed or closet installation -
stacked washer and dryer

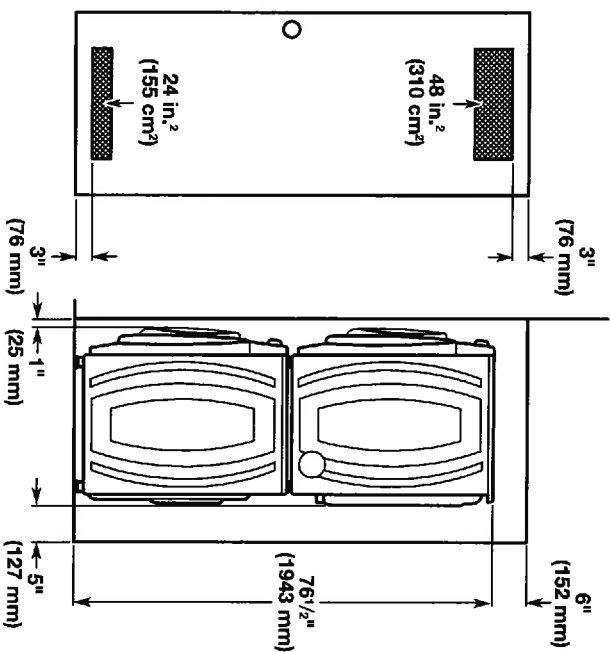

* Add spacing of 1" (25 mm) on all sides of washer/dryer.

 Recessed area or closet installation (washer only):

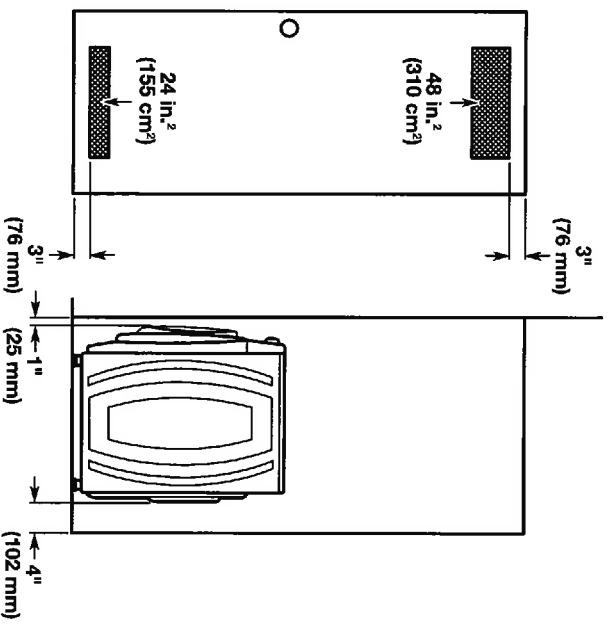


* Add spacing of 1" (25 mm) on all sides of washer.


415

Sam

 Custom cabinet installation (washer only):

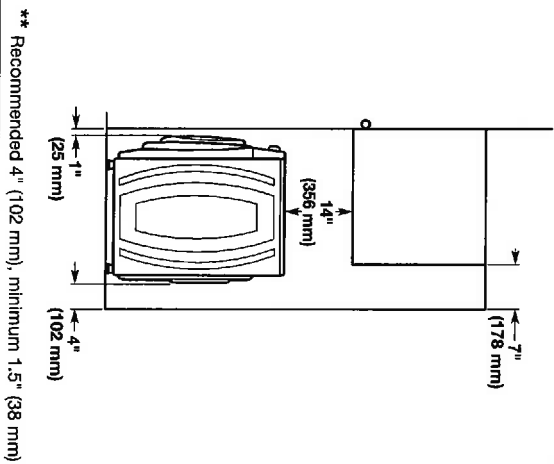

 Undercounter installation - washer only:

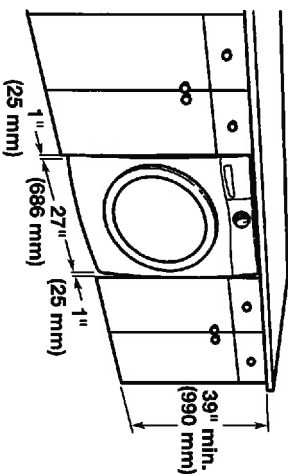

All dimensions show recommended spacing allowed, except for closet door ventilation openings which are the minimum required.

For each arrangement, consider allowing more space for ease of installation and servicing, and spacing for companion appliances and clearances for walls, doors, and floor moldings.

Space must be large enough to allow door to fully open. Add spacing of 1" (25 mm) on all sides of washer to reduce noise transfer. If a closet door or louvered door is installed, top and bottom air openings in door are required.

ELECTRICAL REQUIREMENTS

 
A 120 volt, 60 Hz., AC only, 15- or 20-amp, fused electrical supply is required. A time-delay fuse or circuit breaker is recommended. It is recommended that a separate circuit serving only this appliance be provided.

DRAIN SYSTEM

Drain system can be installed using a floor drain, wall standpipe, floor standpipe, or laundry tub. Select method you need.


IMPORTANT: To avoid siphoning, only 4.5" (114 mm) of drain hose should be inside standpipe. Always secure drain hose with cable tie.

Floor standpipe drain system

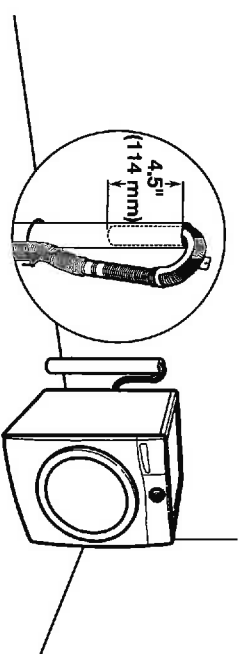


Minimum diameter for a standpipe drain: 2" (51 mm). Minimum carry-away capacity: 17 gal. (64 L) per minute. A 1/4" (6 mm) diameter to 1" (25 mm) diameter Standpipe Adapter Kit is available (Part Number 3363920). Top of standpipe must be at least 30" (762 mm) high; install no higher than 96" (2.44 m) from bottom of washer. If you have an overhead sewer and need to pump higher than 96" (2.44 m), a sump pump and associated hardware are needed. See "Alternate Parts".

 Laundry tub drain system

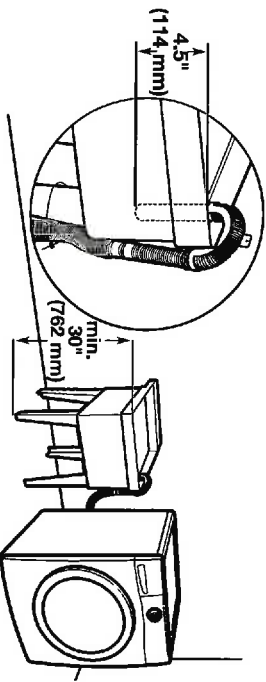


Minimum capacity: 20 gal. (76 L). Top of laundry tub must be at least 30" (762 mm) above floor; install no higher than 96" (2.44 m) from bottom of washer.

 Floor drain system

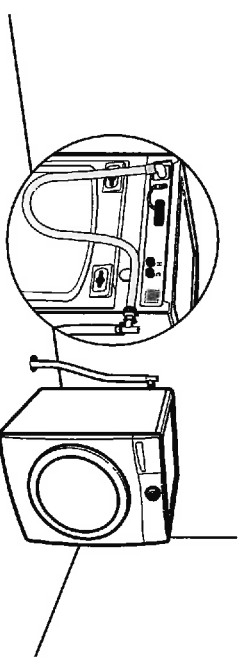

Floor drain system requires a Siphon Break Kit (Part Number 285834), 2 Connector Kits (Part Number 285835), and an Extension Drain Hose (Part Number 285863) that may be purchased separately. See "Alternate Parts". Minimum siphon break height: 28" (710 mm) from bottom of washer. (Additional hoses may be needed.)

 Wall standpipe drain system

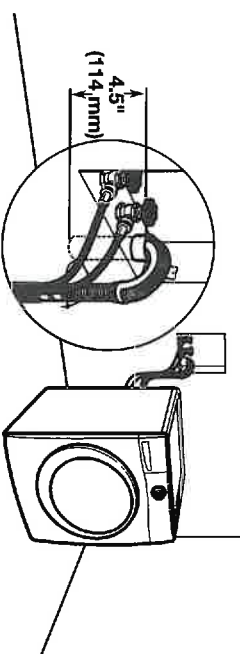

See requirements for floor standpipe drain system.

Because Whirlpool Corporation policy includes a continuous commitment to improve our products, we reserve the right to change materials and specifications without notice.

415

8 am

D5636XXLHS/PH

- Turbo Drying
- Top tray for bowls and cutlery
- Upper Basket type: Premium
- Lower basket type: Premium
- Separate removable basket
- Number of place settings: 16

Top tray functions

- InstantLift™ - smart height adjustment of the top tray
- Divisible and removable trays
- Rack for knives and utensils
- Rack for bowls and cups
- Telescopic rails

Upper basket functions

- Tight mesh base
- Multi position wire shelf left
- Multi position wire shelf right
- Fixed pin rows
- Fixed glass support
- Wide knife stand
- Guide rails with ball bearings

Lower basket functions

- Tight mesh base
- Foldable/divisible pin rows rear
- Separate removable basket

Programs

- Sanitization wash
- Normal wash
- Heavy wash
- Quick wash
- Hygiene wash
- Delicate wash
- ECO wash
- Upper half
- Lower half

Options

- Delayed start

Cleaning systems

- Number of spray zones: 9
- Number of spray arms: 3
- WideClean™ - extra washing power for pots and pans
- SCS - Super Cleaning System™
- Aqua Level™ Sensor
- Stainless steel spray arms

Drying system

 
- Turbo Drying™

Features

- 8 stainless steel parts
- Time remaining indicator
- Voice signal for the end of washing cycle
- Hidden heater
- KidsSafe - lockable controls

Water safety

- Few sealing points outside the container
- Long lasting seam welded tank
- Waterproof external base
- Exterior float
- Aqua Detect™ Sensor
- Aqua Level™ Sensor
- Stand-by water protection
- Yes
- Max time water intake
- Sound alarm
- Anti-block drain pump

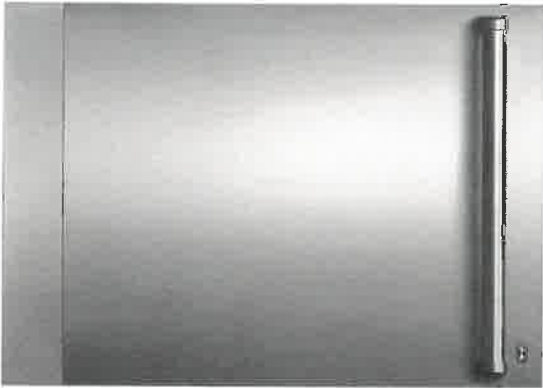

Installation

- Adjustable feet
- Multi fit outlet hose
- Fixed high loop outlet hose
- Trim kit

EAN code: 3838942044366
code: 492571

General

- Product: Dishwasher
- Mode of installation: Built-in
- Size: XXL
- LED display
- Number of programs: 9
- Noise level: 46 dB(A)
- Number of baskets: 3
- EAN code: 3838942044366

Dimensions and installation

- Height: 34 1/4 (870 mm)
- Width: 23 15/16 (608 mm)
- Depth: 22 7/8 (581 mm)
- Packaging height: 36 5/8 (930 mm)
- Packaging width: 25 3/16 (640 mm)
- Packaging depth: 26 3/4 (680 mm)
- Length electrical cord: 46 7/16 (1180 mm)
- Length inlet hose: 66 1/8 (1680 mm)
- Length outlet hose: 41 3/4 (1060 mm)
- Weight net: 106 lbs
- Weight: 110 lbs
- Weight gross: 114 lbs

Technical information

- Voltage: 120 V
- Current: 15 A

Consumption

- Energy consumption/cycle: 0,87 kWh

ASKO Appliances North America - PO Box 44848 - MADISON WI 53744
Customer Support: CALL US TOLL FREE AT 800-898-1879

415

 
 
AB am



Electric Dryer

PRODUCT MODEL NUMBERS


WED72HED, WED81HED, WED8740D, WED87HED, WED95HED, WED97HED

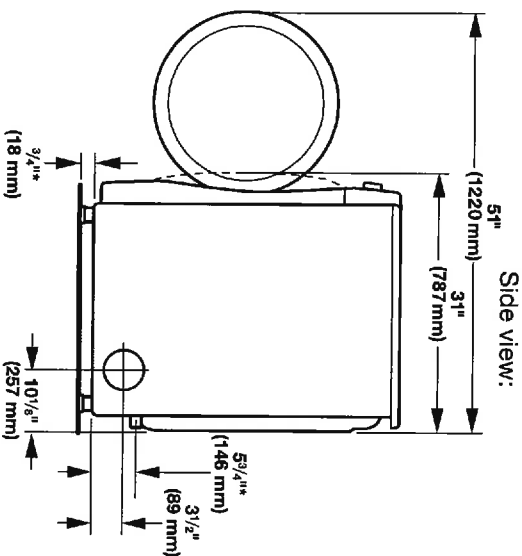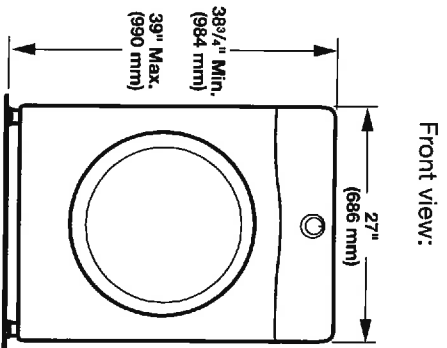

Back view:

Recommended Installation Spacing:

 NOTE: Most installations require a minimum of 5" (127 mm) clearance behind dryer for exhaust vent with elbow. See "Venting Requirements."

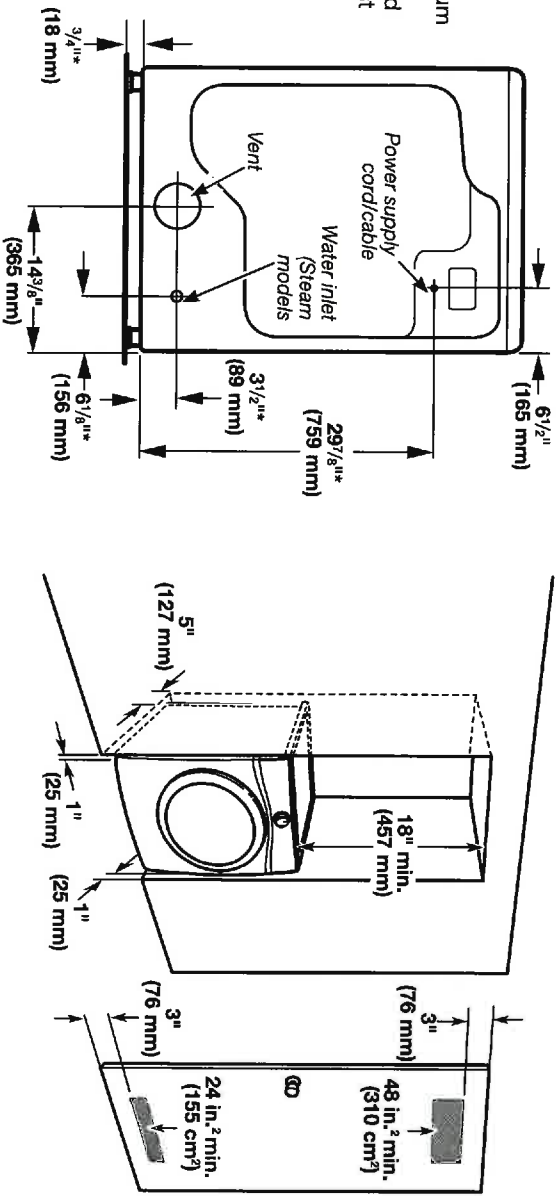

* Approx. measurement.

Installation spacing for recessed area or closet installation

The dimensions shown below are the recommended spacing for this dryer.

- Additional spacing should be considered for ease of installation and servicing.
- Additional clearances might be required for wall, door, floor moldings, and dryer venting.
- Additional spacing of 1" (25 mm) on all sides of the dryer is recommended to reduce noise transfer.
- For closet installation, with a door, minimum ventilation openings in the top and bottom of the door are required. Louvered doors with equivalent ventilation openings are acceptable. Companion appliance spacing should also be considered.

W10676165A
04/2014

415

8 am

ELECTRICAL REQUIREMENTS

To supply the required 3 or 4 wire, single phase, 120/240 volt, 60 Hz., AC only electrical supply (or 3 or 4 wire, 120/208 volt electrical supply, if specified on the serial/rating plate) on a separate 30-amp circuit, fused on both sides of the line. A time-delay fuse or circuit breaker is recommended. Connect to an individual branch circuit.


VENTING REQUIREMENTS

Exhaust venting: Exhaust your dryer to the outside. 4" (102 mm) diameter vent is required. Rigid or flexible metal exhaust vent must be used. Do not use plastic or metal foil vet. Exhaust hood must be at least 12" (305 mm) from the ground or any object that may be in the path of the exhaust.


The Vent System Chart provides venting requirements that will help achieve best drying performance.

Whirlpool Vent System Chart			
Number of 90° elbows	Type of vent	Box/Louvered hoods	Angled hoods
0	Rigid metal	64 ft. (20 m)	58 ft. (17.7 m)
1	Rigid metal	54 ft. (16.5 m)	48 ft. (14.6 m)
2	Rigid metal	44 ft. (13.4 m)	38 ft. (11.6 m)
3	Rigid metal	35 ft. (10.7 m)	29 ft. (8.8 m)
4	Rigid metal	27 ft. (8.2 m)	21 ft. (6.4 m)

 NOTE: Bottom exhaust installations have a 90° turn inside the dryer. To determine maximum exhaust length, add one 90° turn to the chart.

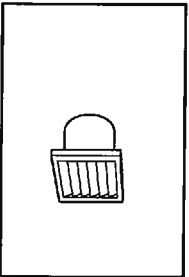


Louvered Hood

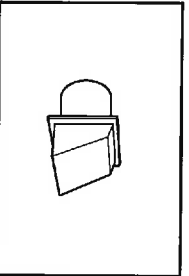 

Box Hood

 Acceptable Style:

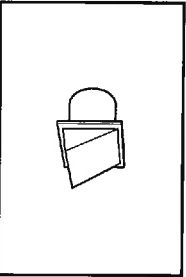

Angled Hood

Determine vent path:

- Select route that will provide straightest and most direct path outdoors.
- Plan installation to use fewest number of elbows and turns.
- When using elbows or making turns, allow as much room as possible.
- Bend vent gradually to avoid kinking.
- Use as few 90° turns as possible.

Determine vent length and elbows needed for best drying performance:

- Use following Vent System Chart to determine type of vent material and hood combinations acceptable to use.

NOTE: Do not use vent runs longer than those specified in Vent System Chart. Exhaust systems longer than those specified will:

 
- Shorten life of dryer.
- Reduce performance, resulting in longer drying times and increased energy usage.

Because Whirlpool Corporation policy includes a continuous commitment to improve our products, we reserve the right to change materials and specifications without notice.

Dimensions are for planning purposes only. For complete details, see Installation Instructions packed with product. Specifications subject to change without notice.

415

8mm

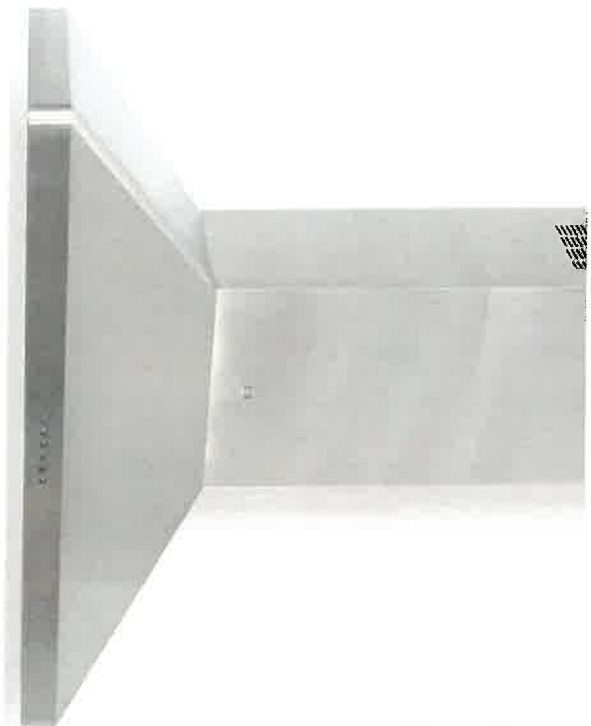

SU54

SU54

- SU54 36" 42" 48" Motor: **2 x EBM 1100 cfm** (Duct Size 8")
- Pressure: **800 Pa**
- Noise level: 66 **dB(A/5.1 sones**

 
- Lighting:
 - 2x20W Halogen lamps in 36" version
 - 3x20W Halogen lamps in 42" version
 - 4x20W Halogen lamps in 48" version



- Control panel: 4 speed push-button + timer + light switch



- grease filter: commercial style baffle filters
- Stainless steel: AISI 430

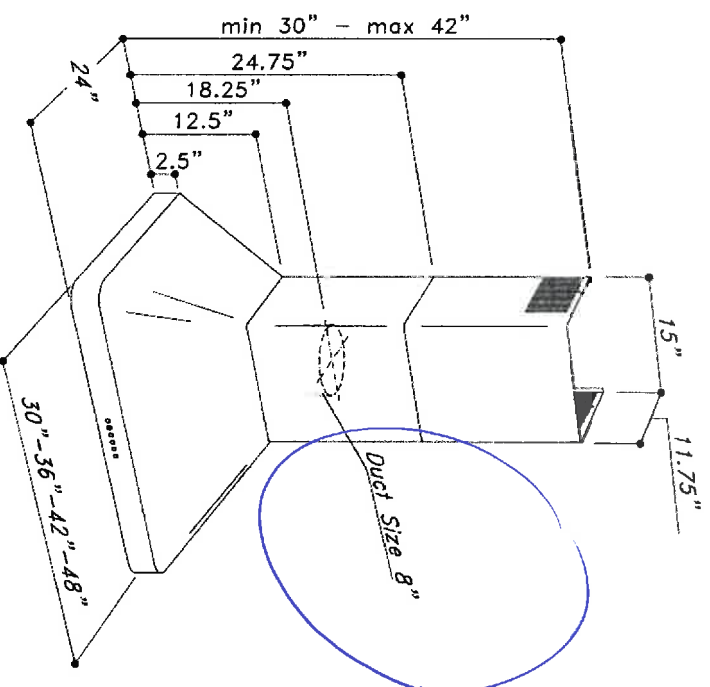

Sirius

415

8 am

30" DUAL FUEL RANGE - 4 BURNERS



D F 304

FEATURES

- Dual convection oven for faster, more consistent cooking
- 10 cooking modes make meals easy
- Dual-stacked burners produce up to 20,000 Btu
- Burners capable of delivering less than 300 Btu for premier simmer performance
- Cobalt blue porcelain interior
- Exclusive pivoting control panel
- Continuous cast-iron grates for easy movement of pots and pans
- Rigorously tested in our U.S. manufacturing facilities for decades of use
- Exceptional 24/7 support from our Customer Care team in Madison
- Individual spark ignition system
- Heavy-gauge stainless steel
- Red, black or stainless steel control knobs
- Temperature probe lets you know when it's done
- Self clean, delayed start, timed cook, Sabbath mode and more

ACCESSORIES

- Bake stone kit (stone, rack and peel)
- Stainless steel, brass or chrome bezels
- Front leg and rear caster covers
- High altitude conversion kit
- Dehydration kit (racks and door stop)
- Full-extension easy glide oven rack
- Cast iron S-grates and wok grate
- Stainless steel kickplate
- Signature red, black or stainless steel control knobs
- Temperature probe and broiler pan
- 5" and 10" stainless steel risers, and 20" riser with shelf
- Set of three standard oven racks
- 30" baking sheet

 
Accessories available through an authorized Sub-Zero dealer.
For local dealer information, visit subzero-wolf.com/locator



KNOB OPTIONS



TOP CONFIGURATION

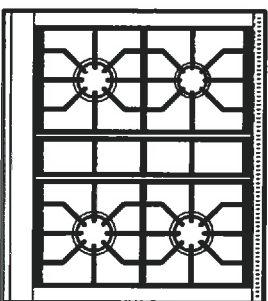

RANGETOP SPECIFICATIONS

- 1 - 9,200 Btu Burner
- 1 - 15,000 Btu Burner
- 1 - 18,000 Btu Burner
- 1 - 20,000 Btu Burner

415

DF 304


30" DUAL FUEL RANGE - 4 BURNERS




PRODUCT SPECIFICATIONS

Model	DF304
Dimensions	29 7/8"W x 36 7/8"H x 29 1/2"D
Oven 1 Interior Dimensions	25"W x 16 1/2"H x 19"D
Oven 1 Usable Capacity	2.8 cu ft
Oven 1 Overall Capacity	4.5 cu ft
Door Clearance	19 1/2"
Weight	325 lb
Electrical Supply	240/208 VAC, 60 Hz
Electrical Service	30 amp dedicated circuit
Gas Supply	3/4" rigid pipe
Gas Inlet	1/2" NPT female

 DIMENSIONS

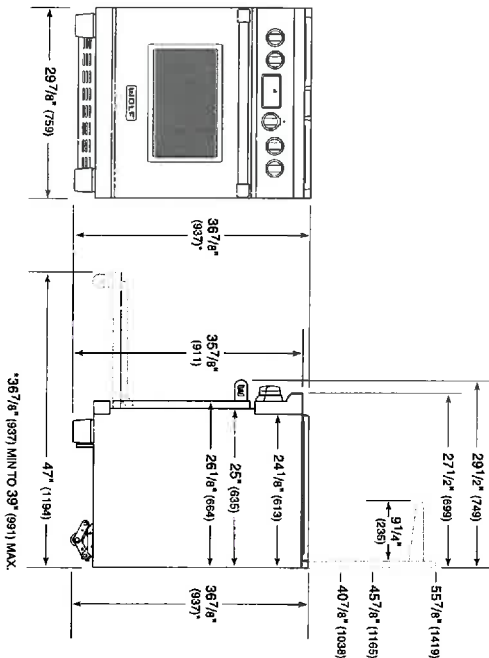


STANDARD INSTALLATION

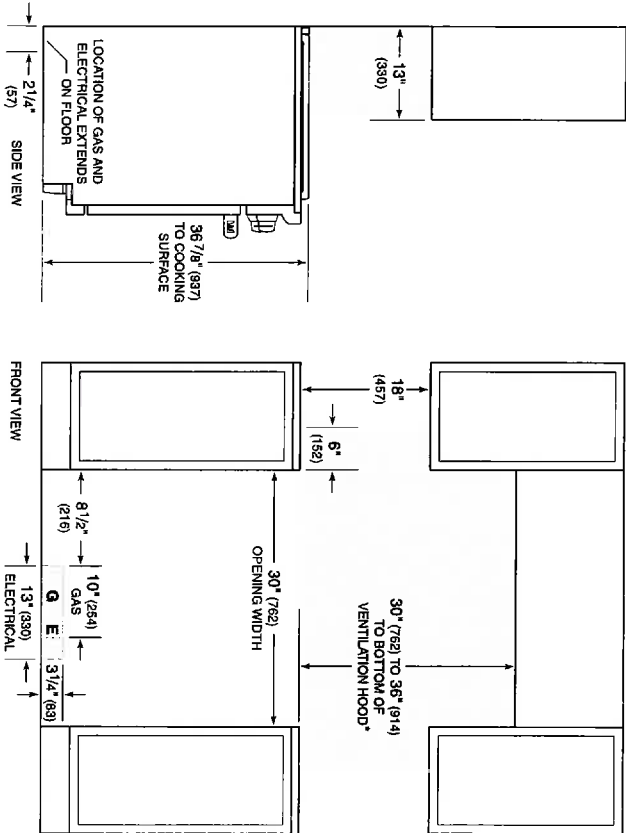 

*Without ventilation hood, 36" (914) minimum clearance countertop to combustible materials.
NOTE: Shaded area above countertop indicates minimum clearance to combustible surfaces, combustible materials cannot be located within this area.
For island installation, 12" (305) minimum clearance back of range to combustible rear wall above countertop.

 ELECTRICAL AND GAS

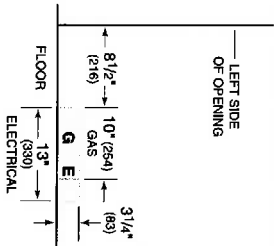

418

am