

PS968SP

GE Profile™ Series 30" Slide-In Electric Range

Dimensions and Installation Information (in inches)

| KW Rating    |         |
|--------------|---------|
| 240V         | 12.4    |
| 208V         | 9.3     |
| Breaker Size |         |
| 240V         | 40 Amps |
| 208V         | 40 Amps |

**Note:** Cabinets installed adjacent to slide-in ranges must have an adhesion spec of at least 194° temperature rating.

**Note:** To reduce the possibility of scorching the side walls above the countertop when no load is present on burners, it is recommended that a minimum 6" spacing from adjacent side wall be allowed for possible extended high-heat element operation.

**Receptacle Locations:** For all 30" Slide-In Ranges locally approved flexible service cord or conduit must be used because terminals are not accessible after range installation. See shaded area in drawing for location of electrical outlet box. Recommended outlet locations allow range to be installed directly against rear wall.

**Optional Kits For Slide-In Electric Ranges**  
(Available At Additional Cost)

**Accessory Backguards**  
(Attaches to the back of range as a backguard when unit is installed in 30" free-standing cutout)

JXS32SS (Stainless) - 4" High  
JXS32WW (White) - 4" High  
JXS32BB (Black) - 4" High

**Body Sides**

(Slide-in ranges are sold without sides installed. Can be installed on either left or right when unit has one exposed side [no cabinet adjacent]. Kit contains 1 body side)

JXS77WW (White)  
JXS77BB (Black)

**Rear Filler Strips**  
WB07T10680 - Black Filler Strip Assembly

**Optional Lower Trim Kits**

(If counter height is greater than 36.5", a lower trim kit is recommended to extend the useful height to 38"



JXS56WW - White  
JXS56BB - Black

**Installation information:** Before installing, consult installation instructions packed with product for current dimensional data.





imagination at work

For answers to your Monogram® or GE® appliance questions, visit our website at [geappliances.com](http://geappliances.com) or call GE Answer Center® service, 800.626.2000.




Specification Revised 4/13


220447

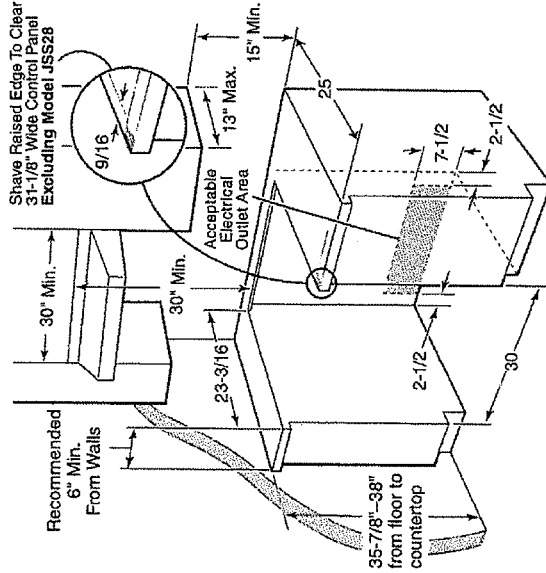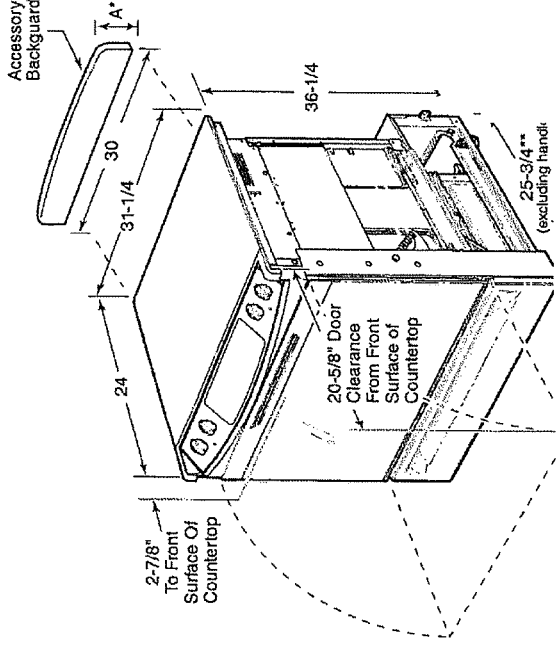

If you are NOT using the Filler strip or Backguard:

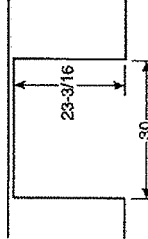

If you are using the Filler strip or Backguard:

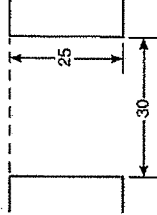

Lot 46L

## PS968SP


### GE Profile™ Series 30" Slide-In Electric Range

#### Features and Benefits

- True European Convection with Precise Air - A reversing fan circulates heat and air for evenly browned and baked foods
- Convection Bake - This setting is optimal for baking casseroles or lasagnas, yeast breads, pies and pizzas with no need to turn the pan
- Convection Roast - Optimal for larger cuts of meat, this setting rotates the heat around all sides, sealing in the juices, producing rotisserie results at up to 25% faster than a conventional oven
- Self-clean Oven - Self-clean allows you to spare yourself from the trouble and effort it takes to scrub the oven interior. The oven does all the work!
- 6"9"/12" Tri-ring Element - Choose a 6"9"/12" heating element to accommodate the size of your pan
- Heavy-duty Knobs - Heavy-duty knobs offer durability and elegance
- Bridge Element - Combines three cooktop elements into one large cooking area, ideal for griddles and gourmet pans
- Glass Touch Controls - Smooth controls are easy to use and add a sophisticated style to the kitchen
- Warming Zone (Fifth element warming zone) - Simplify meals by keeping foods fresh from the oven warm and ready to serve
- 4.1 cu. ft. Oven Capacity - Remarkably large oven interior is ideal for holidays, dinner parties and everyday family cooking
- Model PS968SPSS - Stainless steel (Stainless steel door and black patterned cooktop)



imagination at work

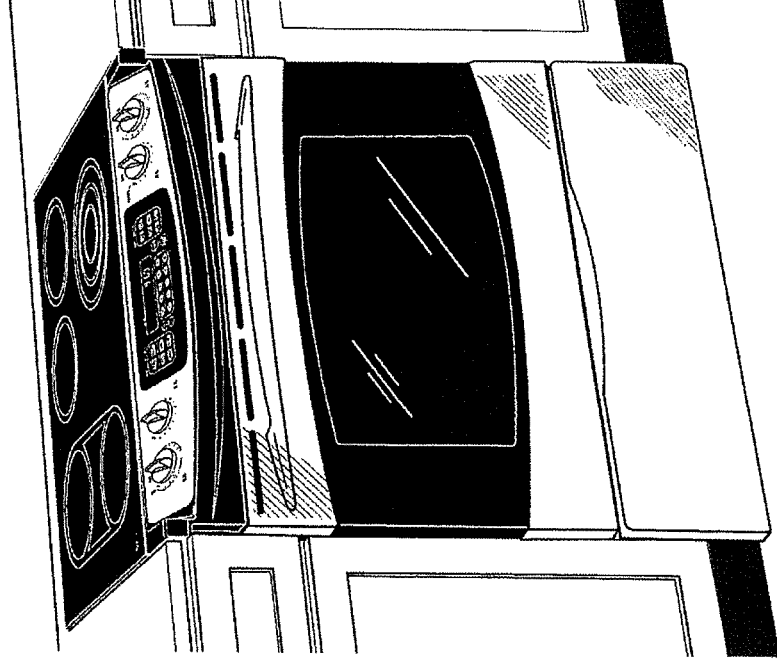

Lot 46L

Lot 46L



## Bottom Mount Refrigerator

### PRODUCT MODEL NUMBER

MFT2574DE

MFT2776

**Electrical:** A 115-volt, 60-Hz, AC-only, 15- or 20-amp fused, grounded electrical supply is required. It is recommended that a separate circuit serving only your refrigerator be provided. Use an outlet that cannot be turned off by a switch. Do not use an extension cord.


**NOTE:** Before performing any type of installation, cleaning, or removing a light bulb, turn the control (Thermostat, Refrigerator or Freezer Control depending on the model) to OFF and then disconnect the refrigerator from the electrical source. When you are finished, reconnect the refrigerator to the electrical source and reset the control (Thermostat, Refrigerator or Freezer Control depending on the model) to the desired setting. See "Using the Controls."

**Water:** A cold water supply with water pressure between 30 and 120 psi (207 and 827 kPa) is required to operate ice maker and water dispenser. If you have questions about your water pressure, call a licensed, qualified plumber.

**IMPORTANT:** The pressure of the water coming out of a reverse osmosis system going to the water inlet valve of the refrigerator needs to be between 30 and 120 psi (207 and 827 kPa).


**Reverse Osmosis Water Supply:** If a reverse osmosis water filtration system is connected to your cold water supply, the water pressure to the reverse osmosis system needs to be a minimum of 40 to 60 psi (276 to 414 kPa).

### PRODUCT DIMENSIONS

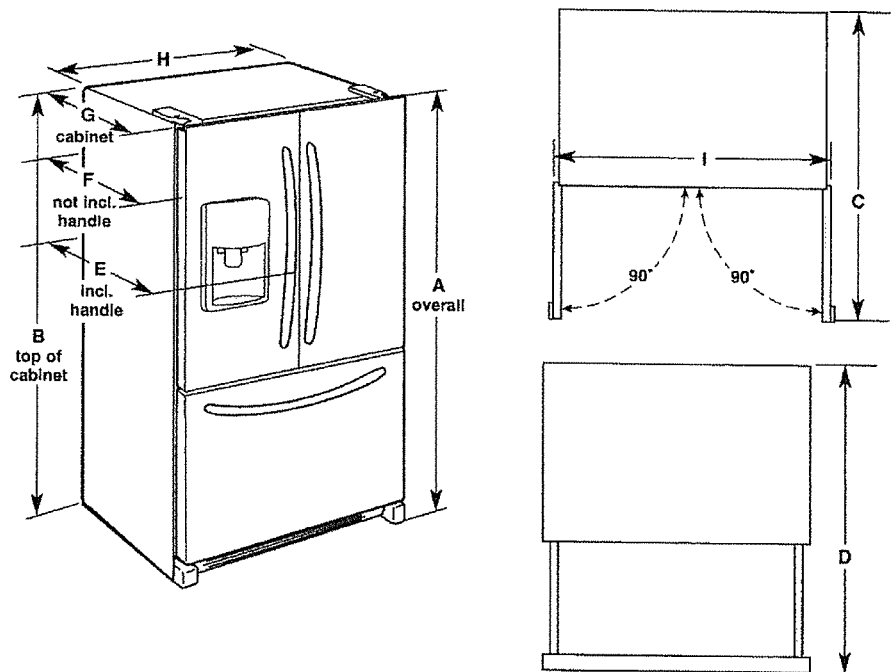

| Model Number | Model Size  | Height - Overall "A"          | Height - Top of Cabinet "B"   | Depth - Doors Open 90° "C" | Depth - Drawer Open "D"       | Depth - With Handles "E"     | Depth - Without Handles "F"  | Depth - Cabinet Only "G"     | Width - Cabinet "H"          | Width - Door Open 90° "I"    |
|--------------|-------------|-------------------------------|-------------------------------|----------------------------|-------------------------------|------------------------------|------------------------------|------------------------------|------------------------------|------------------------------|
| MFT2574DE    | 24.7 cu.ft. | 70 $\frac{1}{8}$ " (178.1 cm) | 68 $\frac{5}{8}$ " (174.3 cm) | 48" (121.9 cm)             | 47" (119.4 cm)                | 35 $\frac{5}{8}$ " (90.5 cm) | 33 $\frac{1}{8}$ " (84.1 cm) | 28" (71.1 cm)                | 35 $\frac{3}{4}$ " (90.8 cm) | 38 $\frac{3}{8}$ " (97.0 cm) |
| MFT2776      | 26.8 cu.ft. | 70" (177.8 cm)                | 68 $\frac{5}{8}$ " (174.3 cm) | 48" (121.9 cm)             | 47 $\frac{5}{8}$ " (121.0 cm) | 35 $\frac{5}{8}$ " (90.5 cm) | 33 $\frac{1}{8}$ " (84.1 cm) | 28 $\frac{1}{2}$ " (73.3 cm) | 35 $\frac{3}{4}$ " (90.8 cm) | 38 $\frac{1}{2}$ " (96.8 cm) |

### LOCATION REQUIREMENTS

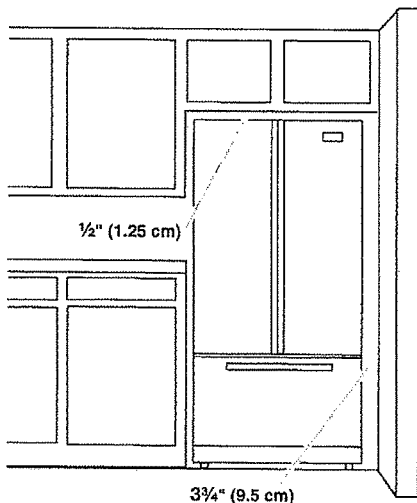

To ensure proper ventilation for your refrigerator, allow for a  $\frac{1}{2}$ " (1.25 cm) space on each side and at the top. Allow for 1" (2.54 cm) of space behind the refrigerator. If your refrigerator has an ice maker, make sure you leave some extra space at the back for the water line connections.

If you are installing your refrigerator next to a fixed wall, leave  $\frac{3}{4}$ " (9.5 cm) minimum on the hinge side (depending on your model) to allow for the door to swing open.

**NOTE:** This refrigerator is intended for use in a location where the temperature ranges from a minimum of 55°F (13°C) to a maximum of 110°F (43°C). The preferred room temperature range for optimum performance, which reduces electricity usage and provides superior cooling, is between 60°F (15°C) and 90°F (32°C). It is recommended that you do not install the refrigerator near a heat source, such as an oven or radiator.

Because Whirlpool Corporation policy includes a continuous commitment to improve our products, we reserve the right to change materials and specifications without notice.

Dimensions are for planning purposes only. For complete details, see Installation Instructions packed with product. Specifications subject to change without notice.

Ref. W10710876B  
6/16