

GOEMANS APPLIANCES

Expect More. Get More.

APPLIANCE SPECIFICATIONS



PROJECT PARTNER:
Bill To: 6477623529

SHIP TO:
Ship To: 6477623529

KHOSHABA, GORGEES
10 WESTLAKE CRESCENT BLOCK 161 - UNIT 1
BRADFORD, ON L3Z 4K3

REMINDER:

To ensure a smooth project it is the responsibility of the homeowner / purchaser of appliances to share all the attached specifications with their cabinet provider, contractor, or any other tradesperson so they have the information required to complete their work accurately. Product specifications are for planning purposes only and are subject to change without notice. Refer to installation instructions shipped with the product before cutting cabinets, counters, panels, etc.

Goemans Appliances assumes no liability for product specifications.

Ship To: 6477623529

Bill To: 6477623529

KHOSHABA, GORGEES
10 WESTLAKE CRESCENT BLOCK 161 - UNIT 1
BRADFORD, ON L3Z 4K3

<i>Models</i>	<i>Pages</i>
RF23R6201SR/AA Samsung Refrigeration	3-4
PCGS930YPFS GE Range	5-7



Goemans Appliances

goemans.com

JASON NG

9052641771

Document **HB00023157-24-1**

Version 1.1

Sat, Mar 20, 2021

11:57 AM EDT



enterprise.steelcod.com/sp/goem/32JCD1CY

Note about page numbers:

Because the original manufacturer's documents are not altered in any way, the page numbers displayed on the page may not correspond to the page number within this package.

All specifications are intended for initial planning purposes only.

Manufacturers reserve the right to change specifications at any time without notice. Always consult the installation instructions found on the manufacturer's website or included with the appliances before installation.

RF23R6201SR

SAMSUNG

23 cu. ft. Counter-Depth, 3-Door French Door Refrigerator
with CoolSelect Pantry™



Signature Features

Twin Cooling Plus®

- Independent fridge and freezer controls keep food fresher longer.

CoolSelect Pantry™

- Full-width drawer with three temperature control settings to chill or defrost food to ideal temperatures.

Ice Max

- Large capacity, stores up to 2.7 lbs of ice.

Counter Depth

- Offers a premium, built-in look.

Fingerprint Resistant Finish

- A special finish to reduce smudges and minimize cleaning.

Available Colors



CoolSelect Pantry™ with
Temperature Control



Ice Max

Convenience

- CoolSelect Pantry™ with Temperature Control and Pantry Divider
- Wi-Fi and Bixby Enabled
- Adjustable Shelves for Tall Oversized Items
- Auto Pull-Out Upper Freezer Drawer
- Water Filter Indicator

Design

- Counter Depth
- Fingerprint Resistant Finish
- Premium External Filtered Water and Ice Dispenser with Light
- High Efficiency LED Lighting
- Accessibility (ADA Compliant)
- EZ-Open Handle™ on Freezer Door
- Tempered Glass Spill-Proof Shelves
- Gallon Door Bins

Performance

- Twin Cooling Plus®
- Ice Max - Stores up to 2.7 lbs of Ice
- ENERGY STAR® Compliant
- Two Humidity-Controlled Crispers
- Power Freeze and Power Cool Options
- CoolTight Door
- Door Alarm

Rating



ENERGY STAR® rated:
699 kWh/yr

RF23R6201SR

SAMSUNG


23 cu. ft. Counter-Depth, 3-Door French Door Refrigerator with CoolSelect Pantry™

Installation Specifications


1. Measure the height, width and depth of the opening, making sure to include baseboards, molding tile, countertop overhang, etc. Check to be sure there is enough room to open the door (consider walls, islands or other obstacles when measuring).
2. Refer to illustration below to determine dimensions.
3. Allow 2.5" of clearance on hinge side of refrigerator when installing next to a wall where handle may make contact.
4. Allow 1" minimum clearance at rear for proper air circulation and water/electrical connections. Allow a 3/8" minimum clearance at sides and top for ease of installation.
5. Ensure each door and entryway in the home is wide enough for the refrigerator to be moved through easily.

For optimal usage and to be able to open refrigerator doors completely, do not install next to a wall.

Please note: The following dimension and cutout information is for planning purposes only. For complete installation details, consult manual packed with product, or download manual online at samsung.com.

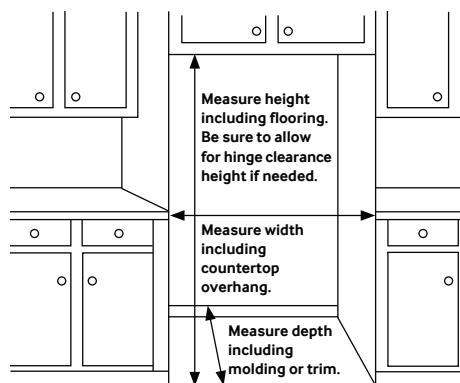

Dimensions

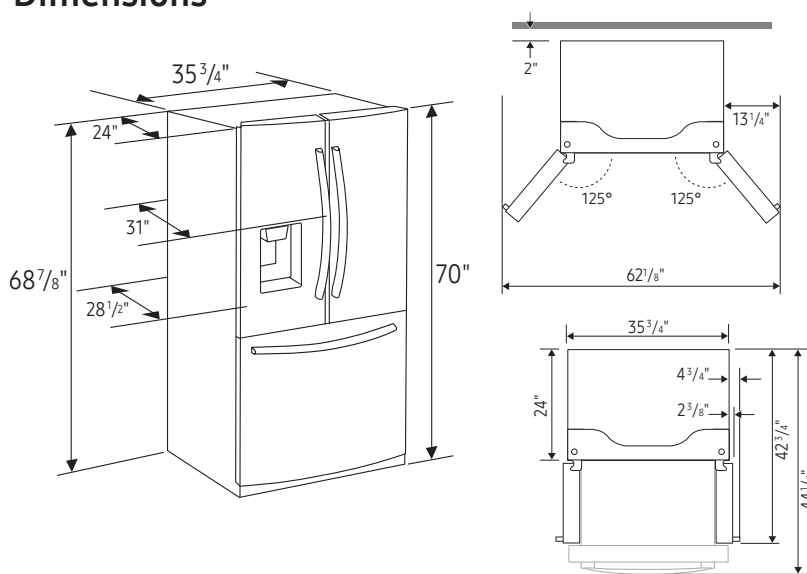

Total Capacity: 22.6 cu. ft.

Refrigerator: 15.7 cu. ft.

- Premium External Filtered Water and Ice Dispenser
 - Crushed or Cubed Ice
- Ice Max
- CoolSelect Pantry™ with Temperature Control – Deli (41°C), Fresh (38°F) and Chilled (32°F) Options
- Pantry Divider
- 2 Humidity-Controlled Crispers
- 5 Tempered Glass Spill-Proof Shelves:
 - 1 Slide-In
 - 1 Slide-Out
 - 1 Foldable Half
 - 2 Fixed
- 6 Clear Door Bins
 - Right Door: 3 Gallon Bins
 - Left Door: 3 Regular Bins
- Adjustable Shelves for Tall Oversized Items
- High Efficiency Top LED Lighting

Freezer: 6.9 cu. ft.

- EZ-Open Handle™
- 2 Drawer Dividers
- High Efficiency LED Lighting

Accessories

Water Filter: HAF-QIN

Warranty

One (1) Year Parts and Labor on Refrigerator

Five (5) Years Parts and Labor on

Sealed Refrigeration System Only*

Ten (10) Years Parts and Five (5) Years

Labor on Digital Inverter Compressor

*Compressor, evaporator, condenser, drier and connecting tubing.

Product Dimensions & Weight

Dimensions (WxHxD with hinges, handles and doors):

35 3/4" x 70" x 31"

Dimensions (WxHxD without hinges and door):

35 3/4" x 68 7/8" x 24"

Dimensions (WxHxD with hinge and door, no handle):

35 3/4" x 70" x 28 1/2"

Weight: 279 lbs

Shipping Dimensions & Weight (WxHxD)

Dimensions: 38 1/4" x 76" x 31 1/4"

Weight: 300 lbs

Color	Model #	UPC Code
Fingerprint Resistant Stainless Steel	RF23R6201SR	887276341286
Fingerprint Resistant Black Stainless Steel	RF23R6201SG	887276341279
Fingerprint Resistant Tuscan Stainless Steel	RF23R6201DT	887276341262
White	RF23R6201WW	887276341293



GE Profile 30" Slide-In Convection Gas Range with WiFi Connect Stainless Steel - PCGS930YPFS

Model PCGS930YPFS

Specifications

Height	100.00 cm - 39.37 in
Width	76.00 cm - 29.92 in
Depth	70.00 cm - 27.56 in
Weight	101.61 kg - 224.01 lb
Auto Shut-Off with Override	Yes
Convection Roast	Yes
Audible Preheat Signal	Yes
Auto Convection Conversion	Yes
Automatic Self-Clean Oven Door Lock	Yes
Bake Power Rating	16,000 BTU
Broil Power Rating	16,500 BTU
Burner - Centre	9
Burner - Front Left	21
Burner - Front Right	15
Burner - Rear Left	5
Burner - Rear Right	9
Total Oven Capacity	5.6 cu ft
Cleaning Type	Self Clean with Steam Clean
Colour	Fingerprint Resistant Stainless Steel
Convection	True European Convection
Cooktop Type	Gas

Cooktop Surface	Stainless Steel
Delay Self Clean	Yes
Digital Display	Yes
Drawer Type	Storage
Edge-to-Edge Cooktop	Yes
Proof Mode	Yes
Fuel Type	Gas
Grates	3 Heavy Cast Iron with Centre Griddle
Griddle	Yes
Convection Bake	Yes
In-Oven Broil	Yes
Delay Start	Yes
LP Conversion Kit	Yes
Interior Oven Light	Yes
Sabbath Mode	Yes
Rack Positions	6
Number of Burners	5
Oven Racks	3 Heavy Duty Self Clean
Grates	2 Heavy Cast Iron with Centre Griddle
Meat Probe	Yes
Reversible Grill	Yes
Broil	Yes
Style	Single Oven
Width	25" - 30"
Oven Temperature Control	Electronic Control
Format	Slide-In
Volts; Hertz; Amps	120 v / 60 Hz / 15A
Warranty	1 Year Limited Parts & Labour
Wifi Connect	Yes
Accessories	Optional SI Filler Kit JXFILLR1SS
Control Lock Capability	Yes
Burner Type	Sealed
Dishwasher Safe Grates	Yes
Electronic Clock and Timer	Yes
Ignition System	Electronic
Oven Interior Dimensions (W x H x D) (in.)	24 x 19.88 x 20.63
Chef Connect	Yes
Pizza	Yes
No Preheat Air Fry	Yes

Questions? Call 1.800.GE.CARES (1.800.432.2737) or visit www.GEAppliances.com

IN THE COMMONWEALTH OF MASSACHUSETTS

■ This product must be installed by a licensed plumber or gas fitter.

■ When using ball type gas shut-off valves, they shall be the T-handle type.

■ A flexible gas connector, when used, must not exceed 3 feet.

If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or death.

Installation must be performed by a qualified installer.

Read these instructions completely and carefully.

Installation of this range must conform with local codes, or in the absence of local codes, with the National Fuel Gas Code, ANSI Z223.1/NFPA 54, latest edition. In Canada, installation must conform with the current Natural Gas Installation Code, CAN/CGA-B149.1 or the current Propane Installation Code, CAN/CGA-B149.2, and with local codes where applicable. This range has been design-certified by CSA International according to ANSI Z21.1, latest edition and Canadian Gas Association according to CAN/CGA-1.1 latest edition.

Leak testing of the appliance shall be conducted according to the manufacturer instructions.

The range must be electrically grounded in accordance with local codes or, in the absence of local codes, in accordance with the National Electrical Code (ANSI/NFPA 70, latest edition). In Canada, electrical grounding must be in accordance with the current CSA C22.1 Canadian Electrical Code Part 1 and/or local codes. See Electrical Connections in this section.

Do not install this product with an air curtain hood or other range hood that operates by blowing air down on the cooktop. This airflow may interfere with operation of the gas burners resulting in fire or explosion hazard.

⚠ WARNING

Tip-Over Hazard

- A child or adult can tip the range and be killed.
- Install the anti-tip bracket to the wall or floor.
- Engage the range to the anti-tip bracket by sliding the range back such that the foot is engaged.
- Re-engage the anti-tip bracket if the range is moved.
- Failure to do so can result in death or serious burns to children or adults.

Anti-Tip Bracket
Kit Included

If you did not receive an anti-tip bracket with your purchase, call 1.800.626.8774 to receive one at no cost. (In Canada, call 1.800.561.3344.) For installation instructions of the bracket, visit: www.GEAppliances.ca. (In Canada, www.GEAppliances.ca.)

Shut off the main gas supply valve before disconnecting the old range and leave it off until the new hook-up has been completed. Don't forget to relight the pilot on other gas appliances when you turn the gas back on.

Because hard piping restricts movement of the range, the use of a CSA International-certified flexible metal appliance connector is recommended unless local codes require a hard-piped connection.

If the hard piping method is used, you must carefully align the pipe; the range cannot be moved after the connection is made.

When using pressures greater than 1/2 psig to pressure test the gas supply system of the residence, disconnect the range and individual shut-off valve from the gas supply pipe. When using pressures of 1/2 psig or less to pressure test the gas supply system, simply isolate the range from the gas supply system by closing the individual shut-off valve.

When checking for proper operation of the regulator, the inlet pressure must be at least 1" greater than the operating (manifold) pressure as given on rating label of product.

*Teflon: Registered trademark of DuPont

Gas Flow into Range

Flexible Option

Pressure regulator

Adapter

Flex connector (6 ft. max.)

Adapter

1/2" or 3/4" Gas pipe

Gas shut-off valve

Rigid Pipe Option

Elbow

Elbow

Nipple

Union

Nipple

Pressure regulator

Gas shut-off valve

1/2" or 3/4" Gas pipe

Installer: Inform the consumer of the location of the gas shut-off valve.

Phillips screwdriver

Flat-blade screwdriver

Pencil and ruler

Pipe wrenches (2)
(one for backup)

Open-end or adjustable wrench

Level

Drill, awl or nail

- Gas line shut-off valve
- Pipe joint sealant or UL-approved pipe thread tape with Teflon* that resists action of natural and LP gases
- Flexible metal appliance connector (1/2" I.D.). A 5-foot length is recommended for ease of installation but other lengths are acceptable. Never use an old connector when installing a new range.
- Flare union adapter for connection to gas supply line (3/4" or 1/2" NPT x 1/2" I.D.)
- Flare union adapter for connection to pressure regulator on range (1/2" NPT x 1/2" I.D.)
- Liquid leak detector or soapy water.

*Teflon: Registered trademark of DuPont

IMPORTANT — Save these instructions for local inspector's use.

IMPORTANT — Observe all governing codes and ordinances.

IMPORTANT — Remove all packing material and literature from oven before connecting gas and electrical supply to range.

IMPORTANT — To avoid damage to your cabinets, check with your builder or cabinet supplier to make sure that the materials used will not discolor, delaminate or sustain other damage. This oven has been designed in accordance with the requirements of UL and CSA International and complies with the maximum allowable wood cabinet temperatures of 194°F (90°C).

Note to Installer — Be sure to leave these instructions with consumer.

Note to consumer — Keep these instructions for future reference.

Service — The electrical diagram is in an envelope attached to the back of the range.

Proper installation is the responsibility of the installer.

covered under warranty.

Before installing your range on an insole or any other synthetic floor covering, make sure the floor covering can withstand 180°F without shrinking, warping or discoloring. Do not install the range over carpeting unless a sheet of 1/4" thick plywood or similar insulator is placed between the range and carpeting.

Mobile Home - Additional Installation Requirements

The installation of this range must conform to the Manufactured Home Construction and Safety Standard, Title 24 CFR, Part 3280 (formerly the Federal Standard for Mobile Home Construction and Safety, Title 24 CFR, Part 220). When such standard is not applicable, use the Standard for Manufactured Home Installations, ANSI A225.1/ NFPA 501A or with local codes.

In Canada, the installation of this range must conform with the current standards CAN/CSA-A240-latest edition, or with local codes.

When this range is installed in a mobile home, it must be secured to the floor during transport. Any method of securing the range is adequate as long as it conforms to the standards listed above.

WARNING Shock Hazard: This appliance must be properly grounded. Failure to do so can result in electric shock.

Electrical Requirements – 120-volt, 60 Hertz, properly grounded dedicated circuit protected by a 15-amp or 20-amp circuit breaker or time delay fuse.

Note: Use of automatic, wireless, or wired external switches that shut off power to the appliance are not recommended for this product.

Grounding

The power cord of this appliance is equipped with a three-prong (grounding) plug which plugs into a standard three-prong grounding wall receptacle to minimize the possibility of electric shock hazard from this appliance.

The customer should have the wall receptacle and circuit checked by a qualified electrician to make sure the receptacle is properly grounded.

obligation of the customer to have it replaced with a properly grounded three-prong wall receptacle.

DO NOT, UNDER ANY CIRCUMSTANCES, CUT OR REMOVE THE THIRD (GROUND) PRONG FROM THE POWER CORD. DO NOT USE AN ADAPTER. DO NOT USE AN EXTENSION CORD.

Ground Fault Circuit Interrupters (GFCI's) are not required or recommended for gas range receptacles. Performance of the range will not be affected if operated on a GFCI-protected circuit but occasional nuisance tripping of the GFCI breaker is possible.

⚠️ WARNING Fire or Explosion Hazard:
Do not operate the burner without all burner parts in place.

OR

Make sure the notch in the burner head is positioned over the electrode.

Front right burner

Left Center Right


Diagram illustrating the burner assembly process. It shows a burner being placed onto a burner head with a notch, ensuring the notch is positioned over the electrode. The diagram also shows the front right burner with a hole and electrode. The final assembly shows the burner head with the burner in place, labeled 'Left', 'Center', and 'Right'.

Provide adequate clearances between the range and adjacent combustible surfaces. These dimensions must be met for safe use of your range.

Allow 30" (76.2 cm) minimum clearance between burners and bottom of unprotected wood or metal cabinet, or allow a 24" (61 cm) minimum when bottom of wood or metal cabinet is protected by no less than 1/4" (6.4 mm) thick flame-retardant mildboard covered with no less than 1/8" (3.2 mm) thick stainless steel, .025" (0.64 mm) aluminum or .020" (0.5 mm) copper.

Installation of a listed microwave oven or cooking appliance over the cooktop shall conform to the installation instructions packed with that appliance.

For island installation, maintain 2-1/2" minimum from cutout to back edge of countertop and 3" minimum from cutout to side edges of countertop.

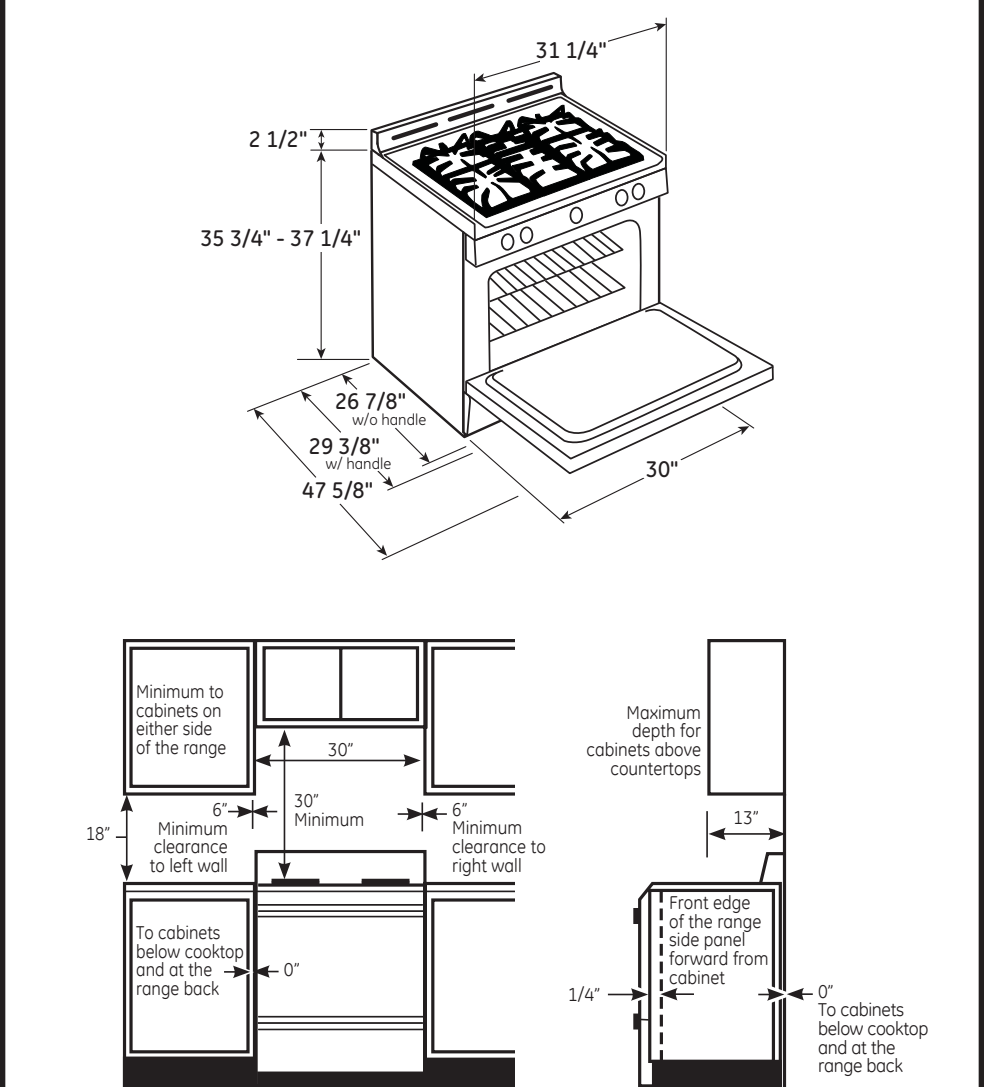

Push and turn knob to LITE position. You will hear a **clicking** sound indicating proper operation of the spark module. Once the air has been purged from the supply lines, burners should light within 4 seconds. After burner lights, rotate knob out of the LITE position. Try each burner in succession until all burners have been checked.

Quality of Flames

The flame quality of the burners needs to be determined visually.

If burner flames look like (A), call for service. Normal burner flames should look like (B) or (C), depending on the type of gas you use.

With LP gas, some yellow tipping on outer cones is normal.

(A) Yellow flames—
Call for service

(B) Yellow tips on outer cones—
Normal for LP gas

(C) Soft blue flames—
Normal for natural gas

■ **To remove the oven bottom:**

- Remove the screws holding down rear of the oven bottom.
- Grasp the oven bottom at rear slots on each side.
- Lift the rear of the oven bottom and slide it back until it clears the lip of the range frame at the front. Then lift bottom up and out.

The diagram illustrates the removal of the oven bottom. It shows a top-down view of the oven's interior. A rectangular component, labeled 'Oven bottom', is shown being lifted from its position. An arrow points to the rear edge of this component, which is labeled 'Slots'. Another arrow points directly to the 'Oven bottom' component. The component is shown being moved towards the rear of the oven cavity, where it will clear the front lip of the range frame.

■ **Check broil burner using the same method as the bake burner.**

- Flames should have approximately 1" blue cones.
- Natural gas should burn with no yellow flames.
- LP gas flames have slight yellow tips
- After warming up, the flame should not lift off the burner.

To adjust the flow of air to either burner, loosen the Phillips head screw and rotate the shutter as needed.

shutter more than the original setting. Check flames again and adjust further if necessary. Replace oven bottom.

Bake Burner

Dual Broil Burner

GAS PIPE AND ELECTRICAL OUTLET LOCATIONS

Recommended area for 120V outlet on rear wall and area for **through-the-wall** connection of pipe stub and shut-off valve.

Recommended area for **through-the-floor** connection of pipe stub and shut-off valve.

If the countertop has a raised edge, shave the raised edge to clear the control panel as shown below.

The diagram illustrates the required clearances for a gas appliance. Key dimensions include:

- 30" height for the rear wall outlet area.
- 4 1/2" width for the rear wall outlet area.
- 39" to 36-1/2" clearance from the countertop for the rear wall outlet area.
- 5" height for the rear wall outlet area.
- 8" height for the rear wall outlet area.
- 24" Max. height for the rear wall outlet area.
- 4" width for the rear wall outlet area.
- 9" height for the rear wall outlet area.
- 14 1/2" width for the rear wall outlet area.
- 3" width for the rear wall outlet area.
- 2" width for the rear wall outlet area.
- 9/16" clearance for the control panel.

CAUTION To prevent drafts from affecting burner operation, seal all openings in floor under appliance and behind appliance wall.

This range leaves the factory set for use with natural gas. If you want to convert to LP gas, the conversion must be performed by a qualified LP gas installer.

The conversion orifices and instructions can be found on back of the range.

Keep these instructions and all orifices in case you want to convert back to natural gas.

The diagram shows the rear panel of a gas range. It features a large rectangular access panel in the center, flanked by two vertical columns of burner orifices. At the bottom, there is a control panel with knobs and a gas valve assembly. A circular callout with an arrow points to a small rectangular box on the lower left side of the rear panel, labeled 'Orifice Box (location may vary)'.

WARNING Never completely remove the leveling leg as the range will not be secured to the anti-tip device properly.

Follow instructions supplied with ANTI-TIP bracket

Anti-Tip Bracket Kit Included

A. Position the range in front of the cabinet opening. Measure from the floor to the top of the countertop at the rear of the cabinet near the anti-tip bracket. If necessary, adjust the unit by carefully screwing in or out the leveling legs until the cooktop overhang matches the countertop height at the rear (There will not be access to the rear leveling legs once installed).

B. Push while lifting the range into the opening until the range is within 2" (5.1 cm) of engaging the anti-tip bracket.

C. Plug the range cord into the receptacle. Locate the flexible gas line in back of the range in a manner that it will not touch or be moved by the drawer (if provided). Carefully push the range into the opening until the unit is fully seated into the cabinet. There will be approximately a ¼" gap between the unit and back wall.

D. Carefully screw in the front two leveling legs until the cooktop overhang touches the countertop.

E. Look under the unit and verify that the rear leg is fully engaged with the anti-tip device. If not, remove the unit and adjust the height of the rear leg so that it is properly engaged.

Position gas line so that there is no interference with the storage drawer

Rear Wall

Storage Drawer

Side View

Make sure all controls are left in the off position. Make sure the flow of combustion and ventilation air to the range is unobstructed.