



APPLIANCE CHECKLIST

It may seem early to be thinking about appliances, but they are an important part of your kitchen design and may require upgrades to your HVAC, plumbing and electrical plans. It’s important that we are provided with your appliance information during the structural and foundation part of the Design Process, so that these upgrades can be included on your invoice, if required.

ITEM	BRAND	MODEL NUMBER
FRIDGE	FRIGIDAIRE	GRMC2273CF
DISHWASHER	BOSCH	SHX5AEM5N
RANGE	GE	PCHS920YMFS
Type: Gas <input type="checkbox"/> Electric <input type="checkbox"/> Induction <input checked="" type="checkbox"/> Waterline Required <input type="checkbox"/> Electrical: 15 Amp <input type="checkbox"/> 40 Amp <input checked="" type="checkbox"/> 50 Amp <input type="checkbox"/>		
WALL OVEN	NA	
Type: Gas <input type="checkbox"/> Electric <input type="checkbox"/> Waterline Required <input type="checkbox"/> Electrical: 30 Amp <input type="checkbox"/> 40 Amp <input type="checkbox"/>		
WARMING DRAWER	NA	
Electrical: 15 Amp <input type="checkbox"/> Other: Specify		
COOKTOP	NA	
Type: Gas <input type="checkbox"/> Electric <input type="checkbox"/> Induction <input type="checkbox"/> Electrical: 15 Amp <input type="checkbox"/> 40 Amp <input type="checkbox"/> 50 Amp <input type="checkbox"/>		
MICROWAVE	TOSHIBA	ML-EM25P(SS)/CA
Electrical: 15 Amp <input checked="" type="checkbox"/> 30Amp <input type="checkbox"/> 240 Volt <input type="checkbox"/> 120 Volt <input checked="" type="checkbox"/>		
MICROWAVE TRIM KIT	NA	
OTR MICROWAVE	NA	
WASHING MACHINE		
DRYER		
Type: Gas <input type="checkbox"/> Electric <input checked="" type="checkbox"/> Stacked <input checked="" type="checkbox"/>		
OTHER: WINE/BEV FRIDGE	FRIGIDAIRE	FGBC5334VS
OTHER: HOODFAN	CYCLONE	SCB31930
OTHER:		

Hood Fans must be purchased through Phoenix Homes, and will require an upgrade to a make up air system for any hood fans above 300CFM. Standard hood fan vent pipe is 6”.

A make up air system is a required upgraded for all gas stoves/cooktops.

Any changes from the standard kitchen plan and/or standard electrical, plumbing and electrical specifications/plans may be subject to additional fees.

Community: WHITETAIL RIDGE (4) Lot #: 140


Purchaser Signature:

DocuSigned by:
Robyn McChesney
A669DFD8580E40F...

Purchaser Signature:

Signed by:
She McGe
C0A1D98E2C1246D...

WT4 LOT 140 - DISHWASHER SHX5AEM5N



24" Bar Handle Dishwasher

100 Series Premium – Stainless Steel SHX5AEM5N



BOSCH
Invented for life



SHX5AEM5N
Stainless Steel

Also available in:

- White SHX5AEM2N
- Black SHX5AEM4N
- Stainless Steel SHX5AEM5N
- Black SHX5AEM6N

A 3rd rack provides 30% more loading space¹ for your utensils, giving the other racks more space for dishes.

Features & Benefits

With Bosch PrecisionWash[®], just scrape and load. No pre-rinsing required for a beautiful clean.

46 dBA: Quietest dishwasher brand in North America.²

RackMatic[®] adjusts the upper rack to 9 different positions, allowing for taller items like stemware or leaving room for pots and pans below.

Home Connect[®] lets you monitor and control your appliance remotely, via the Home Connect[®] app.

24/7 Overflow Protection System[®] helps prevent water leaks, even when your dishwasher is off.

General Properties

Number of wash cycles	5 + 3 additional in Home Connect [®]
Number of options	3 + 4 additional in Home Connect [®]
dBA	46
Wash system	PrecisionWash [®]
Drying system	PureDry [®]
Third rack	Standard 3rd rack
Rack adjustability	RackMatic [®]
Tub material	Stainless steel/polypropylene
Control type	Touch
Concealed water heating element	Yes
Leak protection system	24/7 Overflow Protection
NSF [®] -certified ³ sanitize option	Yes
Water softener	No
Five-level wash	Yes
Child Lock button suspension	No
Home Connect [®] (Wi-Fi enabled)	Yes
Anti-Fingerprint Finish	Yes
Special features	InfoLight [®]

Efficiency

Water usage per cycle	3.5 gal
Total annual energy consumption	269 kWh

Capacity

Number of place settings	15
--------------------------	----

Technical Details

Watts	1440 W
Current	12 Amps
Volts	120 V
Frequency	60 Hz
Power cord full length	67"
Power cord install length from edge of unit when facing the door	Left – 45" Right – 50"
Minimum water pressure	14 lb/sin
Length outlet hose	90 1/2"

Dimensions & Weight

Overall appliance dimensions (HxWxD)	33 7/8" x 23 9/16" x 22 9/16"
Required cutout size (HxWxD)	33 7/8" x 24" x 24"
Adjustable feet	Yes
Net weight	67 lbs

Accessories—Optional

Supply Hose Kit with Elbow	SMZSH1ABUC
Junction Box	SMZPCJB1UC
Dishwasher Drain Hose Extension	SGZ1010UC
Dishwasher Accessory Kit	SMZ5000
DoubleFlex Silverware Basket	SMZ4000UC
Edge Protector + Power Cord Clip Install Kit	SMZEPCC1UC

 Home Connect



¹Compared to Bosch dishwasher with two racks.
²Based on an average of sound ratings of 24" Full Size Stainless Steel Tub dishwashers contained in major brands US & Canadian websites. Major brands defined as TraQline Top 5 Market Share (US & Canada) December 2021.
³Certification to NSF/ANSI Standard 184 for residential dishwashers.

Accessories: To purchase Bosch accessories, cleaners & parts please visit www.bosch-home.com/us/store or call 1-800-944-2904 (Mon to Fri 5 am to 6 pm PST, Sat 6 am to 3 pm PST).
Notes: All height, width and depth dimensions are shown in inches. BSH reserves the absolute and unrestricted right to change product materials and specifications, at any time, without notice. Consult the product's installation instructions for final dimensional data and other details prior to making cutout.
Warranties: Please see Use & Care manual or Bosch website for statement of limited warranty.
For more information on our entire line of products, go to www.bosch-home.com/us or call 1-800-944-2904
© BSH Home Appliances Corporation. All rights reserved. Bosch is a registered trademark of Robert Bosch GmbH.

24" Bar Handle Dishwasher






100 Series Premium – Stainless Steel SHX5AEM5N



BOSCH
Invented for life



Installation Details

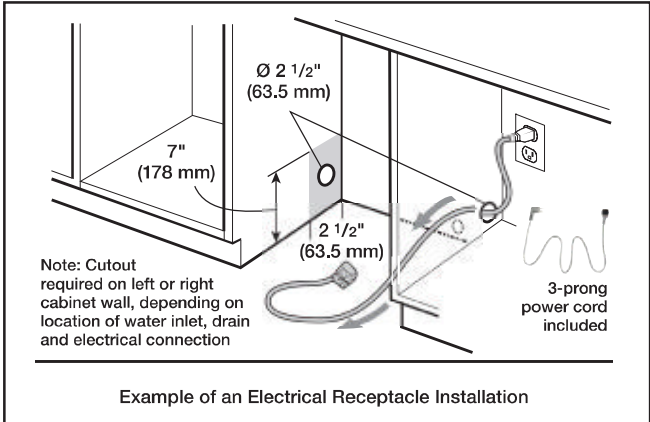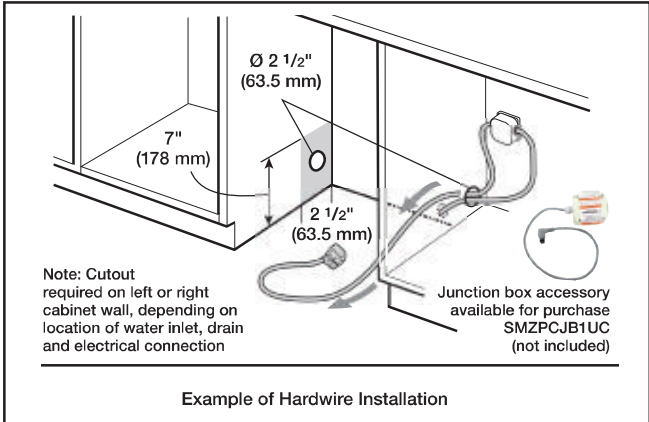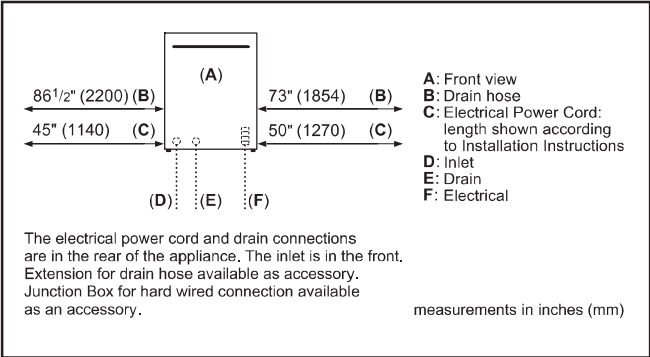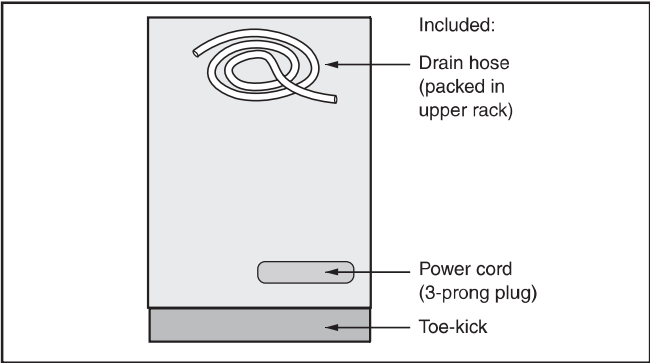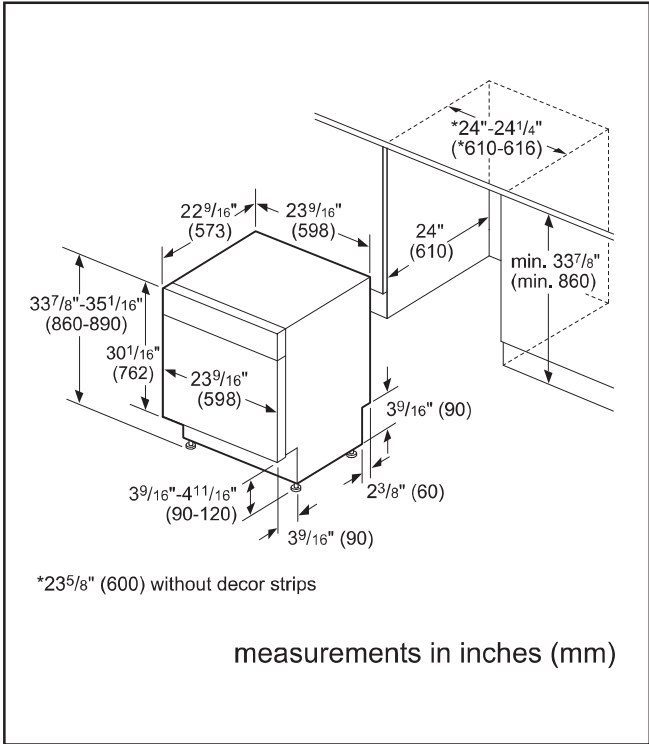

Accessories: To purchase Bosch accessories, cleaners & parts please visit www.bosch-home.com/us/store or call 1-800-944-2904 (Mon to Fri 5 am to 6 pm PST, Sat 6 am to 3 pm PST).

Notes: All height, width and depth dimensions are shown in inches. BSH reserves the absolute and unrestricted right to change product materials and specifications, at any time, without notice. Consult the product's installation instructions for final dimensional data and other details prior to making cutout.

Warranties: Please see Use & Care manual or Bosch website for statement of limited warranty.

For more information on our entire line of products, go to www.bosch-home.com/us or call 1-800-944-2904



© BSH Home Appliances Corporation. All rights reserved. Bosch is a registered trademark of Robert Bosch GmbH.

24" Bar Handle Dishwasher

100 Series Premium – Stainless Steel SHX5AEM5N



Installation Details

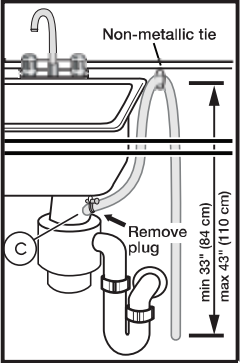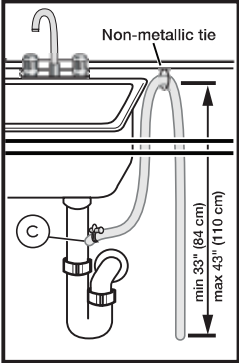

Note: Plumbing installations will vary - refer to local codes. Drain hose included is 90 1/2" (230 cm) and can be extended to a maximum of 168 1/2" (428 cm).

Always use the approved drain hose extension kit (SGZ1010UC).

Ensure a portion of the drain hose is raised between min. 33" (84 cm) and max. 43" (110 cm) above the cabinet floor.

Accessories: To purchase Bosch accessories, cleaners & parts please visit www.bosch-home.com/us/store or call 1-800-944-2904 (Mon to Fri 5 am to 6 pm PST, Sat 6 am to 3 pm PST).


Notes: All height, width and depth dimensions are shown in inches. BSH reserves the absolute and unrestricted right to change product materials and specifications, at any time, without notice. Consult the product's installation instructions for final dimensional data and other details prior to making cutout.

Warranties: Please see Use & Care manual or Bosch website for statement of limited warranty.

For more information on our entire line of products, go to www.bosch-home.com/us or call 1-800-944-2904

© BSH Home Appliances Corporation. All rights reserved. Bosch is a registered trademark of Robert Bosch GmbH.

WT4 LOT 140 - FRIDGE GRMC2273CF



Frigidaire Gallery



French Door Refrigerator

21.5 Cu. Ft. Counter-Depth 4-Door French Door Refrigerator

GRMC2273CF, GRMC2273CD

Available Colors : Stainless Steel, Black Stainless Steel

Version : 04/22

Refrigerator

Adjustable Temperature Drawer	Yes
Air Filter	Yes
Crisper Color	Clear
Dairy Bin	Yes
Door Bin Color	Clear
Humidity Controls	Automatic
Interior Lighting	MultiLevel LED
Shelf Material	Glass
Water Filter	Yes
Number of Adjustable Gallon Door Bins	2
Number of Fixed Condiment Door Bins	1
Number of Fixed Gallon Door Bins	1
Number of Other Door Bins	2
Total Number of Door Bins	7
Number of Adjustable Shelves	2
Number of Fixed Shelves	1
Number of Crispers	2

Freezer

Auto Close Drawer	Yes
Automatic Defrost	Yes
Basket Divider	Yes
Baskets / Bins Color	White
Drawer Color	White
Interior Lighting	LED
Shelf Material	Glass
Number of Baskets / Bins	1
Number of Pull Out Shelves	1
Total Number of Shelves	1

Ice Maker

Ice Maker	Yes
Ice Maker Location	Fresh Food Section
Ice Shape	Pyramid
Second Ice Maker	No

Convertible Compartment

Adjustable Drawer Divider	Yes
Control Location	Drawer
Convertible Drawer	Yes
Interior Lighting	LED
Temperature Range	-6° to 45°F

Controls

Air Filter Indicator	Yes
Control Location	Dispenser
Digital Display	Yes
Door Ajar Alarm	Yes
Control Lock	Yes
Ice Maker On/Off	Yes
Power Failure Alarm	Yes
Sabbath Mode	Yes
Second Control Location	Drawer
Water Filter Indicator	Yes

Dispenser

Crushed Ice	Yes
Cube Ice	Yes
Dispenser	Yes
Dispenser Height	10 4/10"
Light Control	Yes
Water	Yes

Exterior

Counter-Depth	Yes
Door Finish	Smooth
Door Stops	Yes
Front Rollers	Yes

Dimensions and Volume

Height With Hinge	70 3/16"
Height Without Hinge	70"

Note: For planning purposes only. Always consult local and national electric, gas and plumbing codes.
Refer to Product Installation Guide for detailed installation instructions on the web at frigidaire.com / frigidaire.ca
Specifications subject to change. Accessories information available on the web at frigidaire.com / frigidaire.ca

USA • 10200 David Taylor Drive • Charlotte, NC 28262 • 1-800-FRIGIDAIRE • frigidaire.com
CANADA • 5855 Terry Fox Way • Mississauga, ON L5V 3E4 • 1-800-265-8352 • frigidaire.ca

Frighdaire Gallery

21.5 Cu. Ft. Counter-Depth 4-Door French Door Refrigerator

GRMC2273CF, GRMC2273CD

Version : 04/22

Height Without Hinge	70"
Width	35 9/10"
Width of Cabinet	35 6/10"
Depth of Cabinet	24 6/10"
Depth With Door	29 1/2"
Depth With Door 90° Open	46 9/10"
Depth With Door and Handle	32"
Depth With Drawer Open	45 1/4"
Convertible Zone Capacity	2.6 Cu. Ft.
Freezer Capacity	5.8 Cu. Ft.
Fresh Food Capacity	13.1 Cu. Ft.
Total Capacity	21.5 Cu. Ft.

Electrical Specifications

Minimum Circuit Required	15 Amps
--------------------------	---------

General Specifications

Annual Energy	668 kWh
Condenser Type	Dynamic
Cooling System	Dual Evaporator
Leveling Legs	Yes
Prop 65 Label	Yes
Refrigerant Type	R-600A
Warranty - Labor	1 Year
Warranty - Parts	1 Year

Performance Certifications and Approvals

ENERGY STAR Certified	Yes
-----------------------	-----

Safety Certifications and Approvals

CSA Listed	Yes
------------	-----

Note: For planning purposes only. Always consult local and national electric, gas and plumbing codes.
Refer to Product Installation Guide for detailed installation instructions on the web at [frigidaire.com](#) / [frigidaire.ca](#)
Specifications subject to change. Accessories information available on the web at [frigidaire.com](#) / [frigidaire.ca](#)


USA • 10200 David Taylor Drive • Charlotte, NC 28262 • 1-800-FRIGIDAIRE • [frigidaire.com](#)
CANADA • 5855 Terry Fox Way • Mississauga, ON L5V 3E4 • 1-800-265-8352 • [frigidaire.ca](#)

Frigidaire Gallery

21.5 Cu. Ft. Counter-Depth 4-Door French Door Refrigerator

GRMC2273CF, GRMC2273CD

Version : 04/22

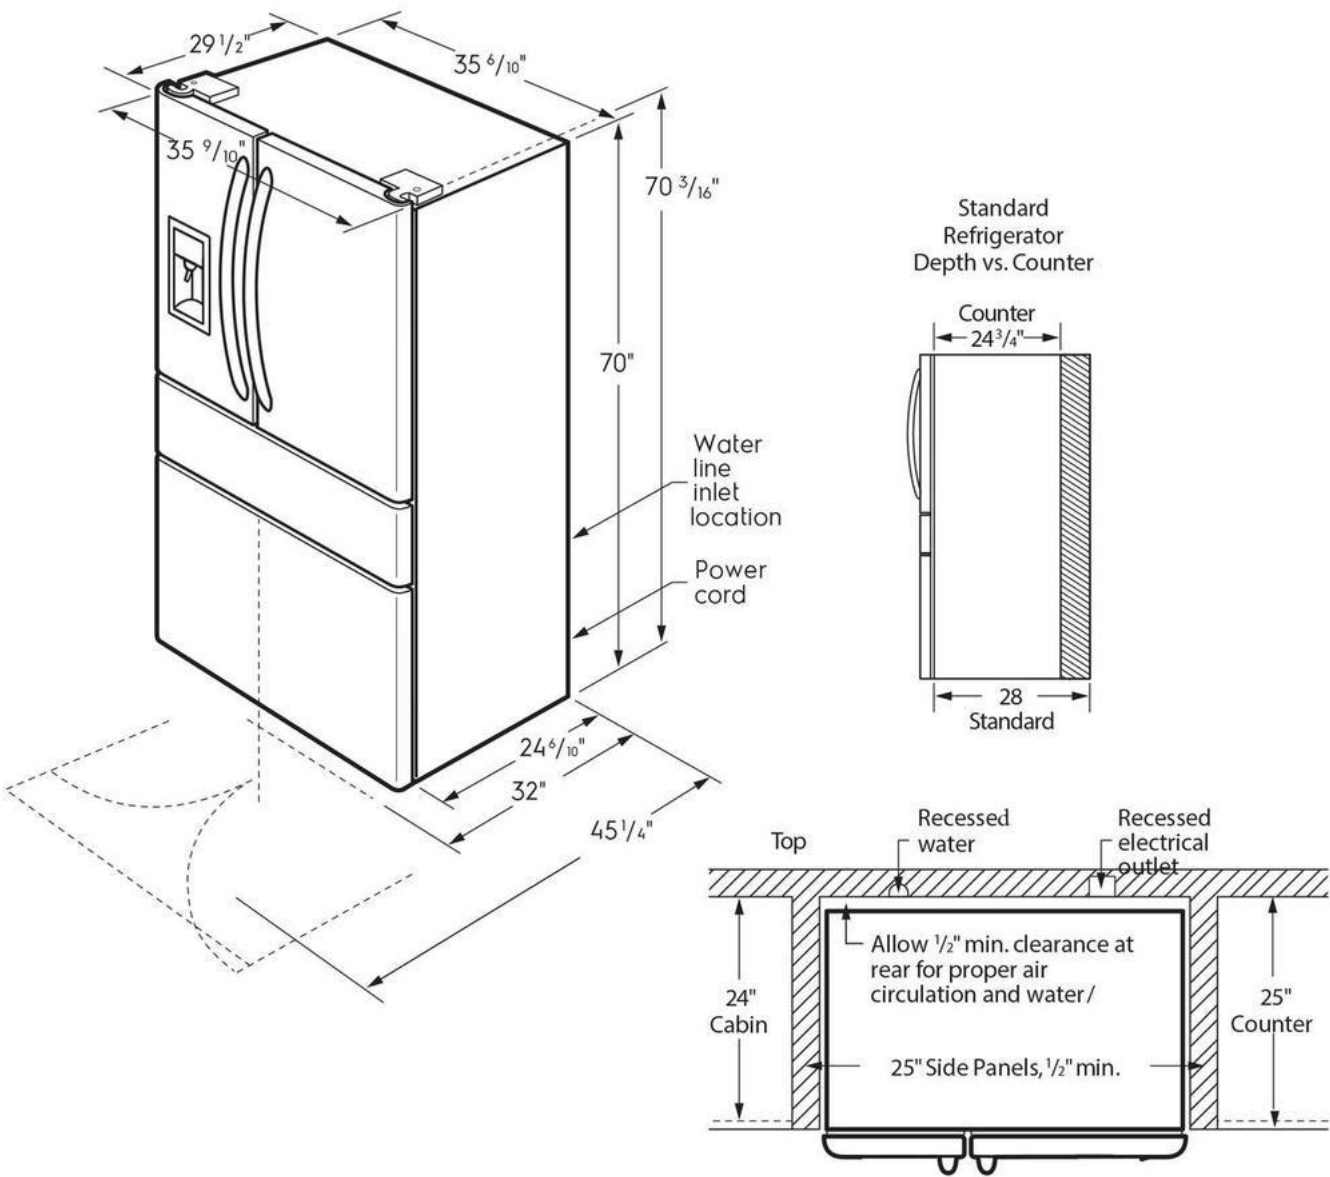

Note: For planning purposes only. Always consult local and national electric, gas and plumbing codes.
Refer to Product Installation Guide for detailed installation instructions on the web at frigidaire.com / frigidaire.ca
Specifications subject to change. Accessories information available on the web at frigidaire.com / frigidaire.ca

USA • 10200 David Taylor Drive • Charlotte, NC 28262 • 1-800-FRIGIDAIRE • frigidaire.com
CANADA • 5855 Terry Fox Way • Mississauga, ON L5V 3E4 • 1-800-265-8352 • frigidaire.ca

SC(B)319 | ALITO Collection



Wall Mount

Our most popular and best-selling model, the SC300, has been redesigned to have the bright dual-setting LED lights on the front of the range hood to better illuminate your cooking surface where you need it most. This change may seem superficial but will make a huge difference for all involved and can help keep your project under budget.

Green Features



3 Speed Push Button Control Panel



Long-Lasting LED Lights



Time-Delay OFF Feature



Grease Cup



Model	Colour	Ducting	Filters	Size	CFM
SC31924	Stainless Steel	6"	Mesh	24"	300
SC31930	Stainless Steel	6"	Mesh	30"	300
SC31936	Stainless Steel	6"	Mesh	36"	300
SCB31924	Stainless Steel	6"	Baffle	24"	300
SCB31930	Stainless Steel	6"	Baffle	30"	300
SCB31936	Stainless Steel	6"	Baffle	36"	300

Cyclone Range Hoods Inc.

1361 Huntingwood Drive, Unit 16, Toronto, ON, M1S 3J1, Canada.

Toll Free: 1-888-293-5662 Tel: (416) 293-0933 Fax: (416) 293-4793 Website: www.CycloneRangeHoods.com



Initial DS
SM RM

SC(B)319 | ALITO Collection



Features

- Wall mount range hood
- 6” round duct adapter
- Non-stick aluminum fan blades
- 3 speed push button control
- 2 LED lights (2 x 1.4W, 4000K)
- Quick release filters
- Standard chimney fits up to 9 ft. ceiling
- Up to 9 minutes time-delay OFF feature
- Plug-in connection

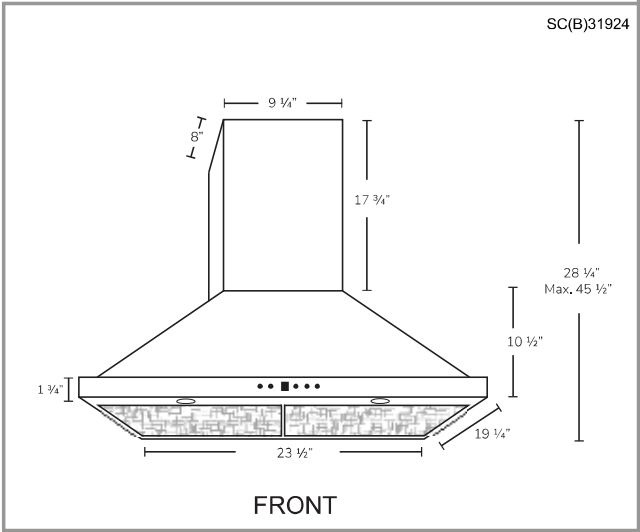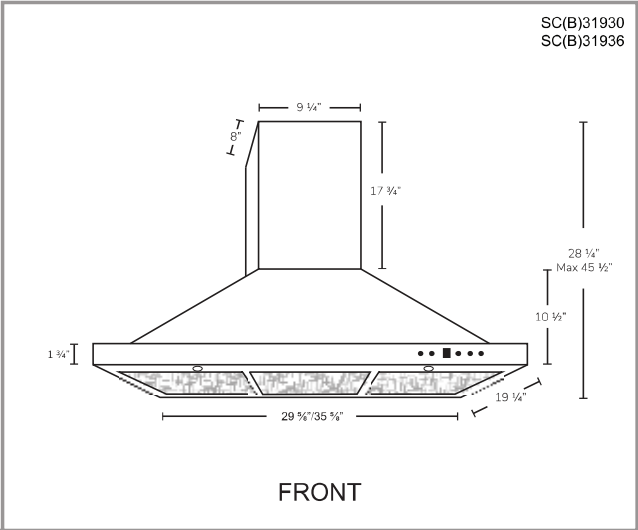

Options

- Filters:
 - SC319 - Quick Release Aluminum Mesh Filters
 - SCB319 - Quick Release Stainless Steel Baffle Filters
- Chimney Flues:
 - A1.CH10 - short (7'-8' ceilings)
 - A1.CH18 - standard (8'-9' ceilings)
 - A1.CH30 - extended (9'-11' ceilings)
- Widths: 24", 30", 36"

Specifications

- | | | |
|--------------------------------------|--------------------------------|---|
| ▪ Air Flow Volume: 300 CFM | ▪ Current: 2.5 Amps | ▪ Finishes: Stainless Steel |
| ▪ Electrical Connection: 120 V/60 Hz | ▪ Fan Speed: 1350 RPM | ▪ Ducting: 6" Round |
| ▪ Power Consumption: 300 Watts | ▪ Fan Type: Centrifugal Blower | ▪ Noise Level: Min. 2 Sones
Max. 4 Sones |




WT4 LOT 140 - MICROWAVE ML-EM25PSS-CA



Toshiba 0.9 Cu.Ft. Countertop Microwave

SPECIFICATIONS

Model:	ML-EM25P(SS)/CA
Rated Voltage:	120V ~60Hz
Rated Input Power (Microwave):	1,350W
Rated Out Power (Microwave):	900W
Oven Capacity:	0.9 Cu.Ft.
Turntable Diameter:	10.6 inch
External Dimensions:	19.1" x 16.1" x 11.5"
Net Weight:	27.3 lbs

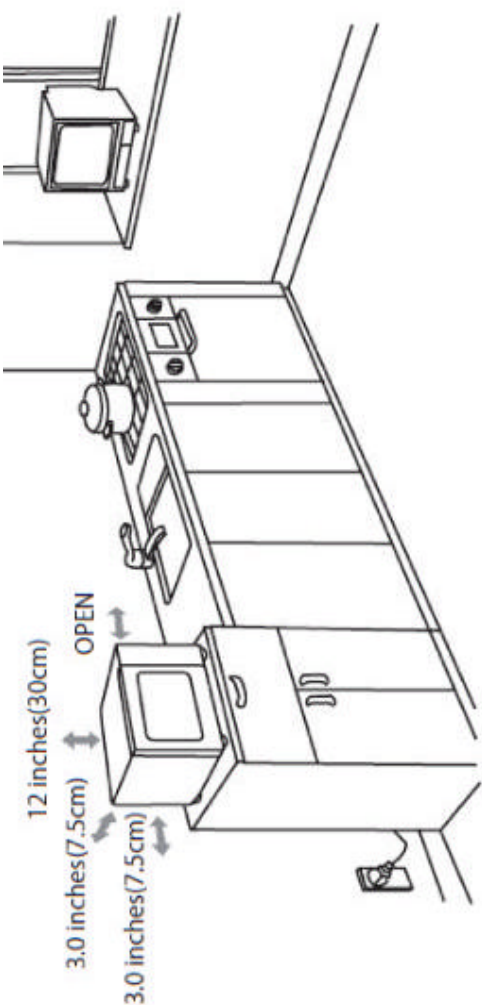

A minimum clearance of 3.0 inches (7.5cm) is required between the oven and any adjacent walls. One side must be open. Leave a minimum clearance of 12 inches (30cm) above the oven.

TOSHIBA



WT4 LOT 140 - RANGE PCHS920YMFS



Installation Instructions

30" Electric Slide-In Ranges

Questions? Call 1.800.661.1616 or visit www.GEAppliances.ca



BEFORE YOU BEGIN

Read these instructions completely and carefully.

- **IMPORTANT**—Save these instructions for local inspector's use.
- **IMPORTANT**—Observe all governing codes and ordinances.
- **Note to Installer** – Be sure to leave these instructions with Consumer.
- **Note to Consumer** – Keep these instructions for future reference.
- **Skill level** – Installation of this appliance requires basic mechanical skills and advanced electrical skills.
- Proper installation is the responsibility of the installer.
- Product failure due to improper installation is not covered under warranty.

⚠ WARNING: This appliance must be properly connected by means of the supplied cord and plug. If your kitchen does not have a receptacle, you must have one installed by a licensed electrician.

NOTE: Installation information for reference only. See Installation Instructions shipped with product for complete details and before attempting to install. Anti-tip bracket must be attached to the floor or wall to hold either right or left rear leg leveler. Make sure leg leveler reengages the bracket when range is moved for any reason.

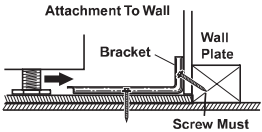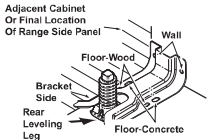

TOOLS YOU WILL NEED

- | | | |
|---------------------|--------------|-----------------|
| Drill with 1/8" Bit | Level | Pliers |
| Safety Glasses | Tape Measure | 1/4" Nut Driver |
| Adjustable Wrench | | |

1 REMOVE PACKAGING MATERIALS

Failure to remove packaging materials could result in damage to the appliance. Remove all packing parts from oven, racks, heating elements and drawer. Also, remove protective film and labels on the door, cooktop (do not remove side protection on glass cooktops) and backguard. Do not remove protective channel from sides of glass cooktop, if applicable, until later in installation.


NOTE: Cut the orange shipping ties from the power cord, being careful not to damage the cord.

2 PREPARE THE OPENING (FOR INDOOR USE ONLY)


If the countertop area is not flat, excess tension may be applied to the glass cooktop causing breakage and voiding the warranty. Make sure the wall covering, countertop, flooring and cabinets around the range can withstand the heat (up to 93°C [200°F]) generated by the range.

- A.** Allow 76.2 cm (30") minimum clearance between surface units and bottom of unprotected wood or metal cabinet, or allow a 61 cm (24") minimum when bottom of wood or metal cabinet is protected by no less than 6.3 mm (1/4") thick flame retardant millboard covered with no less than No. 28 MSG sheet metal .38 mm (.015") thick, .38 mm (.015") thick stainless steel, .63 mm (.025") aluminum or .5 mm (.020") copper.
- B.** A minimum 15.2 cm (6") spacing to surfaces less than 38.2 cm (15") above the cooktop and adjacent cabinetry is recommended to reduce exposure to steam, grease splatter and heat. Allow 6.3 mm (1/4") minimum clearance at the back wall.
- C.** The thickness of the countertop has to be a maximum of 3 cm (1.18").

To reduce the risk of burns or fire when reaching over hot surface elements, cabinet storage space above the cooktop should be avoided. If cabinet storage space is to be provided above the cooktop, the risk can be reduced by installing a range hood that projects at least 12.7 cm (5") beyond the front of the cabinets. Cabinets installed above the cooktop must be no deeper than 33 cm (13").

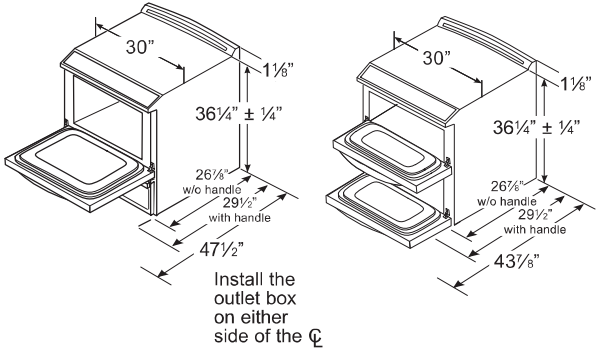


For all installations, install the required rear trim to back of range with 4 screws provided.

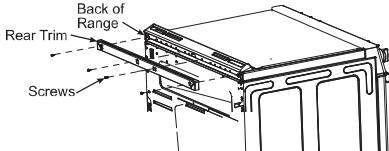


NOTE: Use a 4' power cord to prevent interference with the storage drawer. Power cords 4 1/2' to 6' long may have to be dressed to allow for proper drawer closing.

MINIMUM DIMENSIONS BETWEEN COOKTOP, WALLS AND ABOVE THE COOKTOP:

- A.** The range must be placed with 1/2" minimum clearance at the back wall and side walls of the cabinet. Make sure the wall covering, countertop, flooring and cabinets around the range can withstand the heat (up to 93.3°C/ 200°F) generated by the range.
- B.** Allow 30" minimum clearance between surface units and bottom of unprotected wood or metal cabinet, or allow a 24" minimum when bottom of wood or metal cabinet is protected by no less than 1/4" thick flame retardant millboard covered with not less than No.28 MSG sheet metal, (.015"), .015" thick stainless steel, .024" aluminum or .020" copper.
- C.** A 6" spacing to surfaces less than 15" above the cooktop is recommended to reduce exposure to steam, grease splatter and heat.

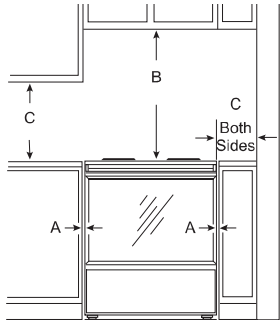


To reduce the risk of burns or fire when reaching over hot surface elements, cabinet storage space above the cooktop should be avoided. If cabinet storage space is to be provided above the cooktop, the risk can be reduced by installing a range hood that projects at least 5" beyond the front of the cabinets. Cabinets installed above the cooktop must be no deeper than 13"

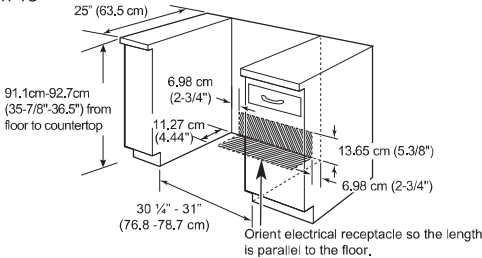

3 PREPARE THE RANGE

STORAGE DRAWER REMOVAL

- A. Pull drawer out until it stops.
B. Lift front of drawer until the stops clear the guide.
C. Pull forward and remove the drawer.

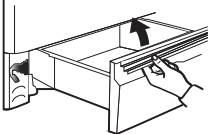


DOOR REMOVAL (optional)

Door removal is not a requirement for installation of the product but is an added convenience.

To remove the door:

- A. Open the oven door as far as it will go.
B. Push both hinge locks down toward the door frame to the unlocked position. This may require a flat-blade screwdriver, **DO NOT LIFT THE DOOR BY THE HANDLE!**
C. Place hands on both sides of the door, and close the oven door to the removal position. (Approximately 2,5 cm–5 cm [1"–2"] from the closed position.)
D. Lift door up and out until the hinge arms clear the slots. Hinge clears slot

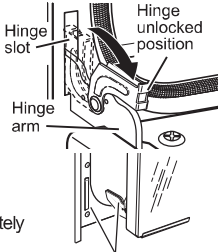

NOTE: The oven door is very heavy. Be sure you have a firm grip before lifting the oven door off the hinges. Use caution once the door is removed. Do not lay the door on its handle. This could cause dents or scratches.

4 ANTI-TIP DEVICE INSTALLATION



⚠ WARNING

- All ranges can tip.
- BURNS or other **SERIOUS INJURIES** can result.
- **INSTALL and CHECK** the ANTI-TIP bracket following the instructions supplied with the bracket.

To reduce the risk of tipping the range, the range must be secured by a properly installed anti-tip bracket. See installation instructions shipped with the bracket for complete details before attempting to install.



To check if the bracket is installed and engaged properly, remove the storage drawer or kick panel and look underneath the range to see

that the leveling leg is engaged in the bracket. On models without a storage drawer or kick panel, carefully tip the range forward. The bracket should stop the range within 10 cm (4"). If it does not, the bracket must be reinstalled. If the range is pulled from the wall for any reason, always repeat this procedure to verify the range is properly secured by the anti-tip bracket. Never completely remove the leveling legs or the range will not be secured to the anti-tip device properly.

5 LEVEL THE RANGE

⚠ WARNING Never completely remove the leveling leg as the range will not be secured to the anti-tip device properly.

- A. Plug in the unit.
B. Measure the height of your countertop at the rear of the opening (X).
C. Adjust two rear leveling legs so that the rear of cooktop is at the same height or higher than the counter (Y).
D. Slide unit into place.
E. Install oven shelves in the oven and position the range where it will be installed.
F. Check for levelness by placing a spirit level on one of the oven shelves. Take two readings-with the level placed diagonally first in one direction and then the other.
G. Adjust front leveling legs until the range is level.
H. Look under the unit and verify that the rear leg is fully engaged with the anti-tip device. If not, remove the unit and adjust the height of the rear leg so that it is properly engaged.

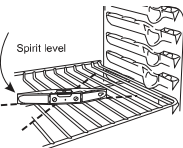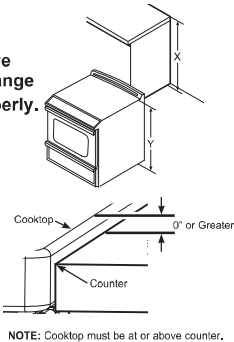


6 REPLACING THE OVEN DOOR

NOTE: The oven door is heavy. You may need help lifting the door high enough to slide it into the hinge slots. Do not lift the door by the handle.

- A. Lift the oven door by placing one hand on each side. The door is heavy, so you may need help. Do not lift the door by the handle.
B. With the door at the same angle as the removal position (approximately 2,5 cm–5 cm [1"–2"] from the closed position), seat the notch of the hinge arm into the bottom edge of the hinge slot. The notch of the hinge arm must be fully seated into the bottom of the slot.
C. Fully open the door. If the door will not fully open, the indentation is not seated correctly in the bottom edge of the slot.
D. Push the hinge locks up against the front frame of the oven cavity, to the locked position. Hinge in locked position, Notch of hinge securely fitted into bottom of hinge slot.
E. Close the oven door. Bottom edge of slot, Hinge arm, Hinge notch

REPLACE THE STORAGE DRAWER

- A. Place the drawer rail on the guides. Push the drawer in until it stops.
B. Lift front of the drawer and push in until the stops clear the guides.
C. Lower the front of the drawer and push in until it closes.

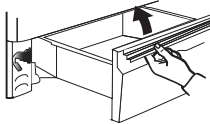

7 FINAL INSTALLATION CHECKLIST


- Check to make sure the circuit breaker is closed (RESET) or the circuit fuses are replaced.
- Be sure power is in service to the building.
- Check that all packing materials and tape have been removed. This will include tape on metal panel under control knobs (if applicable), adhesive tape, wire ties, cardboard and protective plastic. Failure to remove these materials could result in damage to the appliance once the appliance has been turned on and surfaces have heated.
- Check that the door and drawer are parallel to each other and that both operate smoothly. If they do not, see the Owner's Manual for proper replacement.
- Check to make sure that the rear leveling leg is fully inserted into the anti-tip bracket and that the bracket is securely installed.

OPERATION CHECKLIST

- Turn on one of the surface units to observe that the element glows within 60 seconds. Turn the unit off when glow is detected. If the glow is not detected within the time limit, recheck the range wiring connections. If change is required, retest again. If no change is required, have building wiring checked for proper connections and voltage.
- Check that the oven control operates properly. If the oven control does not operate properly, recheck the wiring connections.
- Be sure all range controls are in the OFF position before leaving the range.


8 MODEL AND SERIAL NUMBER LOCATIONS

The rating plate is located on the oven frame or on the side of the drawer frame.

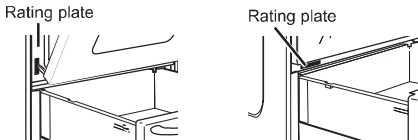

NOTE: Double Oven models, rating plate is located below front panel.

WT4 LOT 140 - WINE FRIDGE



FRIGIDAIRE
GALLERY

FGBC5334VS

BEVERAGE CENTER
165 (12 FL. OZ.) CANS



AVAILABLE
COLORS

S
Stainless

PRODUCT DIMENSIONS

Height	34-1/8" to 35"
Width	23-7/16"
Depth	23-1/4"
Depth with Door Opened 90°	45"

MORE EASY-TO-USE FEATURES

Built-In or Freestanding Installation
Conveniently place this beverage center in the optimal location for your home with our front venting cooling system that enables built-in or freestanding installation and leg levelers for customizing to your height needs.

Reversible Door Swing
Door can be installed to open left or right based on your needs.

SIGNATURE FEATURES

Precision Temperature Controls with LED Display Can Chill Beverages Down to 34°F (1°C)

Keep your drinks at the perfect temperature with LED temperature controls and display, which can be easily adjusted from 34°F to 50°F (1°C-10°C) with the touch of a button.

165 Twelve-Ounce Can Storage Capacity

Keep your favorite refreshments at just the right temperature without sacrificing refrigerator space with this 5.3 cubic foot built-in beverage center that has an easy fit capacity of 165 twelve-ounce cans and a maximum fit capacity of up to 195 twelve-ounce cans.

Sleekly Designed Stainless Steel Door with Tinted Glass Window and Adjustable Glass Shelving

Enjoy the sleek look of a contemporary handle, stainless steel door with tinted glass window, and adjustable end-to-end glass shelving with stainless steel trim on this elegant beverage center.

Door Alarm

Monitor the ideal environment for your drinks and avoid lukewarm beverages with our audible door alarm that alerts you if the door is mistakenly left open.

FGBC5334VS

BEVERAGE CENTER

165 (12 FL. OZ.) CANS

FRIGIDAIRE

GALLERY

FEATURES

Cubic Feet (Cu. Ft.)	5.3
Bottle/Can Capacity	165 (12 fl. oz.) cans

EXTERIOR

Door Color	Stainless Steel
Cabinet Color	Black
Window Type	Tinted Glass
Door Handle	Stainless Steel
Reversible Door	Yes
Adjustable Leveling Legs	4

INTERIOR


Control Type	Electronic
Display	F° or C°
Lighting	LED
Frost-Free Performance	Yes
Condenser	Dynamic
High-Temperature Acoustic Alarm	Yes
Power-On/Off Control	Yes
Temperature Zones	1
Temperature Range	34°F to 50°F
Adjustable Shelves	Yes
Stainless Steel Shelf Trim	Yes
Cabinet Liner	Black

SPECIFICATIONS

Power Supply Connection Location	Lower RH Rear Corner
Voltage Rating	115V/60Hz
Minimum Circuit Required (Amps)	15
Shipping Weight (Approx.)	119 Lbs.
Installation Type	Built-in or Freestanding

PRODUCT DIMENSIONS

A - Height	34-1/8" to 35"
B - Width	23-7/16"
C - Depth	23-1/4"
D - Depth with Door Open 90°	45"

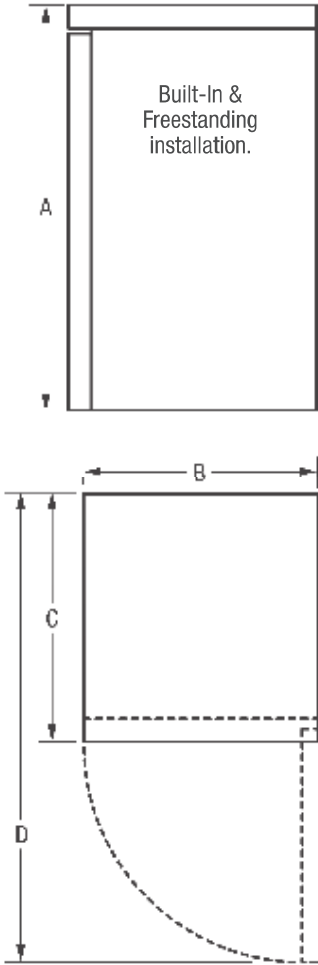

Note: For planning purposes only. Always consult local and national electric and plumbing codes. Refer to Product Installation Guide for detailed installation instructions on the web at frigidaire.com / frigidaire.ca. Specifications subject to change. Accessories information available on the web at frigidaire.com / frigidaire.ca