# JEZ-7R Jule 5 2018

### Mobile Home - Additional Installation Requirements


The installation of this range must conform to the Manufactured Home Construction and Safety Standard, Title 24 CFR, Part 3280 (formerly the Federal Standard for Mobile Home Construction and Safety, Title 24, HUD Part 280). When such standard is not applicable, use the Standard for Manufactured Home Installations, ANSI A225.1/NFPA 501A or with local codes. In Canada, the installation of this range must conform with the current standards CAN/CSA-A240-latest edition, or with local

### Mobile Home Installations Require:

When this range is installed in a mobile home, it must be secured to the floor during transit. Any method of securing the range is adequate as long as it conforms to the standards listed above.

### **Product Dimensions**

This manual covers several models. Your model may appear different from the models depicted. Dimensions given are maximum dimensions across all models.

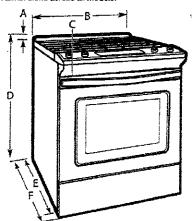

- A. 11/1s" (3.0 cm) height from cooktop to top of vent
  8. 2971s" (75.9 cm)
  C. Model/serial/rating plate (located behind the oven door on the top laft-hand side of the oven frame)
  D. 36" (91.4 cm) height to top of cooktop edge with leveling legs screwed in all the way\*

- E. 28<sup>16</sup>/ω\* (72.1 cm) max. depth from front of console to back of range F. 29<sup>1</sup>/ω\* (73.7 cm) max, depth from handle to back of range


IMPORTANT: Range must be level after installation. Follow the instructions in the "Level Range" section. Using the cookdop as a reference for leveling the range is not recommended. "Range can be raised approximately 1" (2.5 cm) by adjusting the leveling legs.

# Cabinet Dimensions

Cabinet opening dimensions shown are for 25" (64.0 cm) countertop depth, 24" (61.0 cm) base cabinet depth and 36" (91.4 cm) countertop height.

IMPORTANT: If installing a range hood or microwave hood combination above the range, follow the range hood or microwave hood combination installation instructions for dimensional clearances above the cooktop surface.

Range may be installed next to combustible wells with zero clearance.

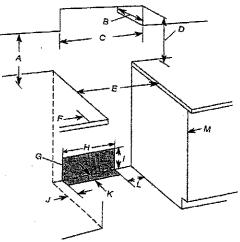

- A. 18" (45.7 cm) upper side cabinet to counterrop

  8. 13" (33 cm) max. upper cabinet depth

  C. 30" (76.2 cm) min. opening width

  D. For minimum clearance to top of cooktop, see NOTE

  E. 30" (76.2 cm) min. opening width

  F. 3" (7.6 cm) min. clearance from both sides of range to side wall or other combustible material

  G. The shaded area is recommended for installation of rigid gas pipe and grounded outlet.

  H. 13'\s" (33.3 cm)

  L. 7"\s" (19.5 cm)

  J. 4"\s" (2.4 cm)


  K. 3"\s" (9.4 cm)

  L. 12" (30.5 cm)

- b. 3"/18 (2.4 um)
   L. 12" (30.5 cm)
   M. Cabinet door or hinges should not extend into the cutout.

NOTE: 24" (61.0 cm) minimum when bottom of wood or metal cabinet is shielded by not less than 1/4" (0.64 cm) flame retards millboard covered with not less than No. 28 MSG sheet steel, 0.015" (0.4 mm) stainless steel, 0.024" (0.6 mm) aluminum or 0.020" (0.5 mm) copper.

30° (76.2 cm) minimum clearance between the top of the cooking platform and the bottom of an uncovered wood or metal cehiner.

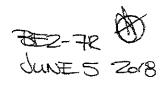



### PRODUCT MODEL NUMBERS

WRF655SDF

WRF555SDH

Electrical: A 115-volt, 80 Hz, AC-only 15- or 20-amp fused, grounded electrical supply is required, it is recommended that a separate circuit serving only your refrigerator and approved accessories be provided. Use an outlet that cannot be turned off by a switch. Do not use an extension cord.


Do not use an extension cord. Water. A cold water supply with water pressure between 35 and 120 pdf (241 and 827 kPa) is required to operate the water dispenser and ice maker. If you have questions about your water pressure, call a ficensed, qualified plumber.

MOTE: If the water pressure is less than what is required, the flow of water from the water dispenser could decrease or ice cubes could be hollow or irregular shaped.


Reverse Osmoeis Water Supply: IMPORTANT: The pressure of the water supply coming out of a reverse osmoeis system going to the water inter valve of the refrigerator needs to be between 35 and 120 psi (241 and 827 kPz).

It a reverse osmosis water filtration system is connected to your cold water supply, the water pressure to the reverse osmosis system needs to be a minimum of 40 to 60 psi (276 to 414 kPa).

# French Door w/Ice Dispenser Refrigerator

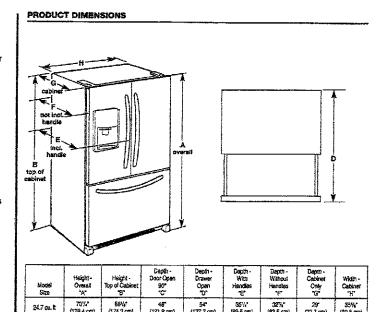


# LOCATION REQUIREMENTS

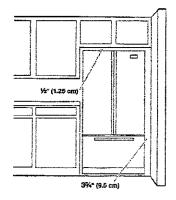

IMPORTANT: This refrigerator is designed for indoor, household use only. To ensure proper ventilitation for your refingerator, allow for a ½° (1.25 cm) of space on each side and at the top. Allow for a 1° (2.54 cm) space betiind the refrigerator. If your refrigerator has an ice maker, allow extra space at the back for the water line connections. When installing your refrigerator next to a fixed wall, leave a 3¾° (9.5 cm) minimum space between the refrigerator and wall to allow the door to swing open.


anow the door to swing open.

NOTE: This refrigerator is intended for use in a location where the temperature ranges from a minimum of 55°F (13°C) to a maximum of 110°F (43°C). The preferred room temperature range for optimum performance, which reduces electricity usage and provides superior cooling, is between 60°F (15°C) and 90°F (32°C). It is recommended that you do not install the refrigerator near a heat source, such as an oven or radiator.

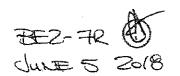

### Installation Dimensions

NOTE: The grounded 3 prong outlet must be inside the upper cabinet. See "Electrical Requirements" section.

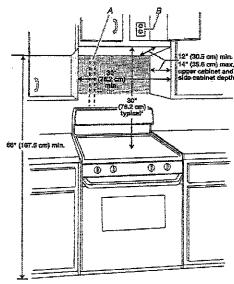

A. 2" x 4" well stud B. Grounded 3 prong outlet

"30" (76.2 cm) is typical for 66" (167.6 cm) installation height. Exact dimensions may vary depending on type of range/cooktop below.

# Product Dimensions (45.3 cm) 201/é" (76.0 cm)

\*Overall depth of product will vary slightly depending on door

# Electrical Requirements

# AWARNING



### Electrical Shock Hazard

Plug into a grounded 3 prong outlet.

Do not remove ground prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

Observe all governing codes and ordinances.

### Required:

A 120 volt, 60 Hz, AC only, 15- or 20-amp electrical supply with a fuse or circuit breaker.

#### Recommended:

- A time-delay fuse or time-delay circuit breaker.
- A separate circuit serving only this microwave oven.

# GROUNDING INSTRUCTIONS

For all cord connected appliances:

The microwave oven must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. The microwave oven is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

WARNING: Improper use of the grounding plug can result in a risk of electric shock. Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if doubt exists as to whether the microwave oven is properly grounded.

Do not use an extension cord. If the power supply cord is too short, have a qualified electrician or serviceman install an outlet near the microwave oven.

# SAVETHESE INSTRUCTIONS

